



## Replacement


### CAUTION

Put on gloves to protect your hands.

### NOTICE

- When prying with a flat-tip screwdriver or using a prying trim tool, wrap protective tape around the tool and related parts to prevent damage.
- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Be careful not to bend or scratch the trim and panels.


1. Remove the front door scuff trim (A) by using a remover.

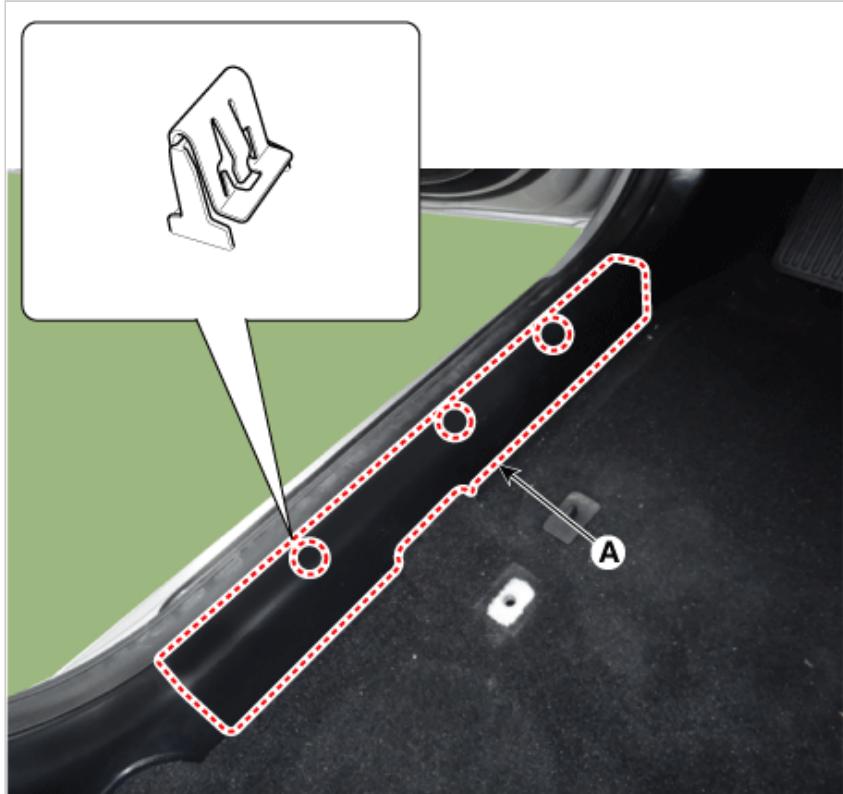

2. Remove the hood latch release handle (A).



3. Carefully remove the front door body side weather strip.
4. Remove the cowl side trim (A) by using a remover.

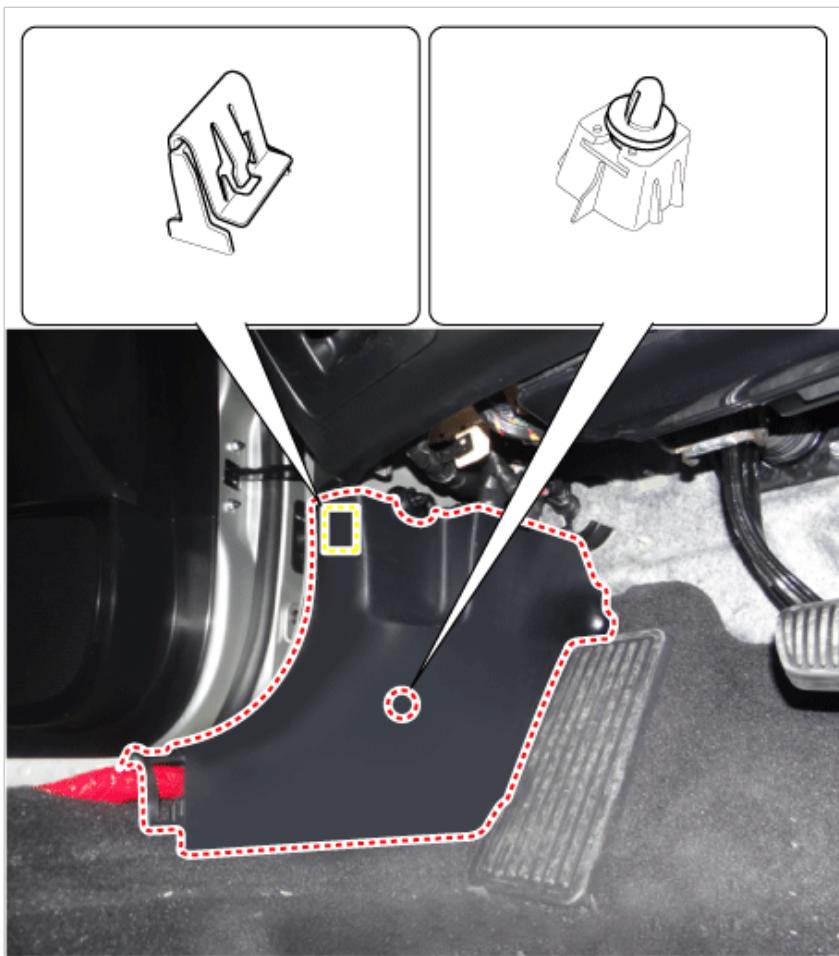

5. Install in the reverse order of removal.

**Information**

Replace any damage clips.