



## Replacement


### ⚠ CAUTION

Put on gloves to protect your hands.


### ℹ️ Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the outside rear view mirror mounting cap (A).

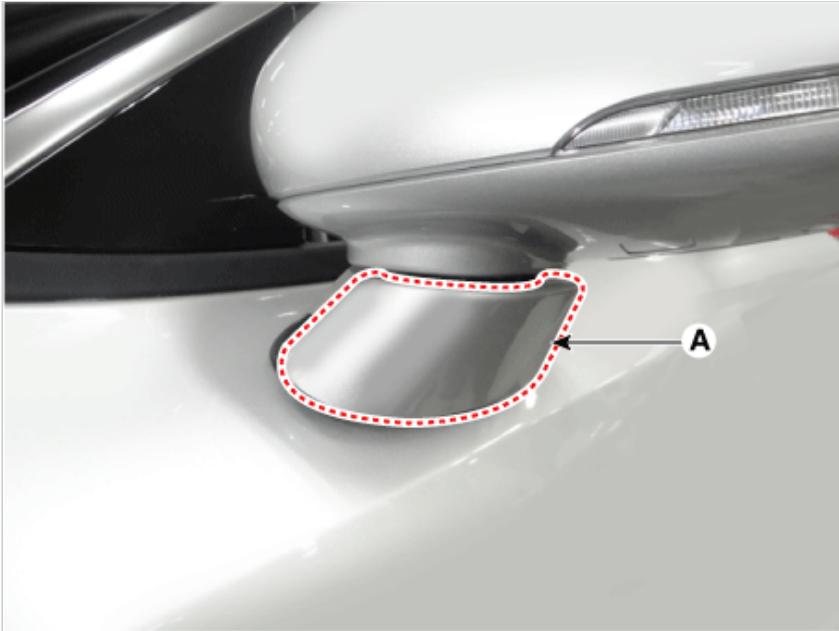

2. Separate the outside rear view mirror (A) after loosening the mounting screw.

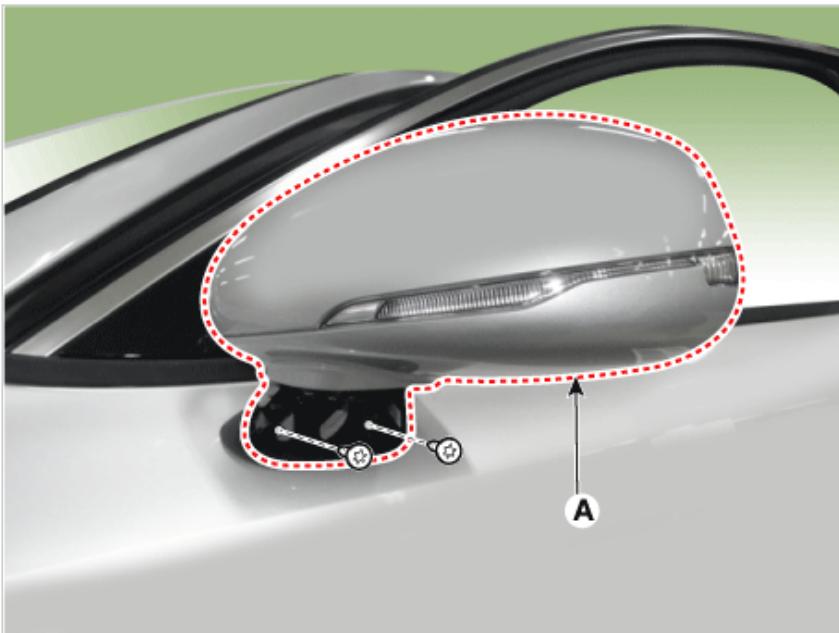

3. Remove the outside rear view mirror after disconnecting the connector (A).

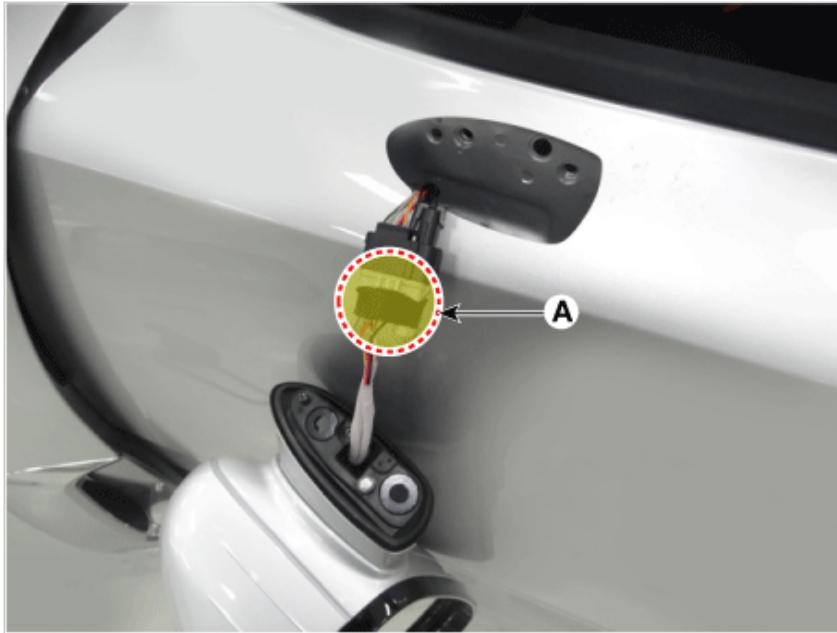

4. Install in the reverse order of removal.

**i Information**

- Make sure that the connector is connected properly.
- Replace any damage clips.