



## Replacement

### CAUTION

Put on gloves to protect your hands.


### Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the rear bumper cover.

**(Refer to Rear Bumper - "Rear Bumper Assembly")**

2. Disconnect the rear bumper beam mounting wiring harness.

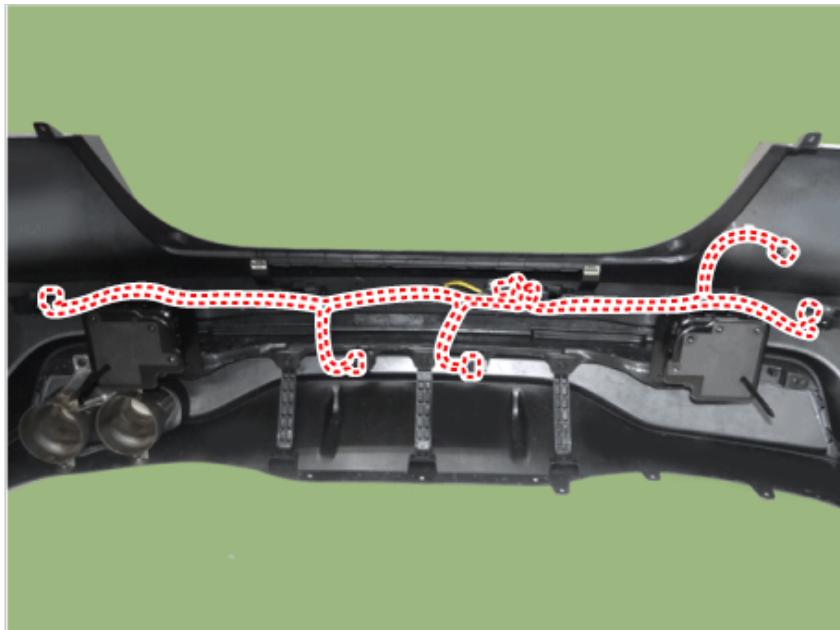

3. Remove the mounting clips (A), then remove the rear bumper beam assembly (B).

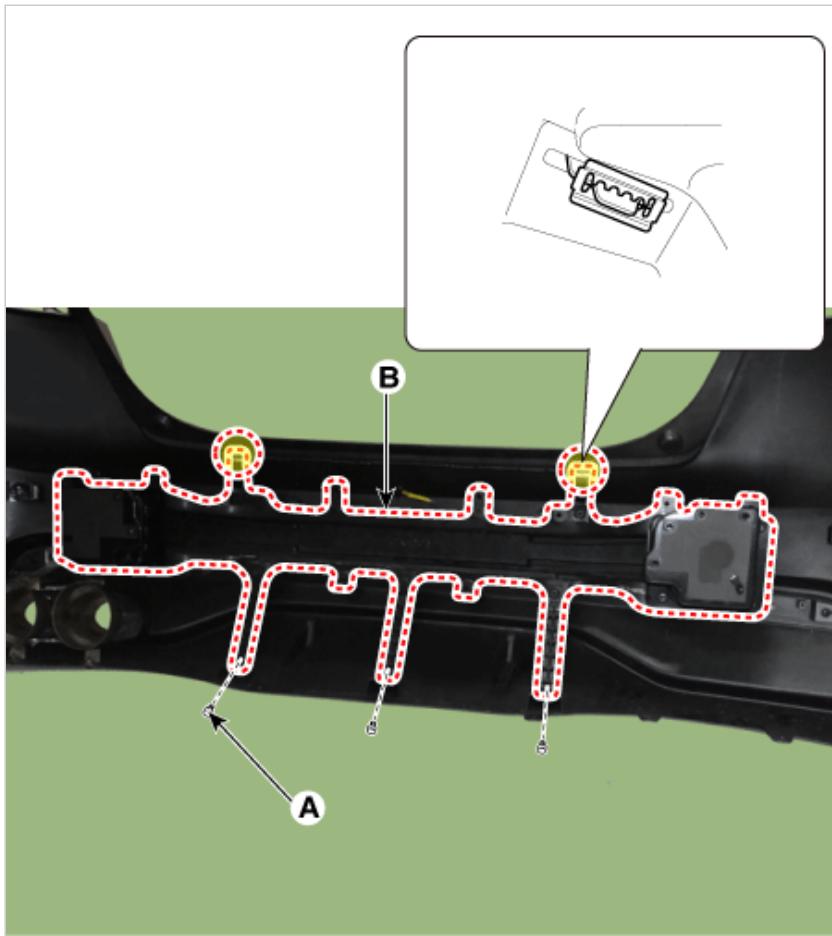

4. Install in the reverse order of removal.

**Information**

- Make sure that the connector is connected properly.
- Replace any damage clips.