



Replacement

CAUTION

Put on gloves to protect your hands.


Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the rear door window glass.

(Refer to Rear Door - "Rear Door Window Glass")


2. Remove the hole cap (B) and then remove the rear door outside handle cover (A) after loosening the mounting bolt.

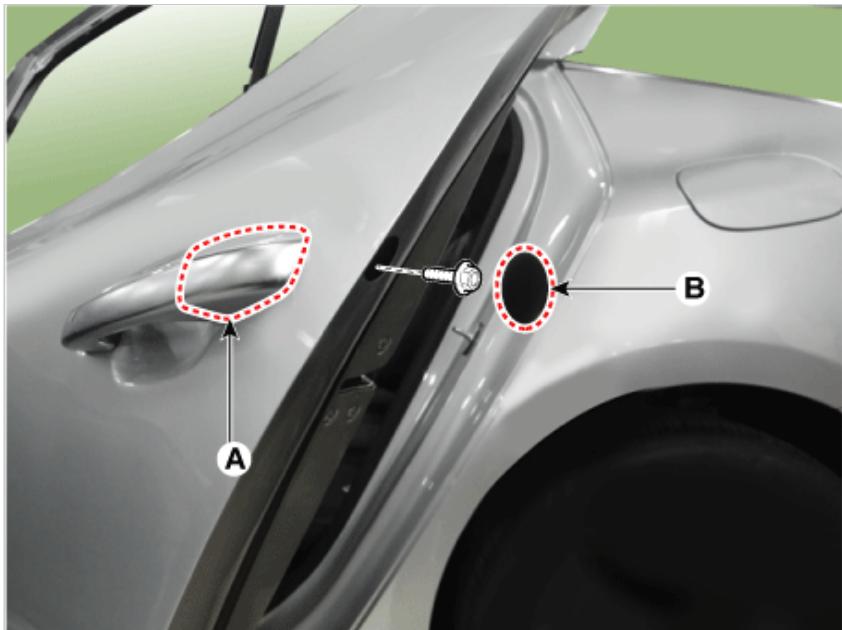


3. Remove the rear door outside handle (A) by sliding it rearward.

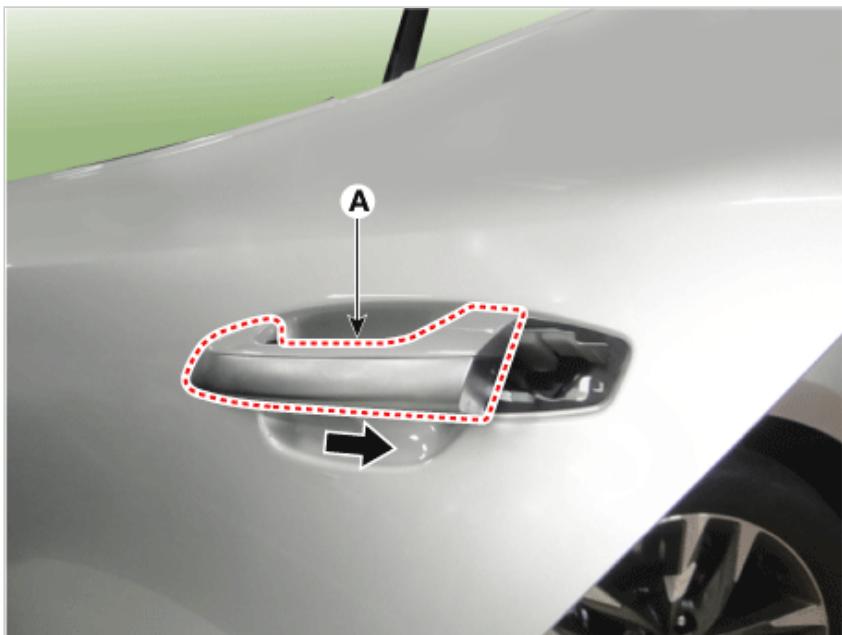

4. Remove the rear door outside handle pad (A).

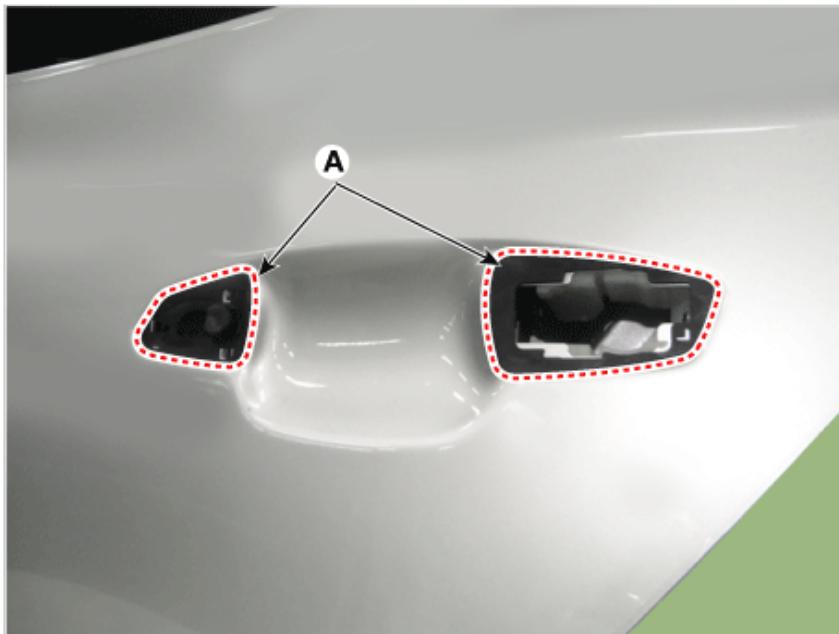

5. Loosen the rear door outside handle base mounting screw (A).

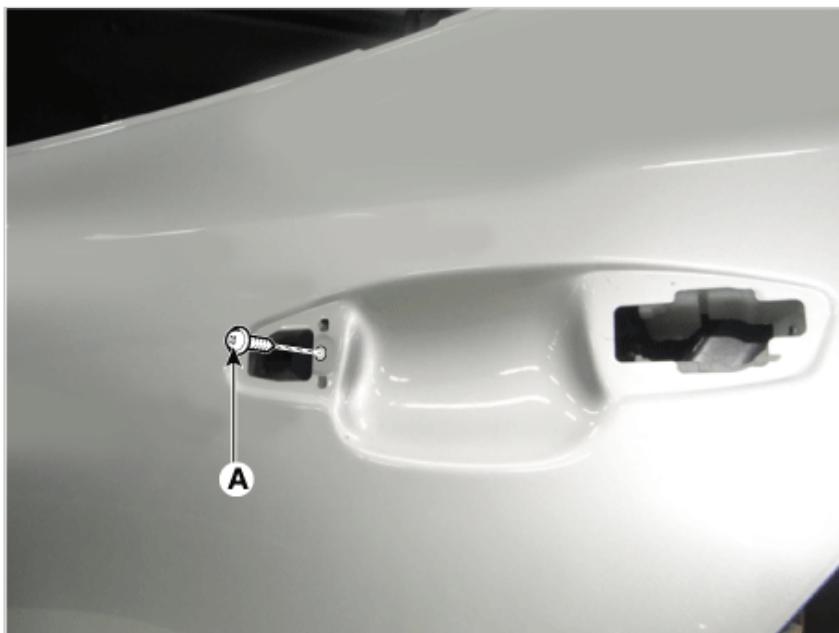


6. Disconnect the rear door main wiring connector (A).




7. Loosen the rear door latch mounting screw (A).




8. Remove the rear door module (A) after loosening the mounting bolts.

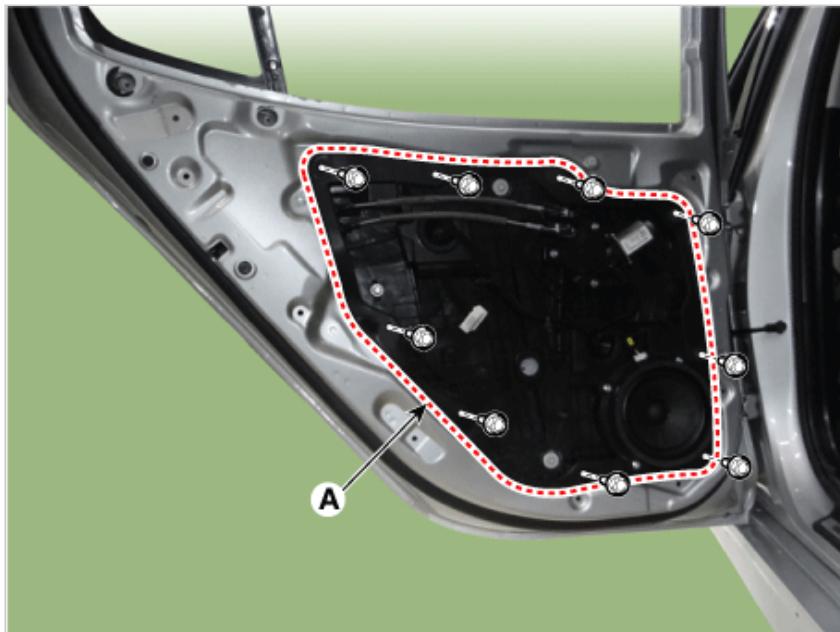

9. Remove the rear door channel (A) after loosening the mounting bolts.

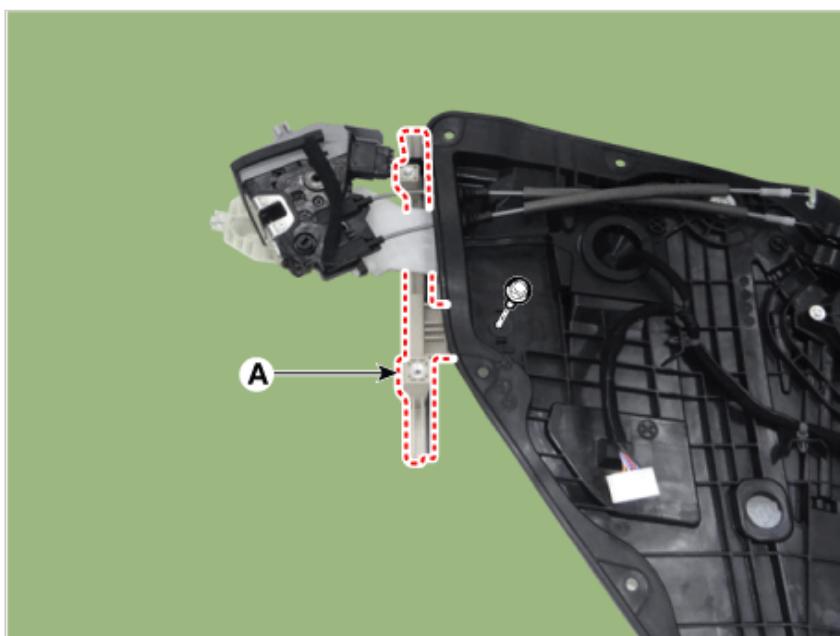

10. Remove the rear door latch (B) after disconnecting the latch connector (A).

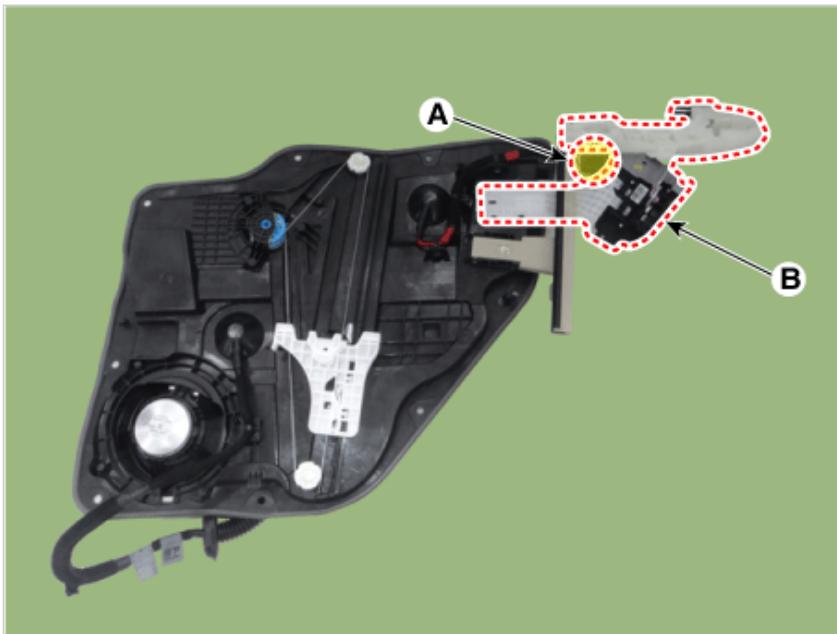

11. Remove the rear speaker.
(Refer to Body Electrical System - "Speakers")
12. Remove the rear power window motor.
(Refer to Body Electrical System - "Power Window Motor")
13. Remove the rear door wiring harness from the rear door module.
14. Install in the reverse order of removal.

 **Information**

- Roll the glass up and down to see if it moves freely without binding.
- Adjust glass position as needed.
- Make sure that the door locks and opens properly.
- Replace any damaged clips.