




## Replacement

1. Pull down rear door window glass by pressing the power window glass switch.
2. Remove the rear door belt outside weatherstrip (A).

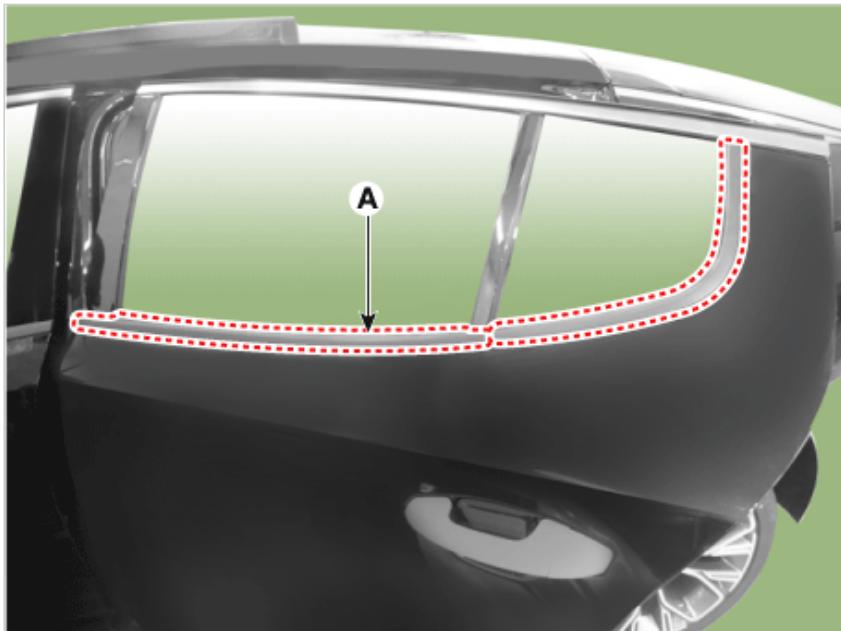

3. Install in the reverse order of removal.

### Information

Replace any damaged clips.