



## Replacement


### NOTICE

When installing the belt, be careful not to damage the retractor.

1. Remove the rear seat back cover [RH].  
(Refer to Rear Seat - "Rear Seat Back Cover")
2. Remove the rear center seat belt retractor (A) after loosening the mounting bolt.

### Tightening torque :

39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.8 - 39.8 lb·ft)

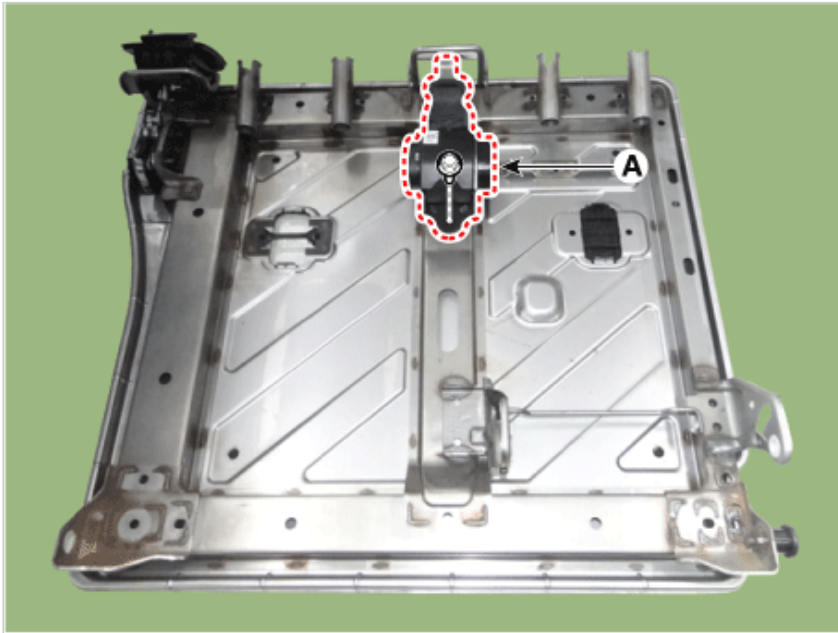

3. Install in the reverse order of removal.

### Information

Replace any damaged clips.