




Component Location

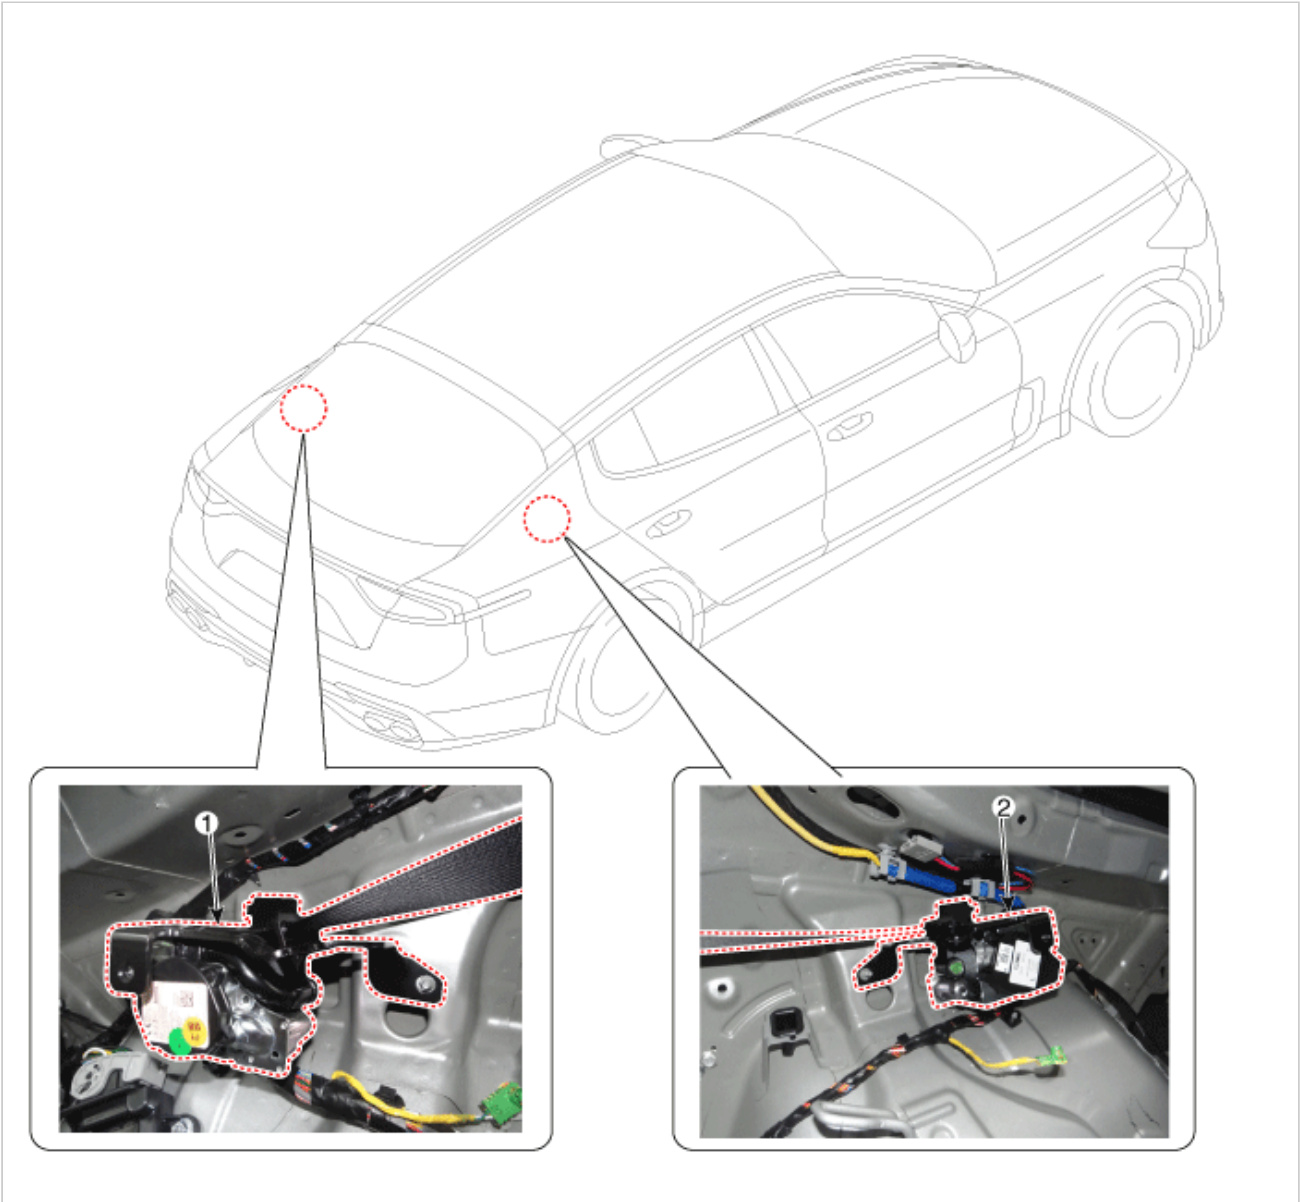

1. Rear seat belt retractor [LH]

2. Rear seat belt retractor [RH]