



Replacement

NOTICE

When installing the belt, be careful not to damage the retractor.

1. Remove the rear pillar trim.
(Refer to Interior Trim - "Rear Pillar Trim")
2. Disconnect the rear seat belt retractor connector (A).

[LH]



[RH]




3. Remove the rear seat belt retractor (A) after loosening the mounting bolts.


Tightening torque :

39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.8 - 39.8 lb·ft)

[LH]

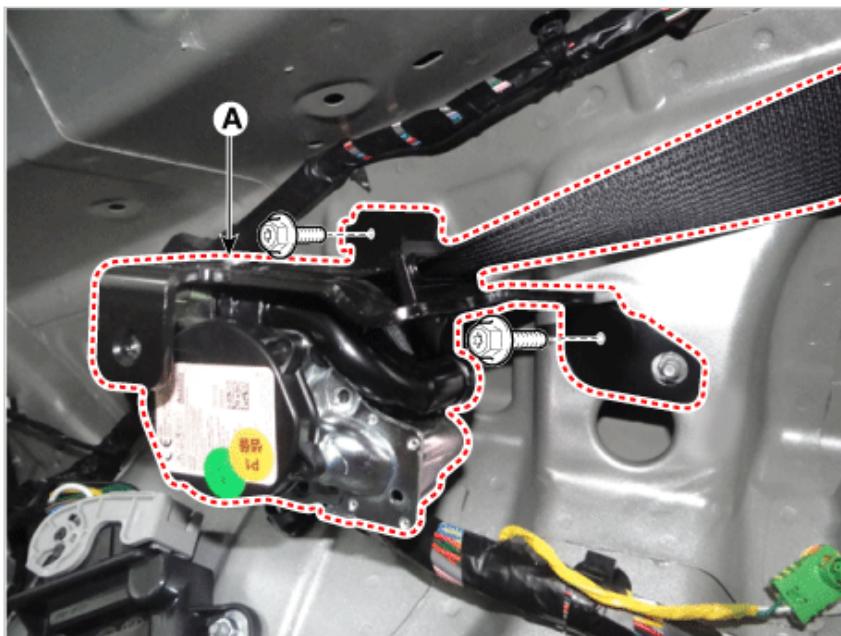

[RH]

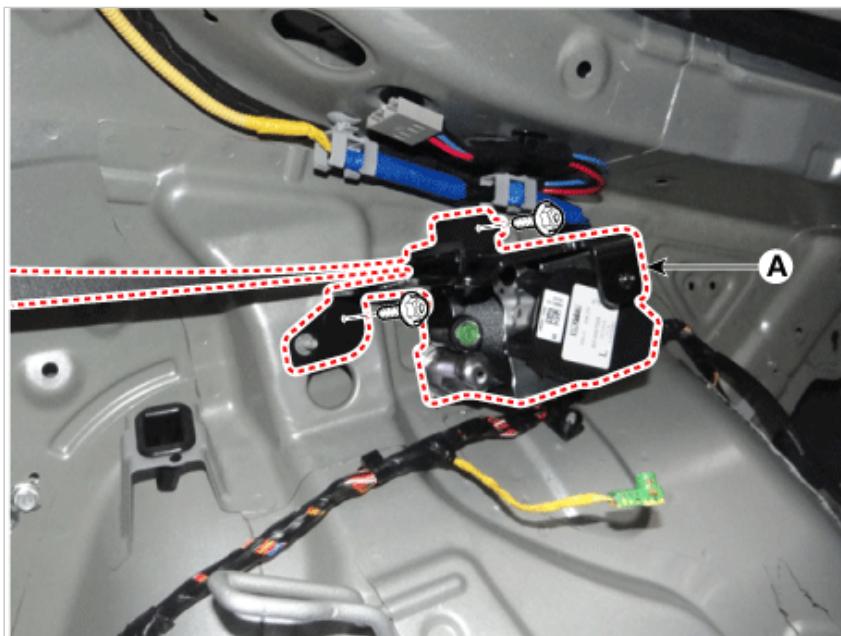

4. Install in the reverse order of removal.

Information

- Replace any damaged clips.
- Make sure that the connector is connected properly.