



Replacement

CAUTION

Put on gloves to protect your hands.


Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Separate the sunvisor cap (A) by using a remover.



2. Separate the sunvisor (A) after loosening the mounting screw.

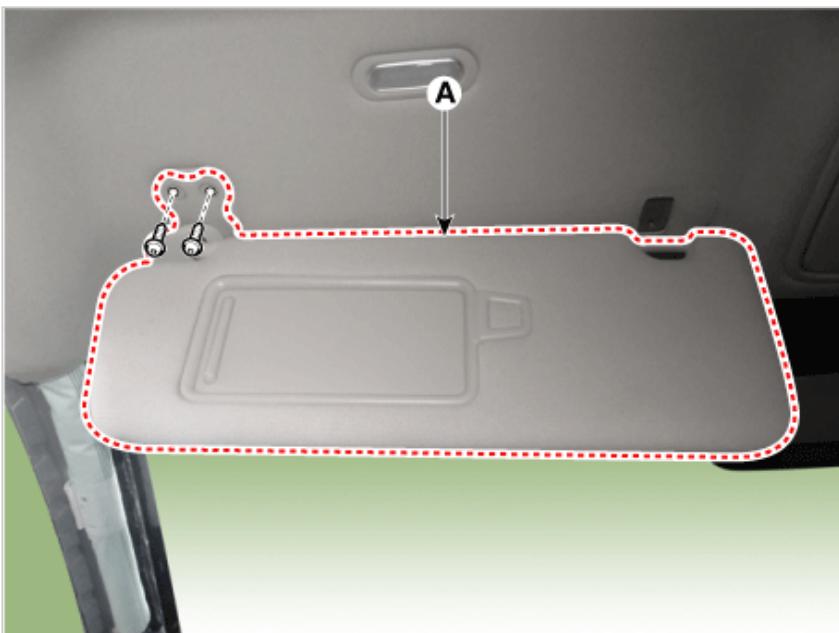

3. Remove the sunvisor after disconnect the connector (A).

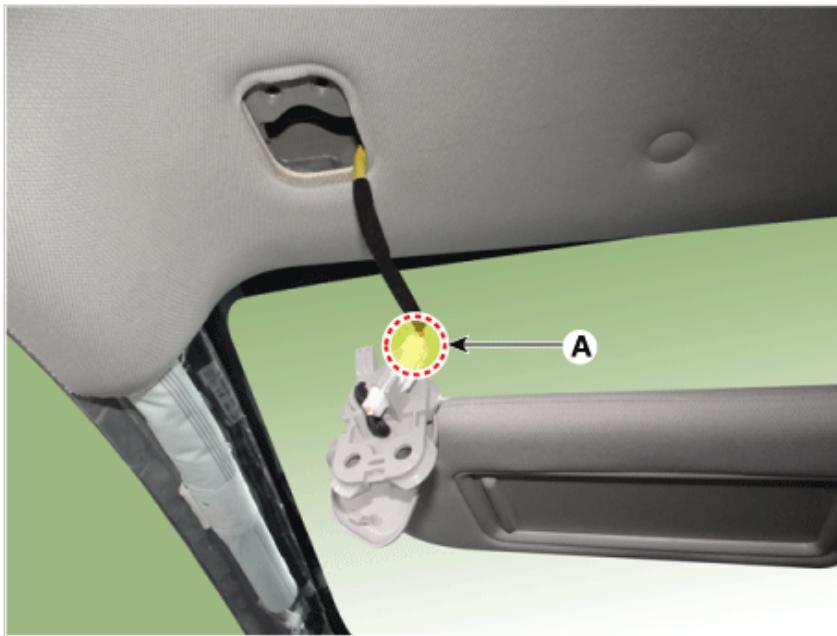

4. Install in the reverse order of removal.

Information

Replace any damaged clips.