



## Adjustment

### Inspect Glass Alignment

1. Inspect the alignment of the moving glass (C) between the front glass (A) and roof panel (B) and adjust it if needed.


#### Alignment adjustment

##### Standard value [mm(in.)]


- (1) Front edge : 0 mm (0 in.)
- (2) Rear edge : 0 mm (0 in.)

Click to see large image...

2. Tilt the moving glass by using the wide sunroof switch.

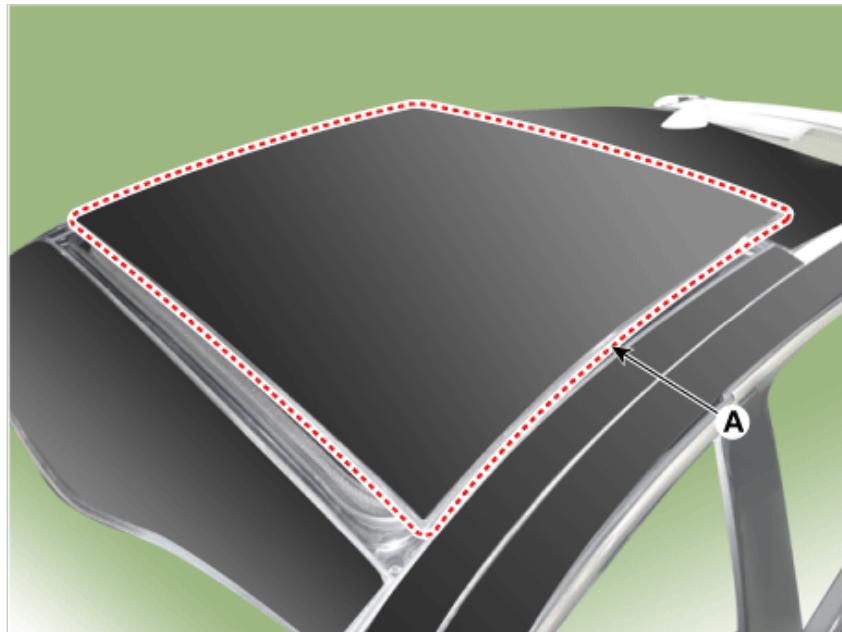

3. Remove the both sides mechanism cover (A).

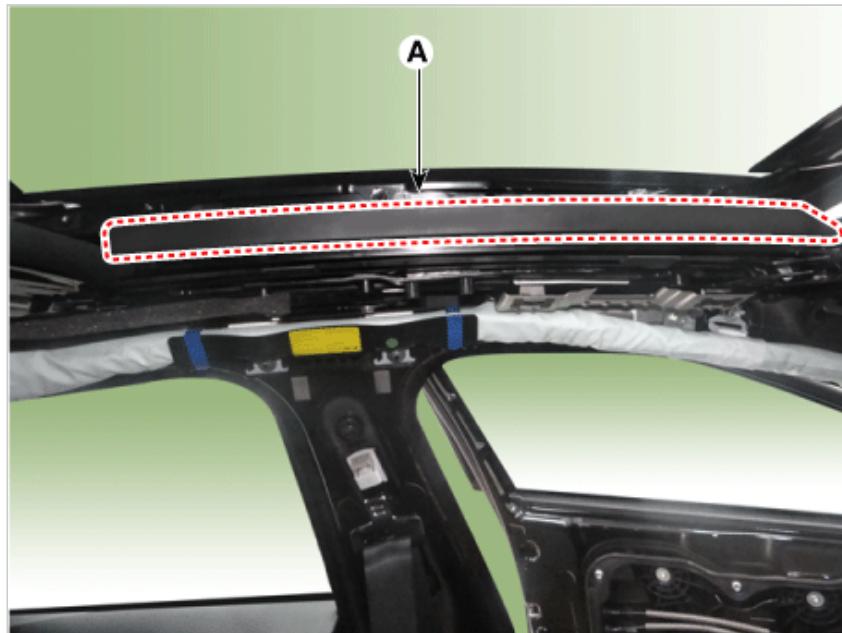

4. Adjust the height of the glass by slightly loosening the screws (A).

#### NOTICE

Be careful not to damage the screws.



5. Completely close the moving glass using the wide sunroof switch.
6. Install the mounting screws (A) after adjust the height of the glass.

## Emergency operation

1. Use the wide sunroof emergency operation only when the sunroof needs to be opened or closed in case of engine failure.
2. Use a hexagon wrench to open or close the wide sunroof after removing the roof trim. Do not apply too much force when opening or closing the wide sunroof.

**[moving glass motor ]**



[roller blind motor]



3. If needed, reset the wide sunroof according to the reset method.

(Refer to Body Electrical System - "Wide Sunroof Motor")