



Replacement


Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the tailgate trim.
(Refer to tailgate - "tailgate Trim")
2. Disconnect the rear combination lamp connector [inside] (A).



3. Remove the rear combination lamp [inside] (A) after loosening the mounting nuts.

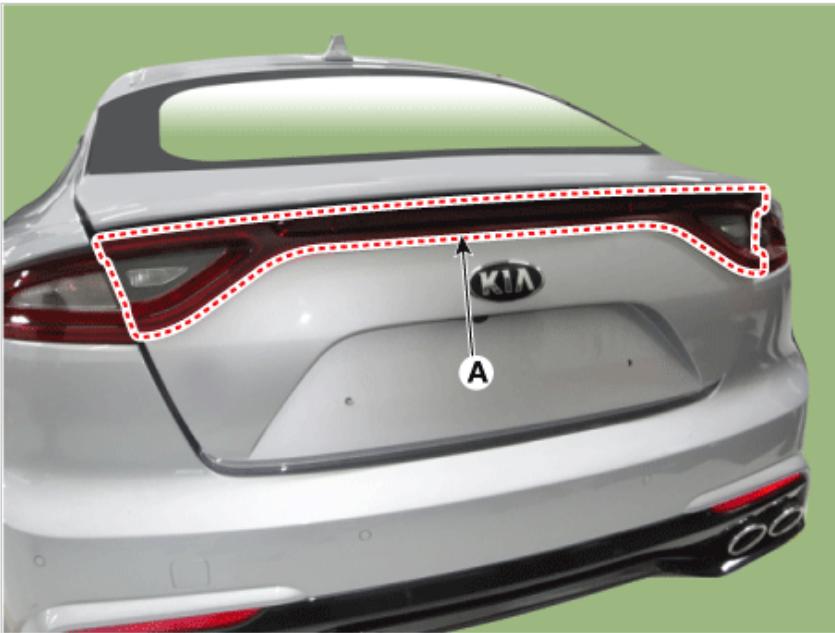

4. Remove the tailgate back panel (A) by using a remover.

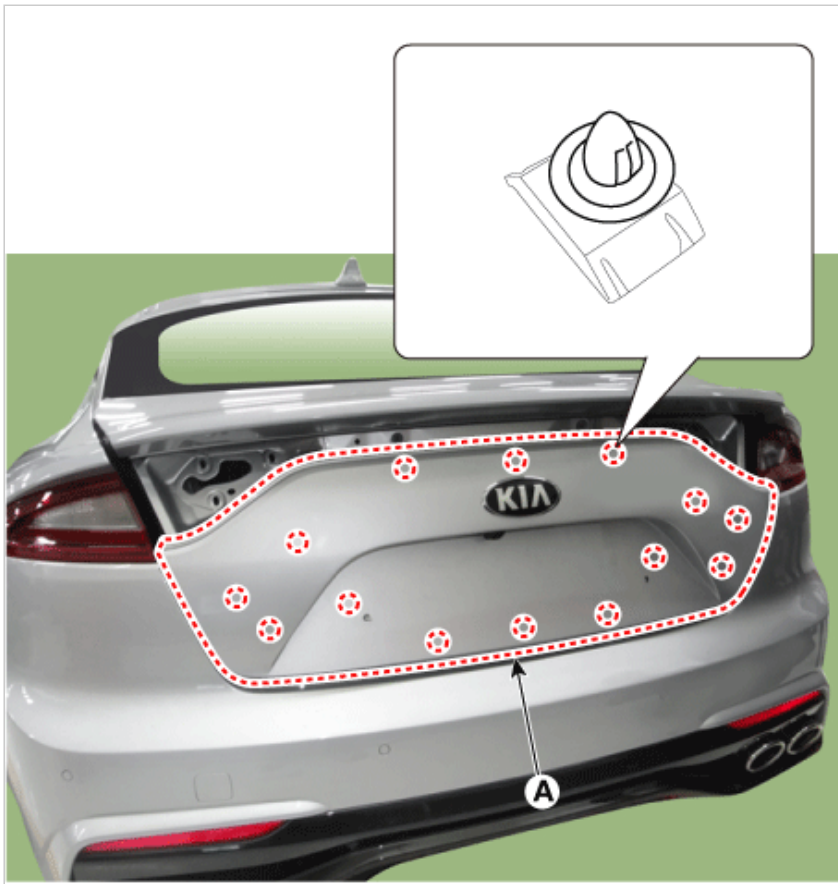

5. Install in the reverse order of removal.

i Information

- Make sure that the connector is connected properly.
- Replace any damage clips.