




Replacement

CAUTION

Do not apply sealant to the body.

1. Using a screwdriver, remove the tailgate lifter (B) after removing the socket clips (A).

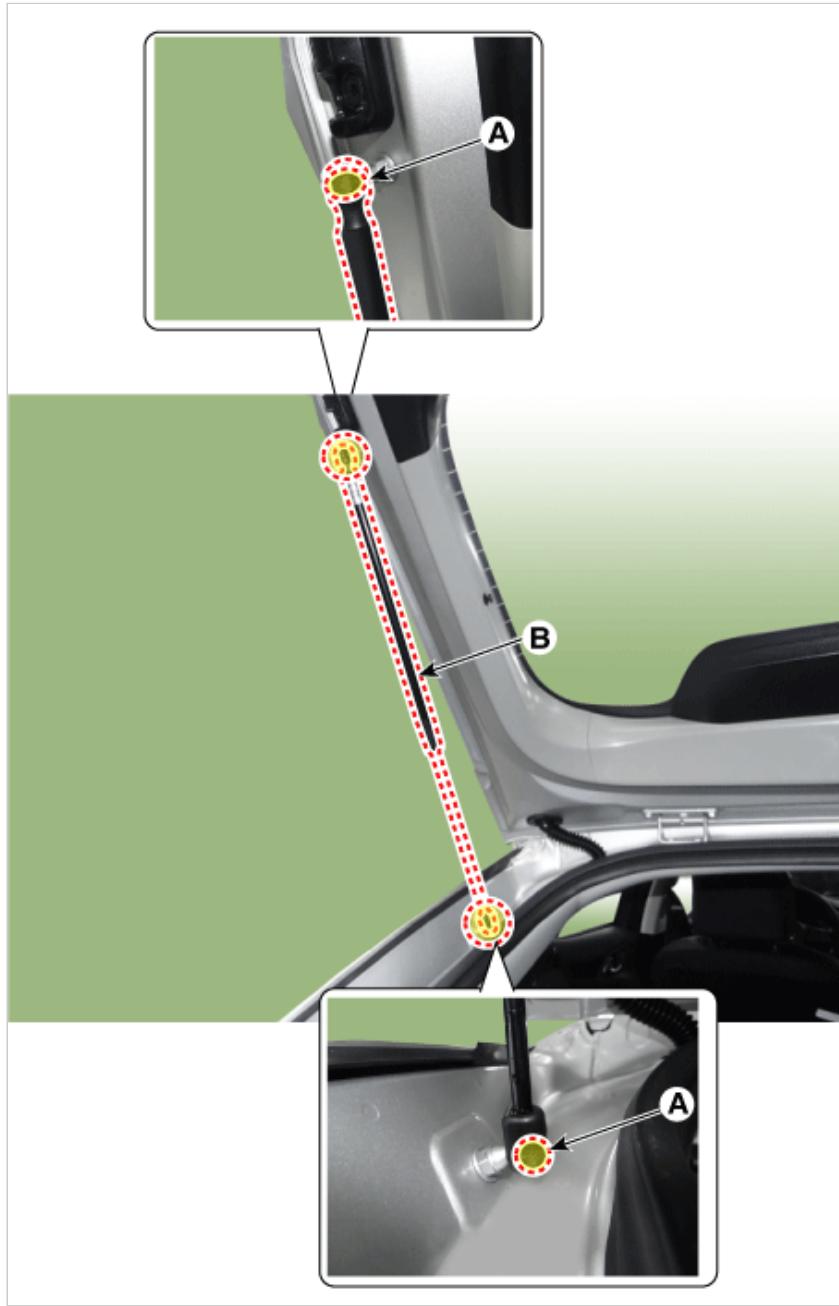

2. Push the socket of the lifter into the bracket for installation.

Information

Make sure the tailgate locks and opens properly and locks securely.