



Inspection

Check it by the procedure below to see if the function of the ECM is normal.

1. Turn the ignition key to the "ON" position.
2. Cover the forward facing sensor.
3. Head a light to the rearward-facing sensor.
4. The ECM shall dim as soon as the rearward-facing sensor detects a certain level of brightness.

NOTICE


If this test is performed in daytime, the ECM may be darkened as soon as the forward facing sensor is covered.

5. In the reverse gear, the ECM shall not dim.

When directing light to both the forward-facing and rearward-facing sensors, the ECM shall not dim.

Removal

1. Remove the mirror wiring cover (A).

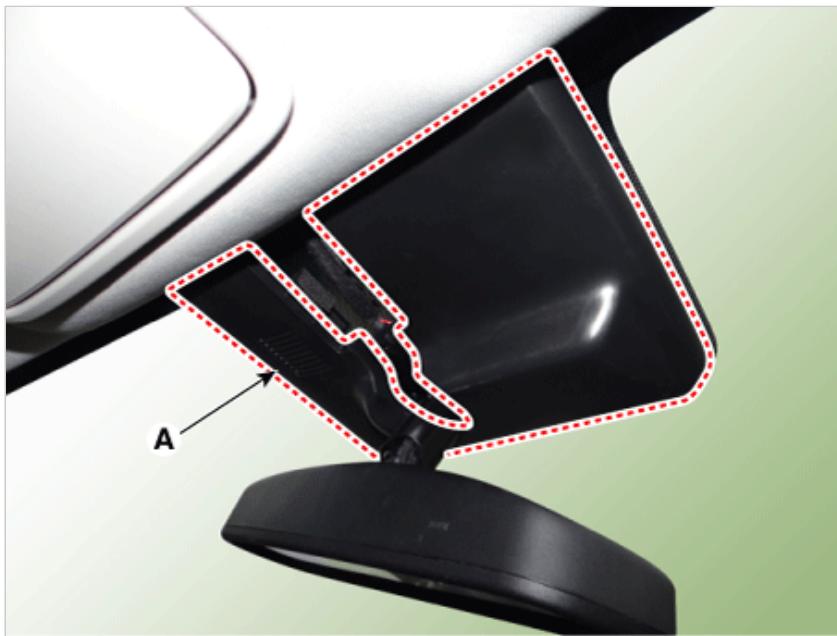


2. Disconnect the inside rearview mirror connector (A).



3. Remove the inside rearview mirror (A) by pulling it up in the direction of the arrow.

NOTICE

Be careful not to damage the mounting bracket (B) when removing the mirror.

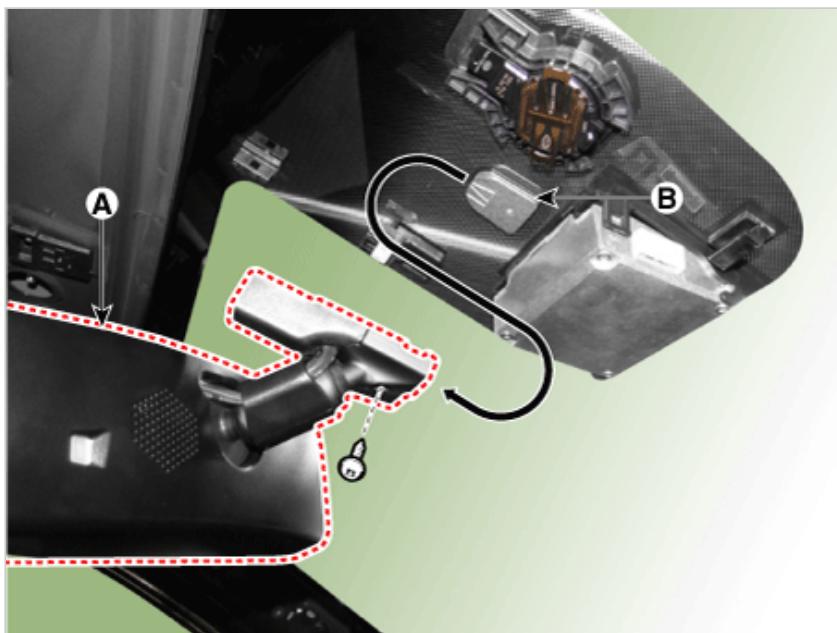

Installation

1. Install the mirror being careful not to damage the mounting bracket.
2. Install the mirror wiring cover after reconnecting the connector and tightening the screw.