



Troubleshooting

Error Item	Failure symptom	Inspection items	Detailed inspections	Relevant Parts/Components
Screen display	LCD screen does not turn on	1) Connector attachments 2) Components	1) Check the connector attachments 2) Check B+, IGN and GND wiring 3) Check the components	Connectors, wiring, fuses, dashboard
Warning light	Airbag warning lamp malfunction	1) Connector attachments 2) C-CAN 3) Components	1) Check airbag + signal (connectors) 2) Check C-CAN (ACU4) signal 3) Check the FPC attachment inside the dashboard	ACU Connectors, wiring, fuses, dashboard
Mode conversion	Integrated driving mode malfunction	1) Connector attachments 2) Switch 3) Components	1) Check the switch input (connector) 2) Check the switch signal input (disconnection or shorting) 3) Check conversion with dashboard component	Switch connector, wiring dashboard
Illumination	Interior light brightness cannot be controlled.	1) Connector attachments 2) Switch 3) Components	1) Check if the light switch's input signal reaches the connector 2) Check ILL- and DETENT signals 3) Check the TAIL+ signal input	Switch connector, wiring dashboard
Warning Sound	No dashboard alarm	1) Connector attachments 2) Car speakers 3) Components	1) Check the speaker output connector 2) Check the car speakers	Speaker connectors, wiring dashboard
Fuel indicator	Faulty fuel gauge indication	1) Connector attachments 2) Fuel sender 3) Components	1) Check fuel input and GND connectors (open, short or input resistance values) 2) Check fuel sender	Fuel sender connector, wiring dashboard