





## Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the driver front door trim.  
(Refer to Body - "Front Door Trim")
3. Disconnect the integrated memory seat switch connector (A).

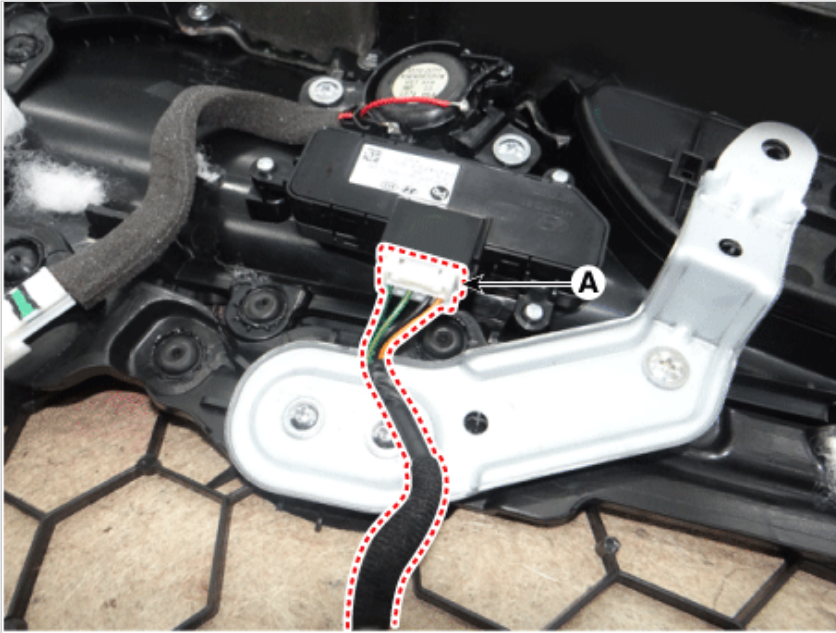

4. Remove the integrated memory seat switch (A) after loosening the mounting screws.

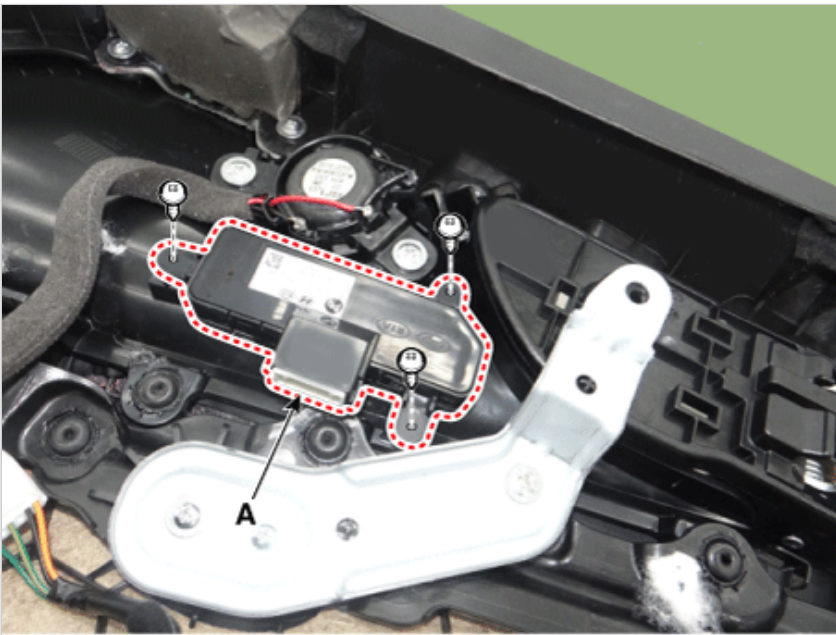


## Installation

1. Install the integrated memory seat switch.
2. Connect the integrated memory seat switch connector.
3. Install the driver front door trim.
4. Connect the negative (-) battery terminal.

## Inspection

1. Remove the integrated memory seat switch connector.

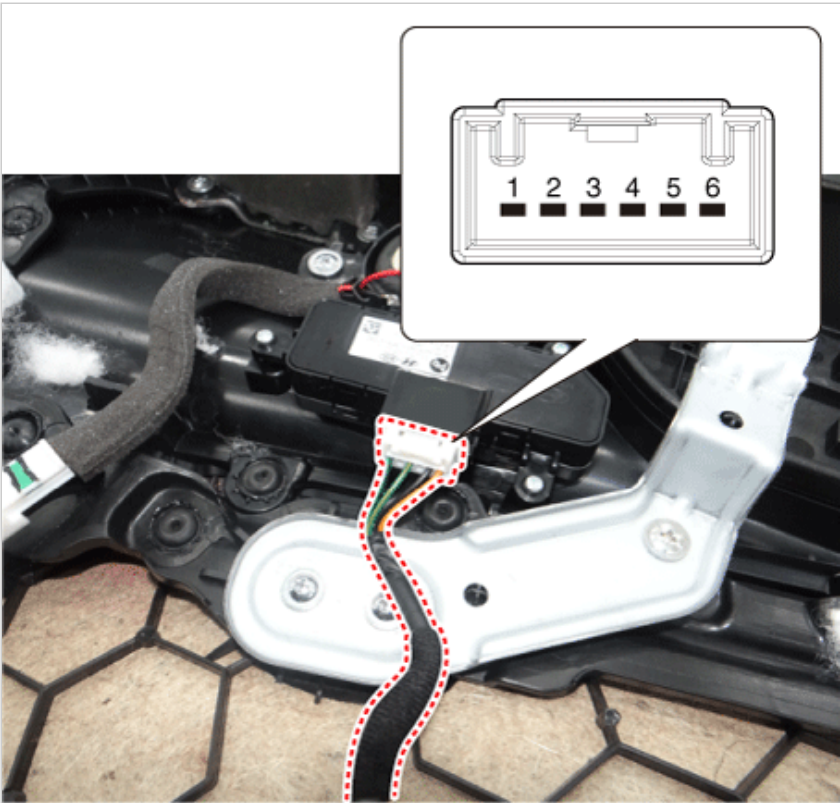

2. When each switch is pressed, check the electricity flow between intergrated memory seat switch connector and grounding, and if the electricity does not match the specification, replace the switch.

| Switch   | Connector Terminal | Resistance |
|----------|--------------------|------------|
| SET      | 3-5                | 680Ω       |
| Memory 1 |                    | 1.5 kΩ     |
| Memory 2 |                    | 3.3 kΩ     |