


Components

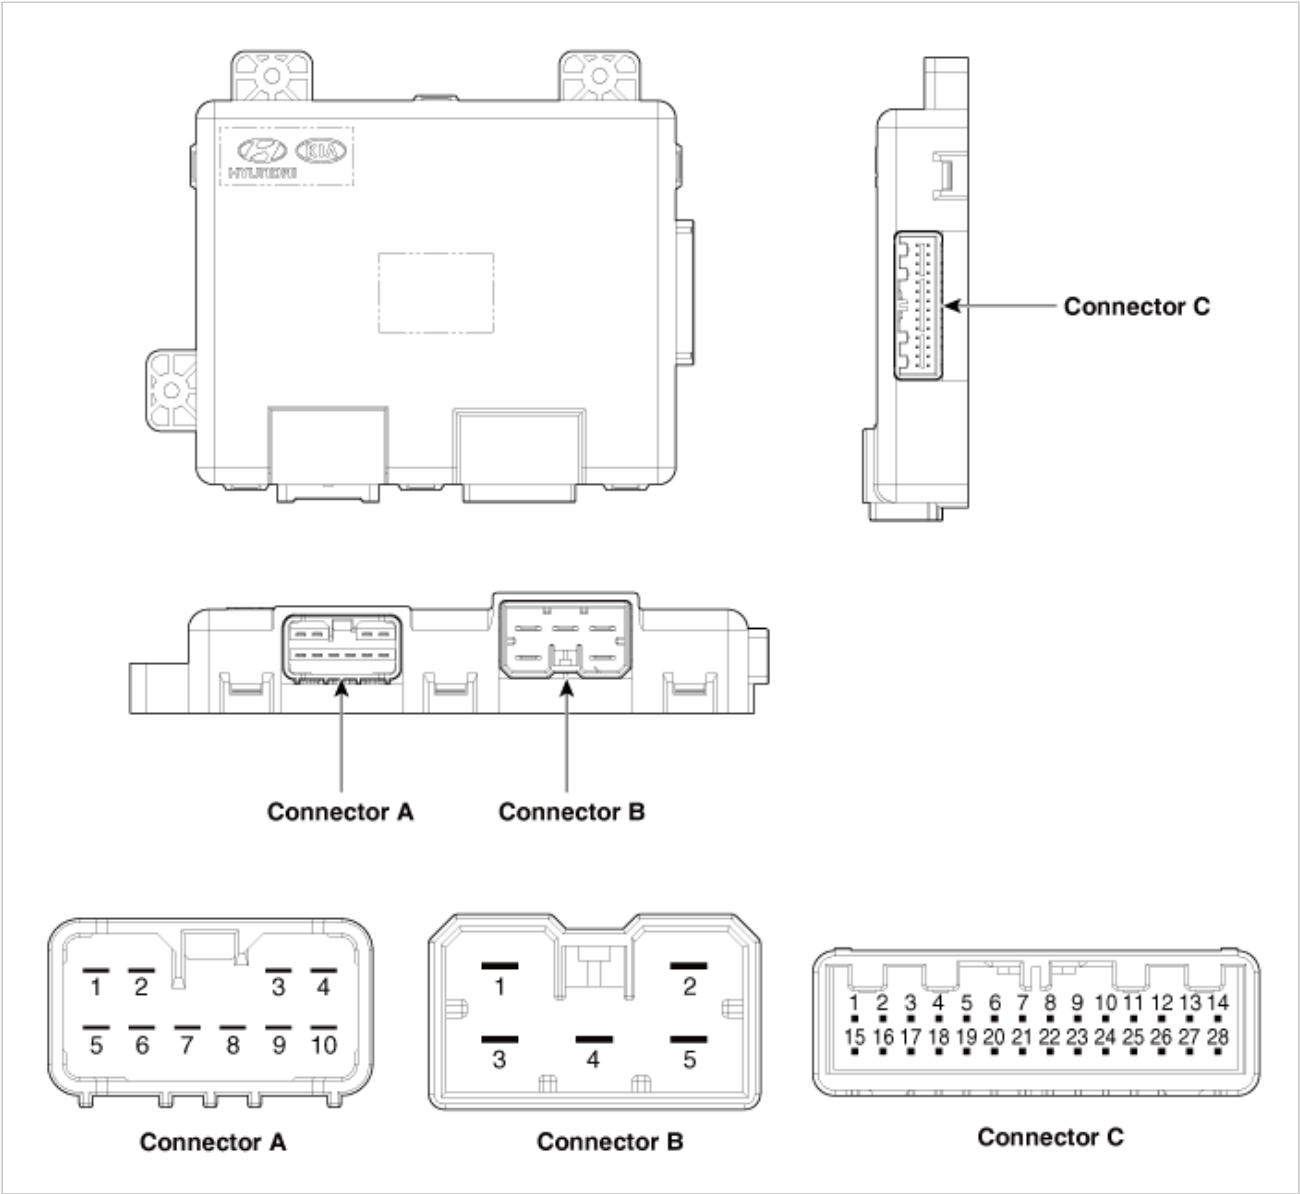

Connector Pin Information

No	Connector A	Connector B	Connector C
1	Cushion extension motor (Front)	Battery (+)	Slide switch (Front)
2	Recline motor (Front)	Ground	Recline switch (Front)
3	Rear height motor (Up)	Battery (+)	Frount tilt switch (Up)
4	Slide motor (Front)	-	Rear height switch (Up)
5	Cushion extension motor (Rear)	Ground	Cushion extension switch (Front)
6	Recline motor (Rear)		B-CAN (High)
7	Front tilt motor (Up)		B-CAN (Low)
8	Front tilt motor (Down)		-
9	Rear height motor (Down)		-
10	Slide motor (Rear)		Slide hall sensor
11			Front tilt hall sensor
12			-
13			Seat position sensor power

14		IGN1
15		Slide switch (Rear)
16		Recline switch (Rear)
17		Front tilt switch (Down)
18		Rear height switch (Down)
19		Cushion extension switch (Rear)
20		Ground
21		-
22		-
23		-
24		Recline hall sensor
25		Rear height hall sensor
26		Cushion extension hall sensor
27		-
28		Battery (+)