




Removal

Information

When replacing the LKA switch, check that the symbol mark in the cluster operates normally by pressing the ON/OFF switch.



1. Disconnect the negative (-) battery terminal.
2. Using a screwdriver or remover, remove the mirror wiring cover (A).

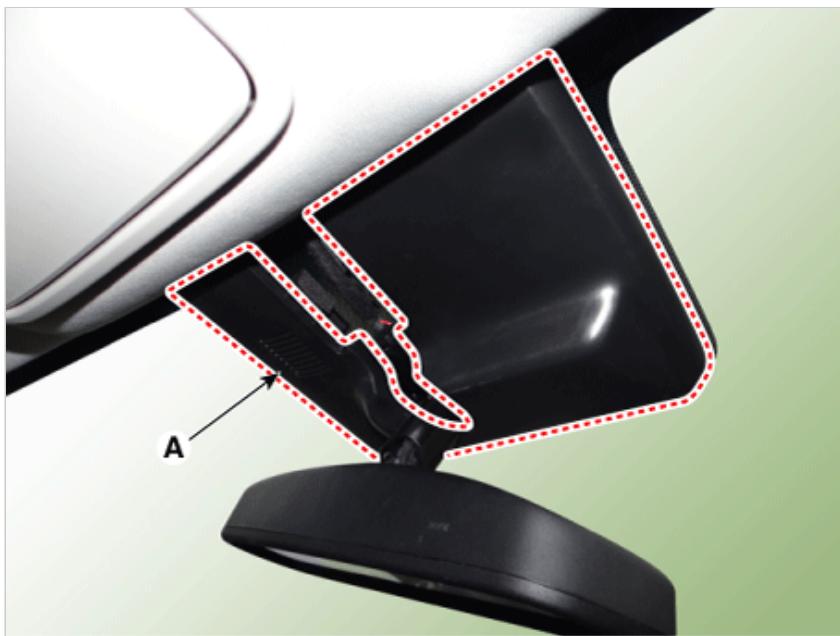


3. Disconnect the LKA unit connector (A).




4. Remove the LKA unit (B) by pulling out lock pins (A).


NOTICE

When separate the fixed points, be careful not to damage it.

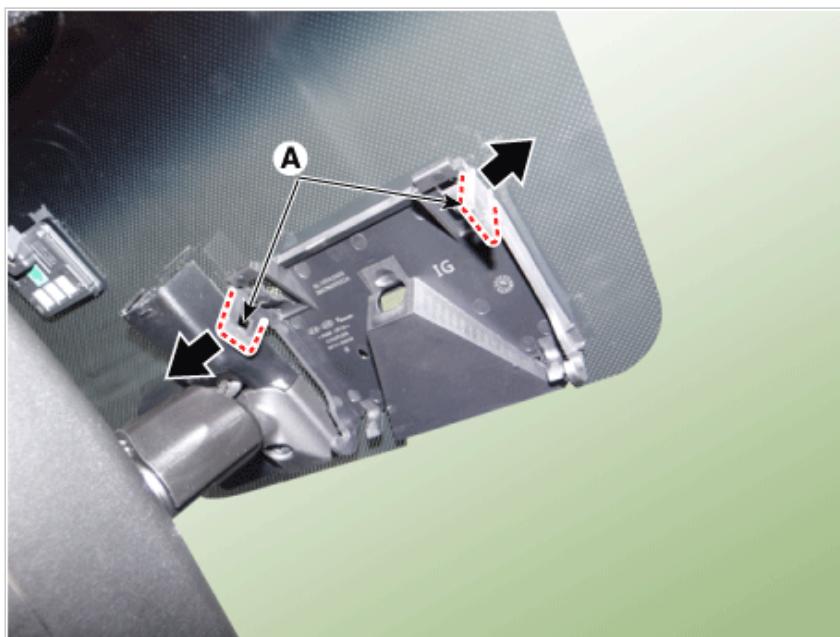

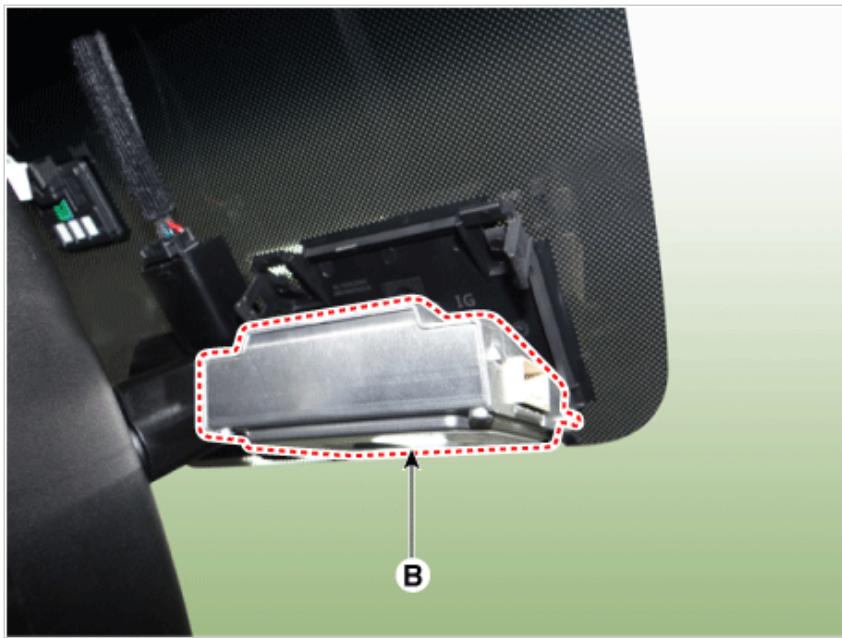**NOTICE**

When pulling out the mounting bracket, be careful not to damage it.

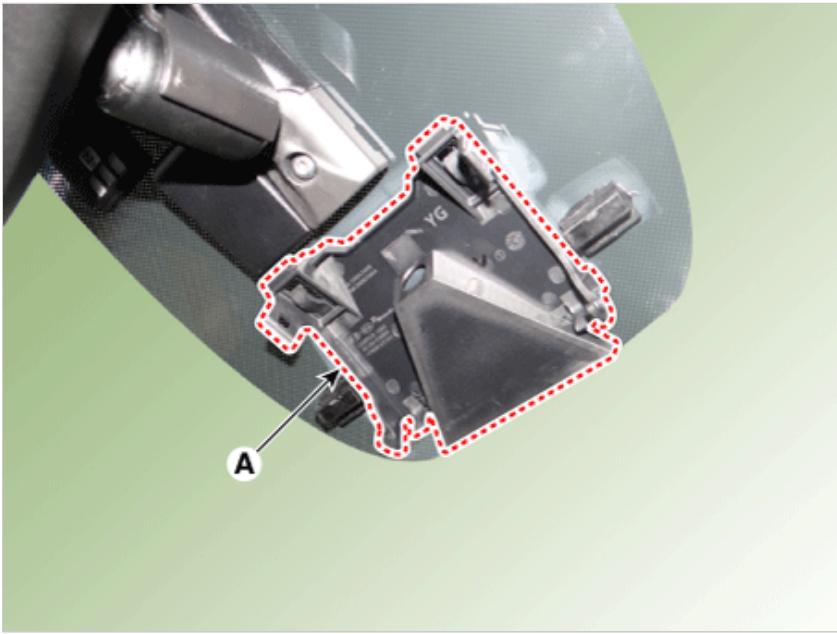


Installation

When you need calibration

- Replace LKA with a new one
- LKA is removed and mounted
- Windshield glass changed
- LKA coupler of the windshield glass is deformed

1. Align the reference point at alignment point(A) and align LKA .

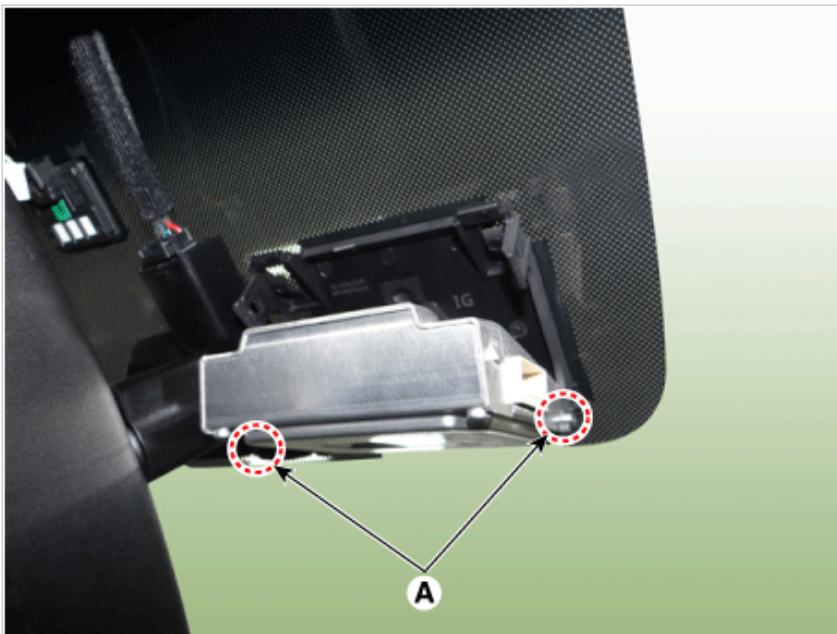

2. Apply force to lock position (B) to complete mounting.

**NOTICE**

Fully assemble so that you can hear a "clicking" sound when assembling.

3. Connect the LKA unit connector.
4. Install the mirror wiring cover.
5. Connect the negative(-) battery terminal.