





Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the liftgate upper trim.
(Refer to Body - "Liftgate Trim")
3. Disconnect the high mounted stop lamp connector (A).

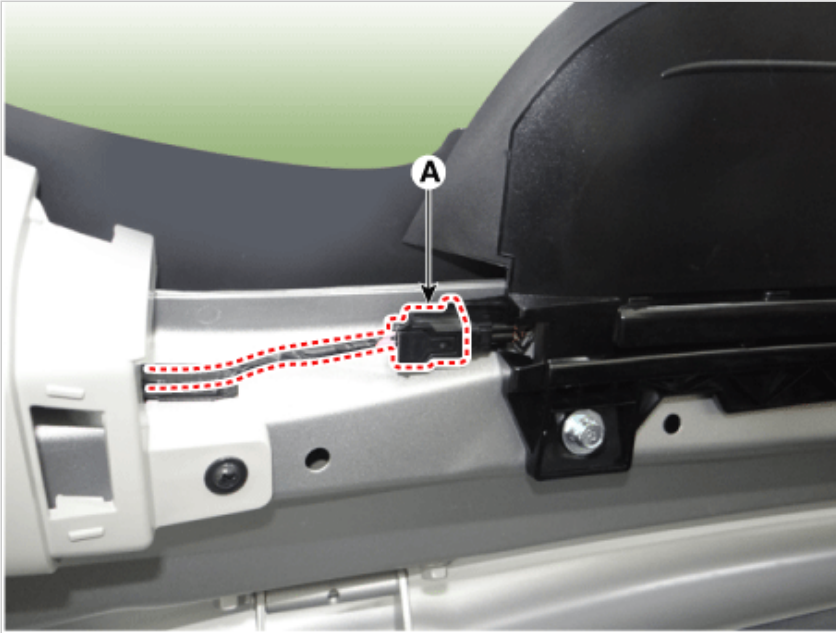

4. Remove the high mounted stop lamp (A) after loosening the mounting bolts.

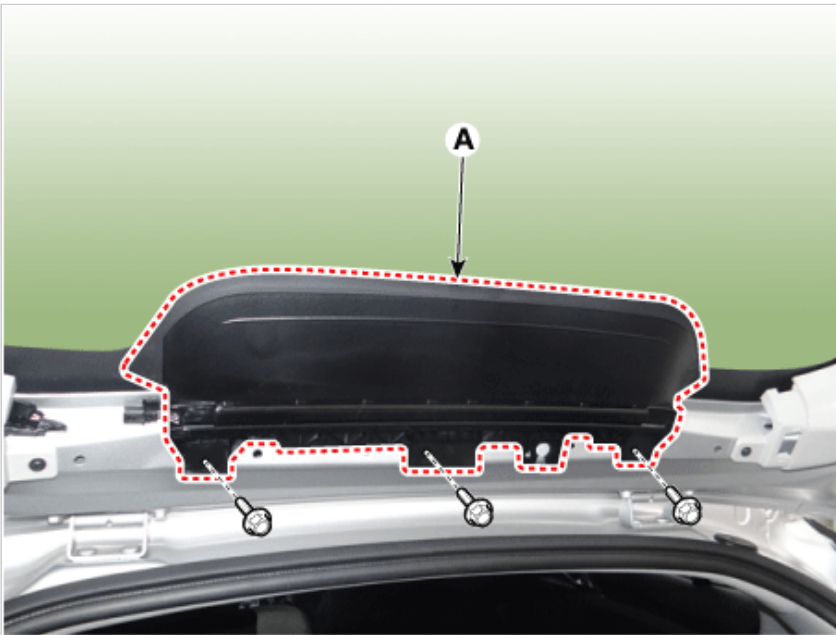

Installation

1. Install the high mounted stop lamp.
2. Connect the high mounted stop lamp connector.
3. Install the liftgate upper trim.
4. Connect the negative (-) battery terminal.