



## Removal


### CAUTION

- Put on gloves to prevent hand injuries.
- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

1. Disconnect the negative (-) battery terminal.
2. Using a screwdriver or remover, separate the room lamp (A) from the room lamp.



3. Remove the room lamp (A) after loosening the mounting screws.

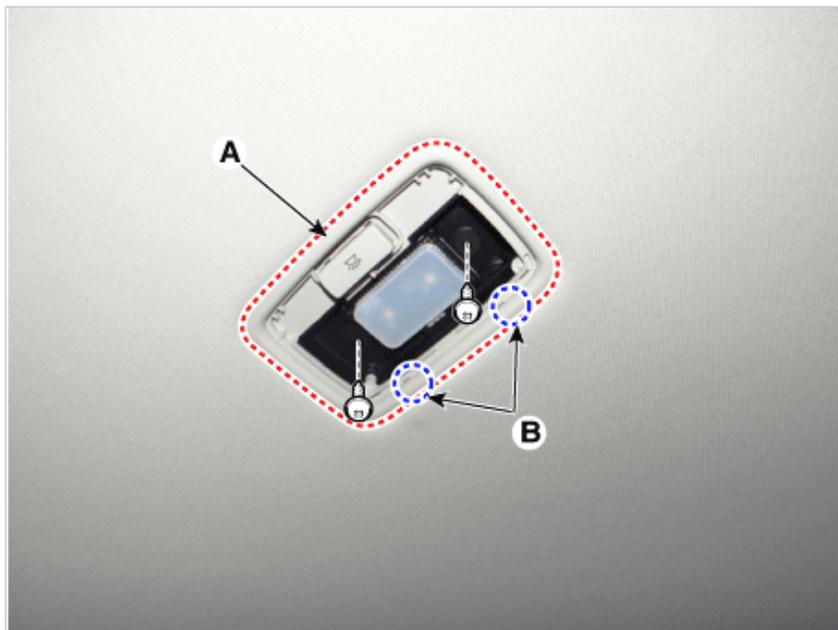

### NOTICE

- When removing the room lamp, be careful of the direction in which the tool is inserted (B).
- When inserting the tool in the opposite direction, take caution as the room lamp may be damaged.

4. Remove the room lamp assembly after disconnecting the room lamp connector (A).



### Installation

1. Connect the room lamp connector.
2. Install the room lamp.
3. Install the room lamp lens.
4. Connect the negative (-) battery terminal.