

Components

Click to see large image...

- 1 . Steering column shaft

2 . Lighting switch

3 . Wiper/Washer switch

4 . Screws
5. Clock spring

6. Clock spring connectors

7. Steering angle sensor connector

8. Multifunction connector

[View A]

[Auto Lighting Switch]

[Fog Lamp Switch]

[View B]

[Intermittent Volume Switch]

Connector A		No.	Description	No.	Description
		1	Front wiper switch	9	Ground
		2	Front wiper low backup switch	10	Fog lamp switch
		3	-	11	Ground
		4	-	12	Turn signal lamp switch
		5	-	13	Dimmer & passing switch
		6	Front washer motor switch	14	Light switch
		7	Front wiper intermittent volume switch	15	Headlamp low backup switch
		8	IGN2	16	-