




Removal

⚠ CAUTION

- a. After replacing with a new power liftgate module, check for DTC code at all times.
If DTC code B24B0 exists, perform power liftgate mode change.
(Refer to Power Liftgate System - "Troubleshooting")
- b. After replacing with a new power liftgate module, perform the system initialization.
(Refer to Power Liftgate System - "Troubleshooting")
- c. Before delivery to customer, operate the power liftgate to be sure that there is no warning sound.

1. Disconnect the negative (-) battery terminal.
2. Remove the luggage side trim [LH].
(Refer to Body - "Luggage Side Trim")
3. Disconnect the power liftgate module connectors (A).

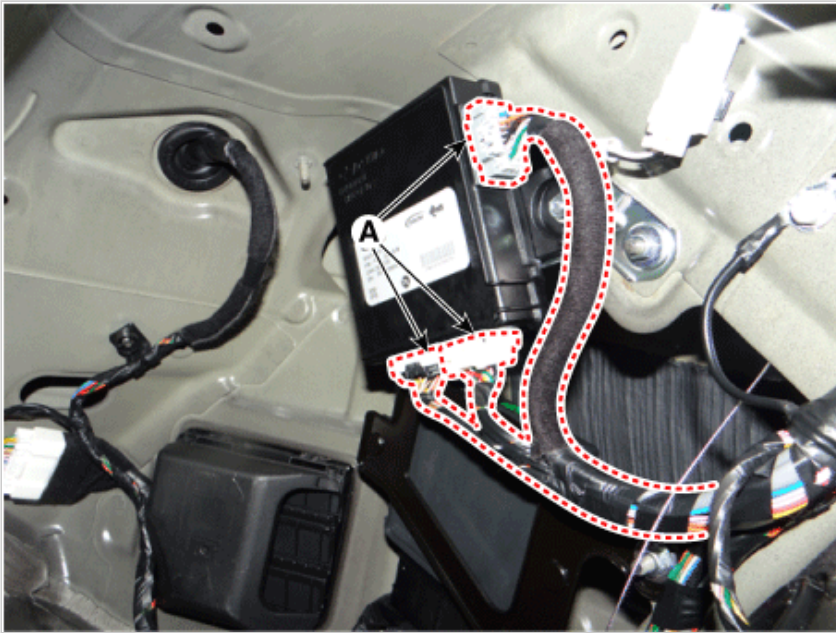

4. Remove the power liftgate module (A) after loosening the mounting nuts.



Installation

1. Install the power liftgate module.
2. Connect the power liftgate module connectors.
3. Install the luggage side trim [LH].
4. Connect the negative (-) battery terminal.

Inspection

Inspection of the Power Liftgate Module

Refer to Power Liftgate System - "Troubleshooting"