




Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the liftgate trim.
(Refer to Body - "Liftgate Trim")
3. Disconnect the anti-pinch strip connector (A).



4. Remove the anti-pinch strip (A) after removing the mounting clips.

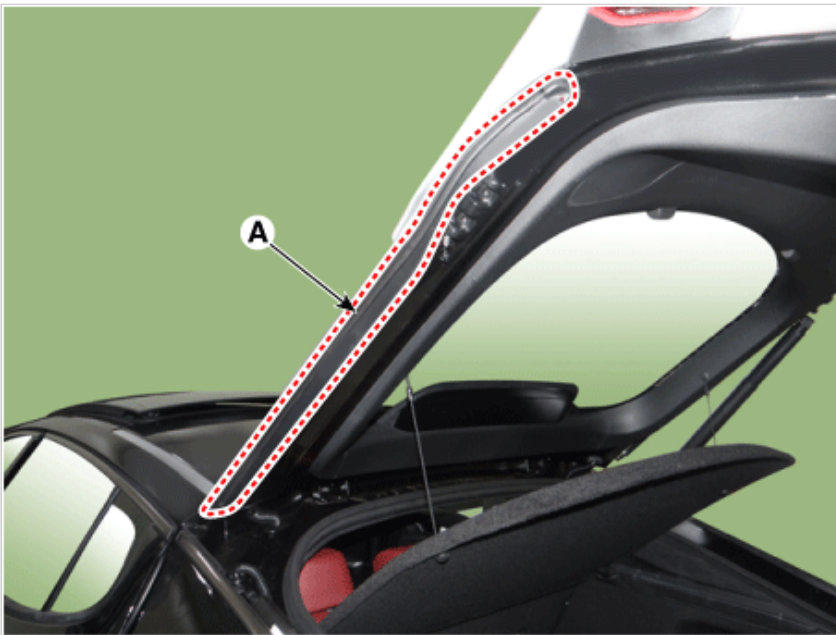

Installation

1. Install the anti-pinch strip.
2. Disconnect the anti-pinch strip connector.
3. Install the liftgate trim.
4. Connect the negative (-) battery terminal.

Inspection

Inspection of the Anti-Pinch Strip

Refer to Power Liftgate System - "Troubleshooting"