





## Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the liftgate trim.  
**(Refer to Body - "Liftgate Trim")**
3. Disconnect the power liftgate latch connector (A) and power closing unit connector (B).

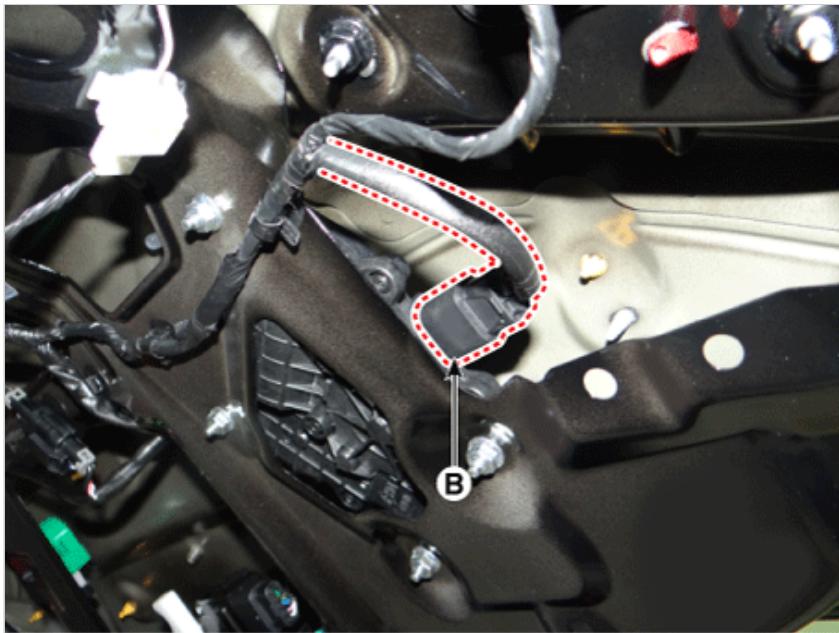


4. Loosen the power liftgate latch (A) mounting bolts.

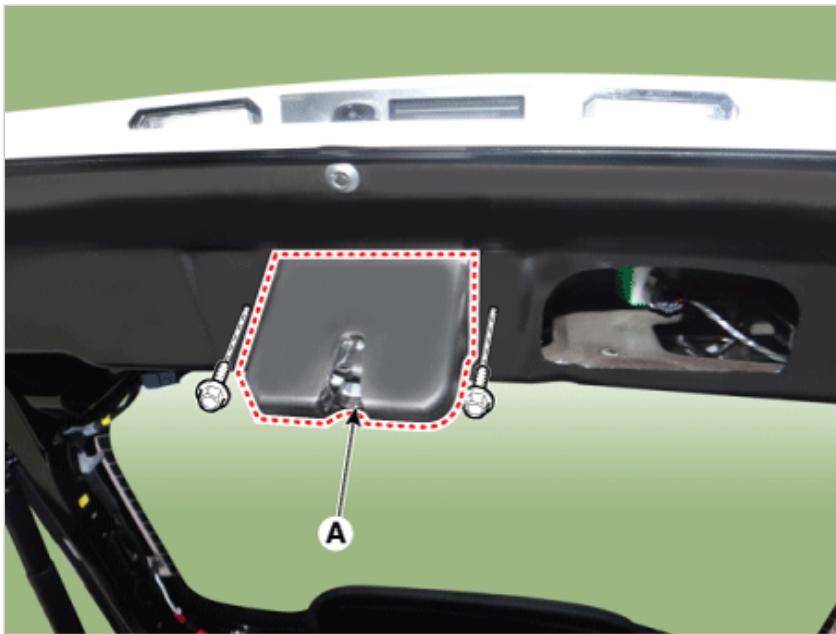

5. Loosen the power closing unit (A) mounting nuts.



6. Remove the power liftgate latch & power closing unit (A).

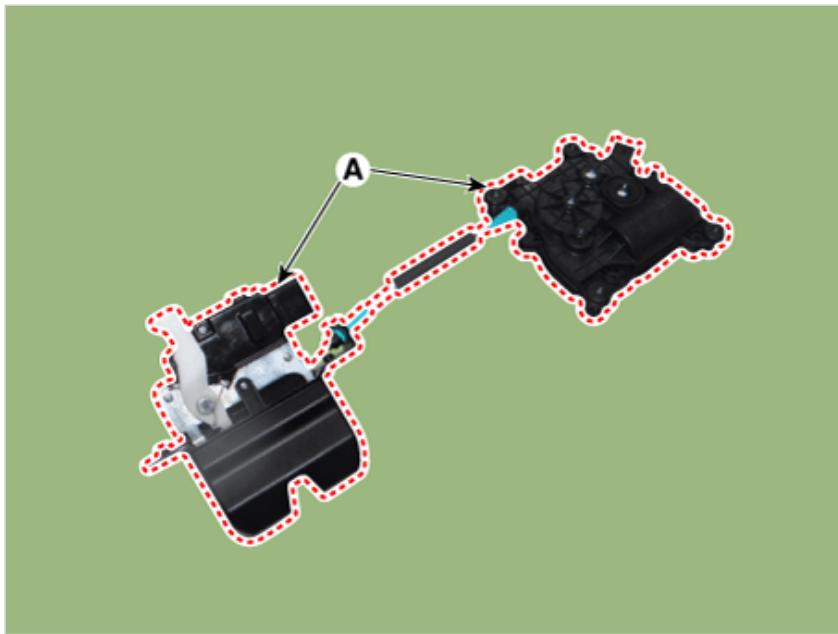

## Installation

1. Install the power liftgate latch and power closing unit.
2. Connect the power liftgate latch and power closing unit connector.
3. Install the liftgate trim.
4. Connect the negative (-) battery terminal.

## Inspection

### Inspection of the Power Liftgate Latch

Refer to Power Liftgate System - "Troubleshooting"