



Components

[Safety Window Motor]

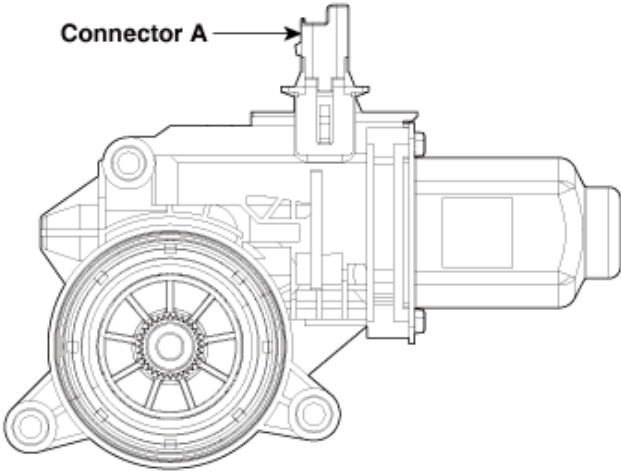


Connector A

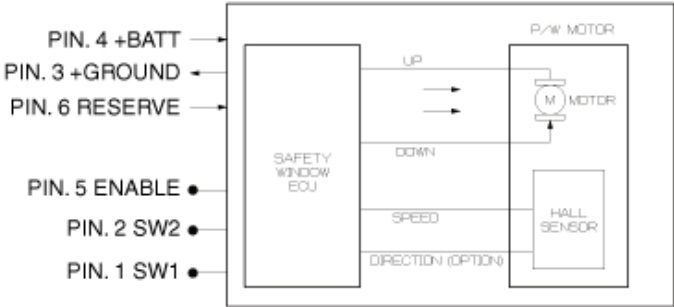


PIN. 4 +BATT
PIN. 3 +GROUND
PIN. 6 RESERVE
PIN. 5 ENABLE
PIN. 2 SW2
PIN. 1 SW1

SAFETY WINDOW ECU
P/W MOTOR
M MOTOR
HALL SENSOR
UP
DOWN
SPEED
DIRECTION (OPTION)

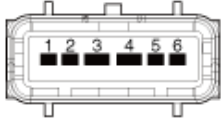Connector A	No.	Description	No.	Description
	1	Switch 1	4	Battery (+)
	2	Switch 2	5	Enable
	3	Ground	6	Reserve

[Standard Window Motor]

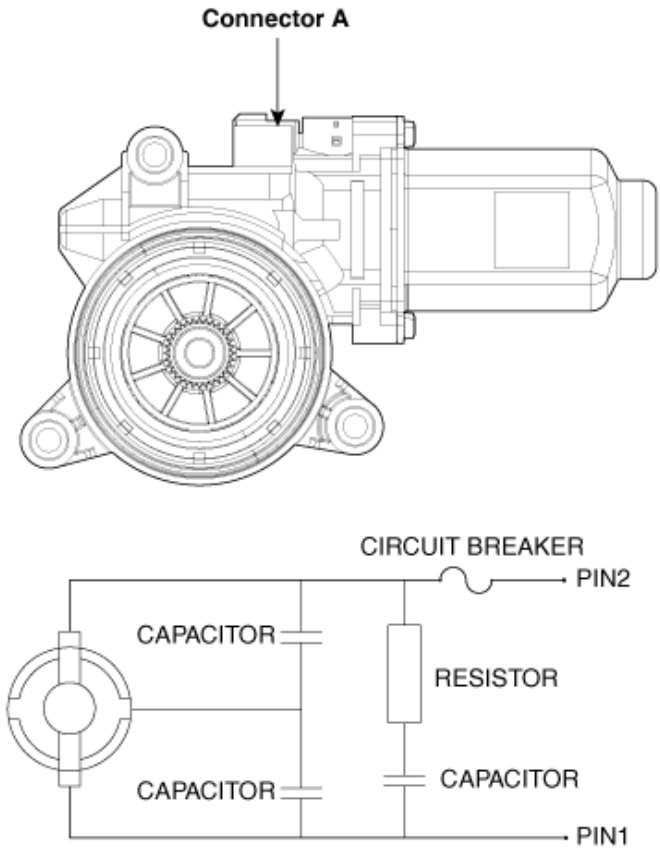

Connector A	
No.	Description
1	Up
2	Down