




Component Location

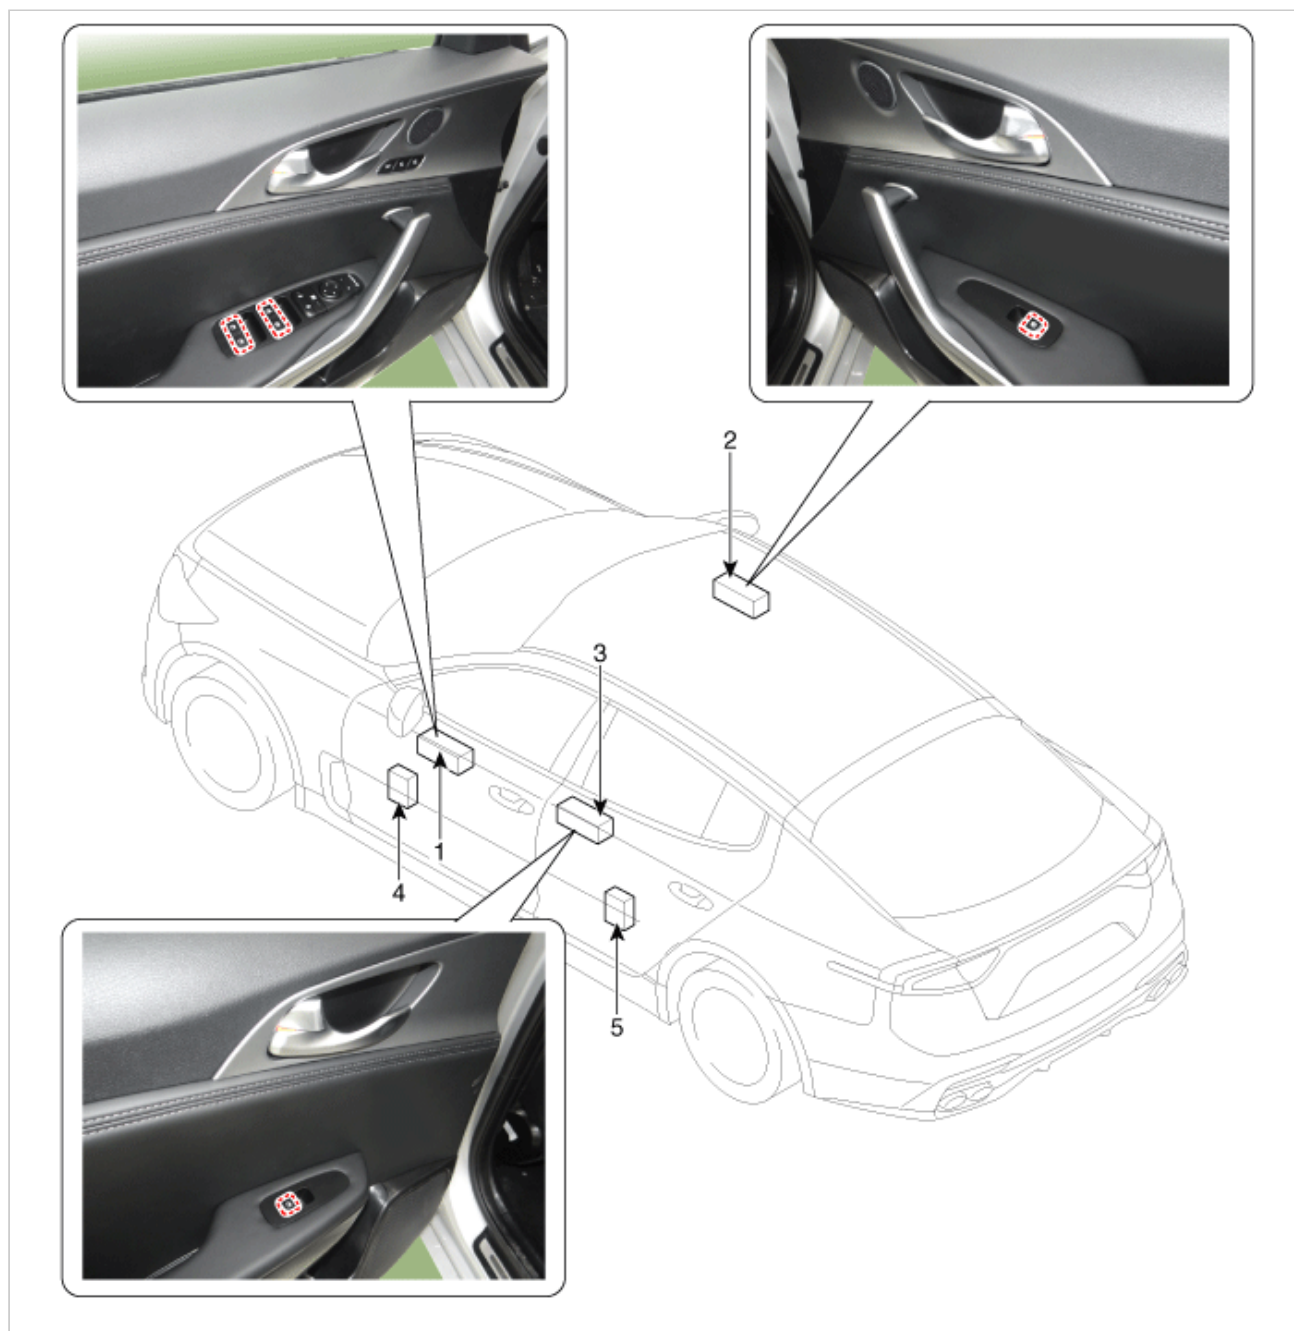

1. Driver power window switch
2. Assist power window switch
3. Rear power window switch

4. Front window motor
5. Rear window motor