



Removal

CAUTION

Put on gloves to protect your hands.

NOTICE


- When prying with a flat-tip screwdriver or use a prying trim tool, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.

Front Seat Heater Switch


- Disconnect the negative (-) battery terminal.
- Remove the console upper complete (A) by using a remover.




- Disconnect the connectors (A) from the console upper complete.

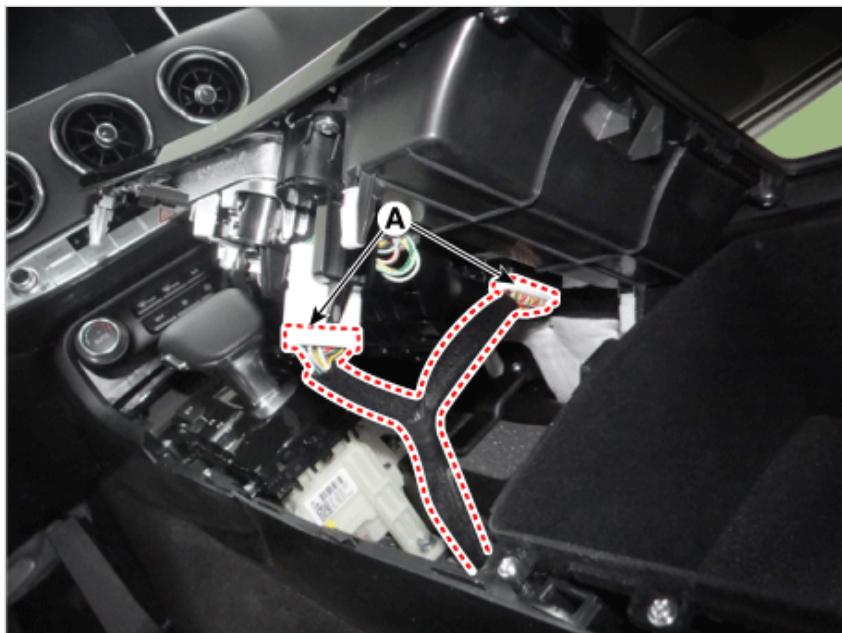

- Remove the connector (A) from the console floor switch complete.

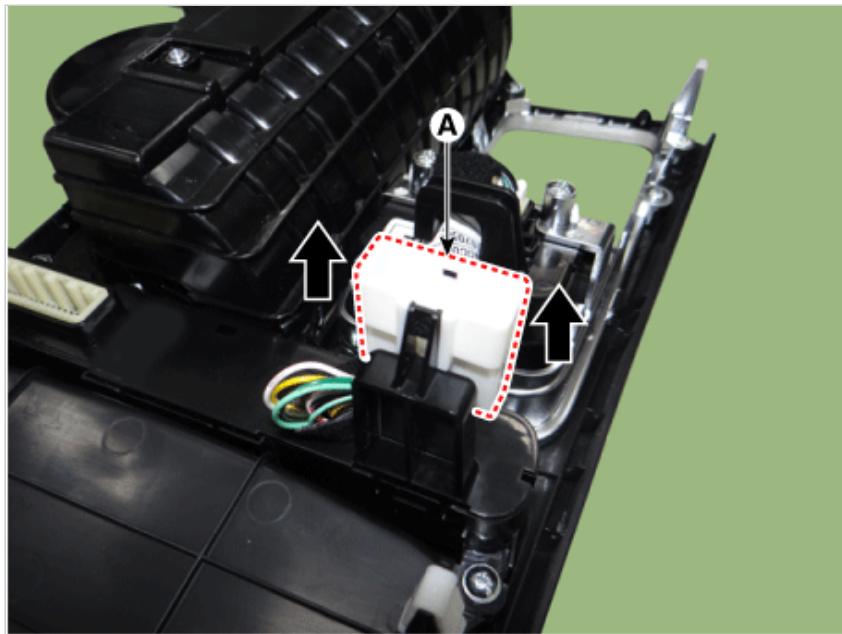

5. Remove the console floor switch complete (A) after loosening the mounting screws.

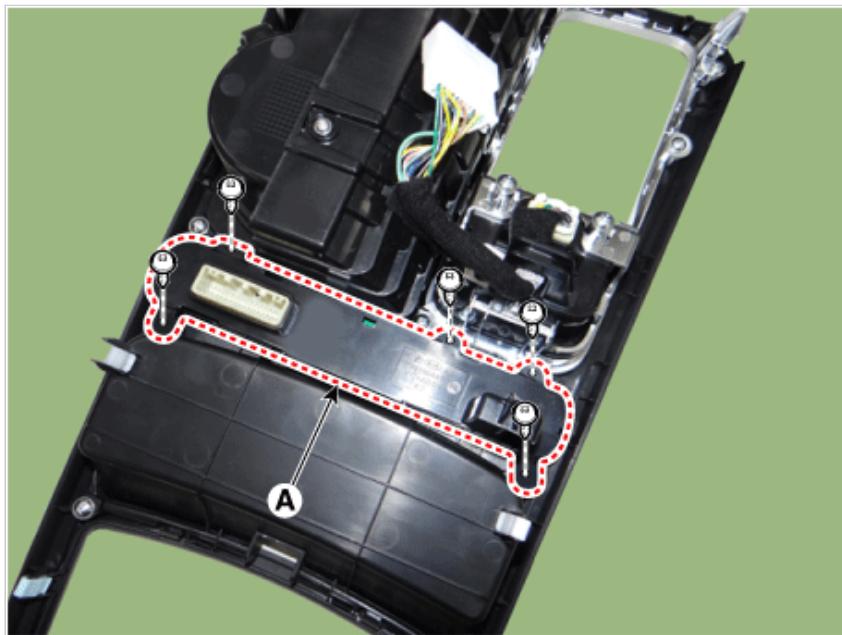



Rear Seat Heater Switch

1. Disconnect the negative (-) battery terminal.
2. Remove the rear door trim.
(Refer to Body - "Rear Door Trim")
3. Disconnect the power window switch connector (A).



4. Remove the power window switch (A) after loosening the mounting screws.

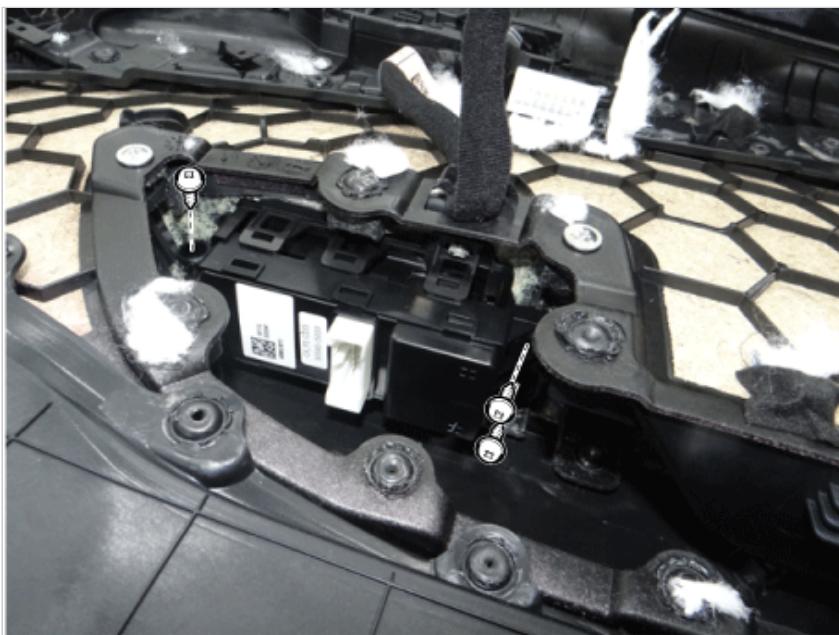

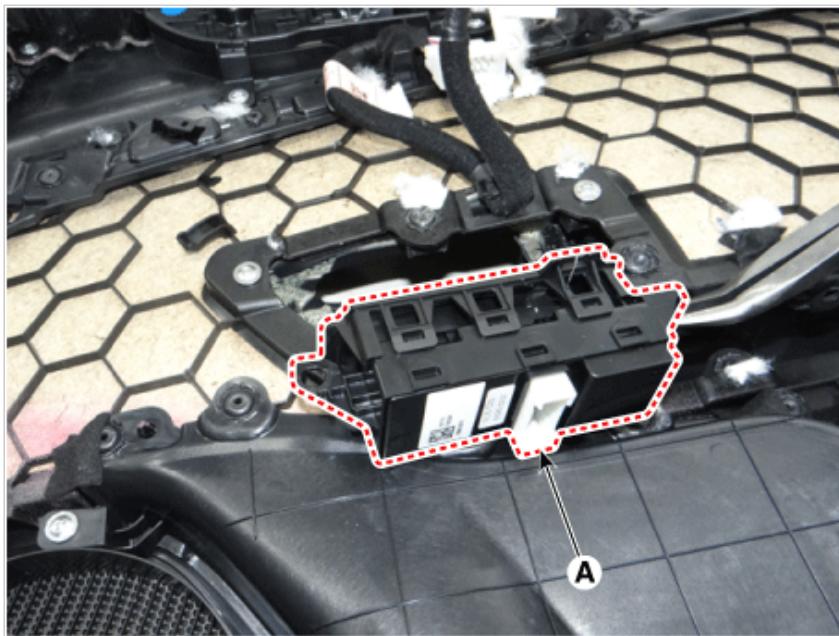

Installation

Front Seat Heater Switch

1. Install the console floor switch complete.
2. Install the connector from the console floor switch complete.
3. Connect the connectors from the console upper complete.
4. Install the console upper complete.
5. Connect the negative (-) battery terminal.

Rear Seat Heater Switch

1. Install the power window switch.
2. Connect the power window switch connector.
3. Install the rear door trim after connecting the connector.
4. Connect the negative (-) battery terminal.