



Component Location


Front Seat Heater



1. Front seat heater unit (Assist seat only)
2. Front seat heater (Back)

3. Front seat heater (Cushion)

Front Seat Heater (Air Ventilation)

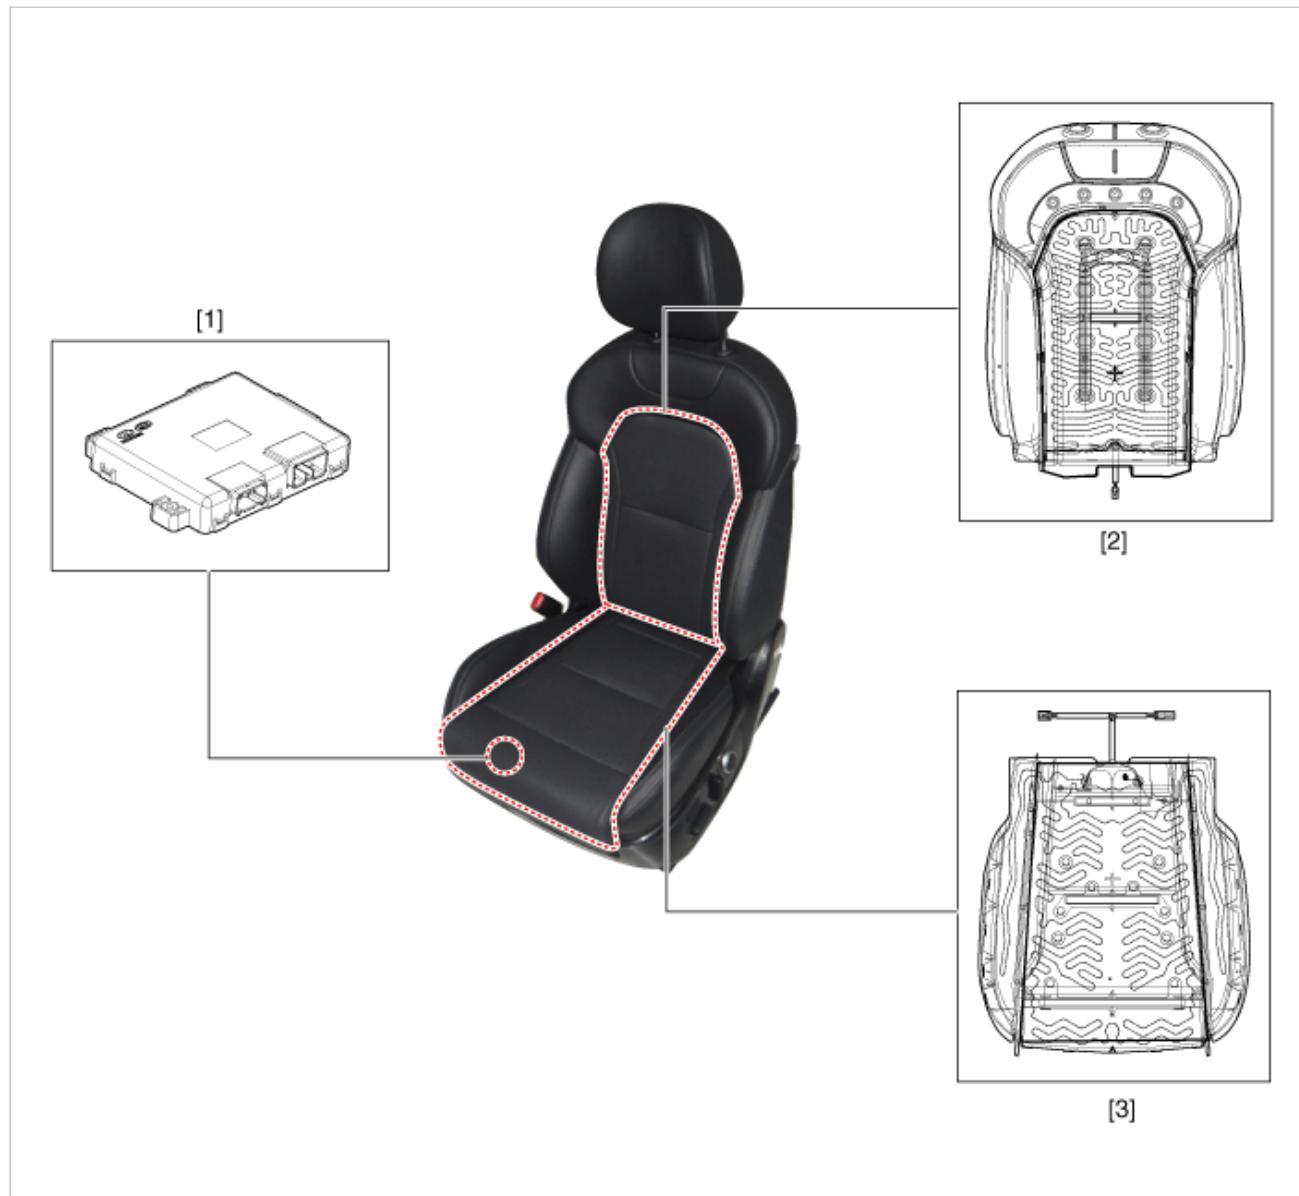



1. Air ventilation seat unit (Assist seat only)

2. Front seat heater (Back)

3. Front seat heater (Cushion)

Rear Seat Heater

[1]

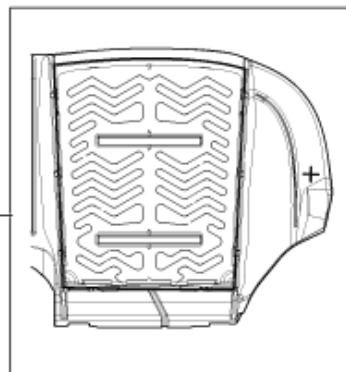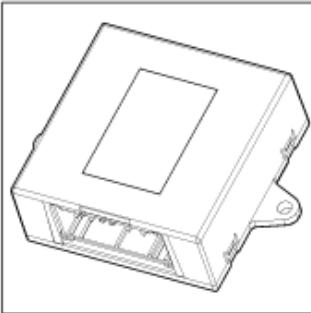

[2]

1. Rear seat heater unit

2. Rear seat heater (Cushion)