



Circuit Diagram

Front Seat Heater

 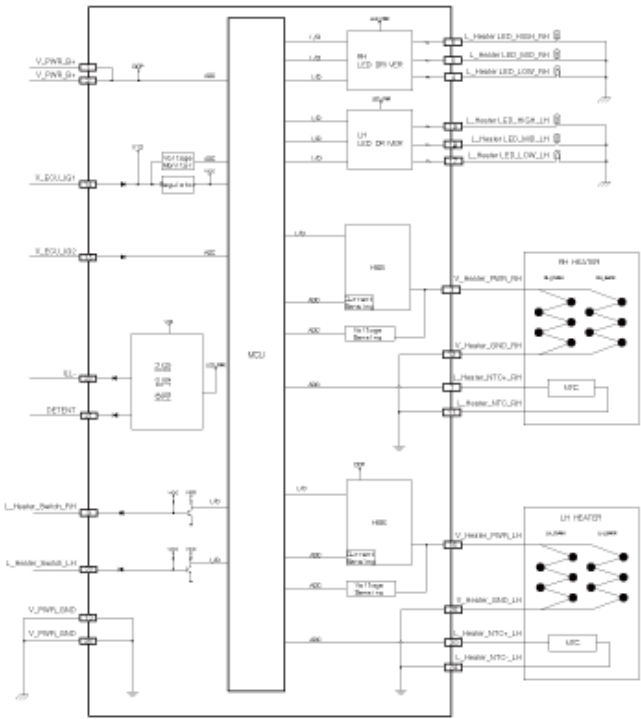


Seat Heater Unit

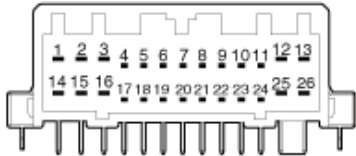

No.	Description	No.	Description
1	Battery (+)	14	IGN1
2	Battery (+)	15	IGN2
3	RH seat heater (+)	16	LH seat heater (+)
4	RH seat heater indicator (Low)	17	LH seat heater indicator (Low)
5	RH seat heater indicator (Mid)	18	LH seat heater indicator (Mid)
6	RH seat heater indicator (High)	19	LH seat heater indicator (High)
7	RH seat NTC (+)	20	LH seat NTC (+)
8	-	21	Detent
9	RH seat heater switch	22	LH seat heater switch
10	-	23	Illumination (-)
11	RH seat NTC (-)	24	LH seat NTC (-)
12	RH seat heater (-)	25	LH seat heater (-)
13	Ground	26	Ground

Heater Pad Connector



No.	Description
B1	Seat heater (+)
B2	NTC (+)
B3	NTC (-)
B4	Seat heater (-)

Rear Seat Heater

