



Component Location



1. Seat ventilation blower

2. Seat ventilation unit (Assist seat only)