




Removal


Seat Ventilation Unit

1. Disconnect the negative (-) battery terminal.
2. Remove the front seat assembly [RH].
(Refer to Body - "Front Seat Assembly")
3. Disconnect the seat ventilation unit connectors (A).

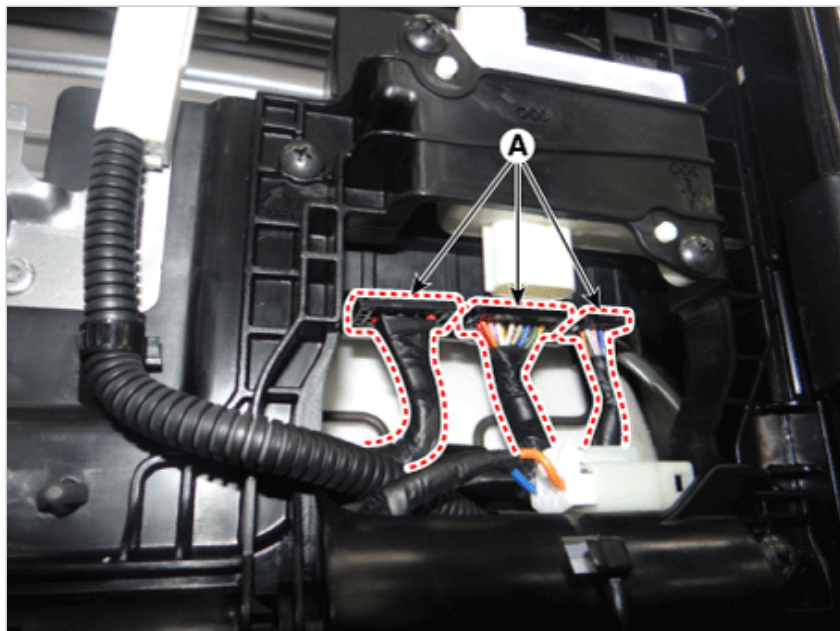


4. Remove the seat ventilation unit (A) after loosening the mounting screws.



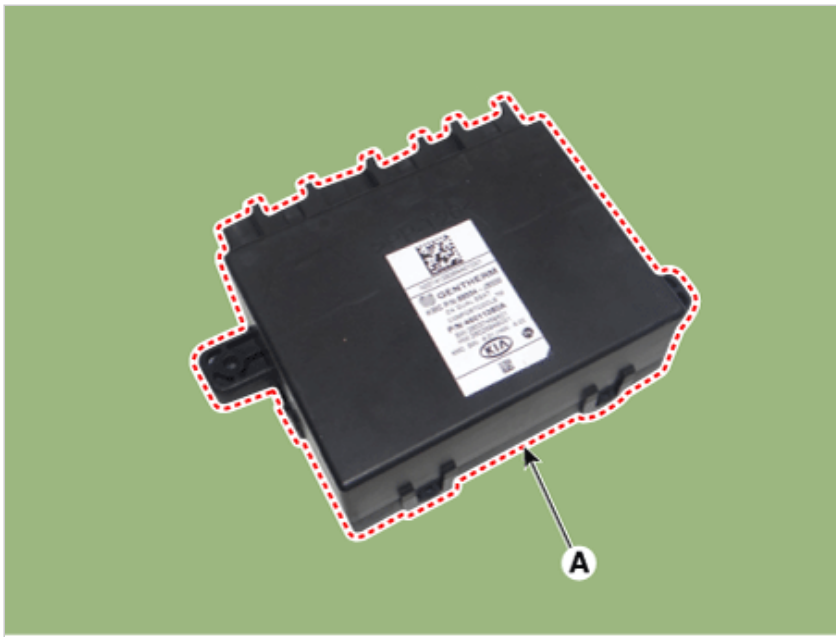


Seat Ventilation Blower


1. Disconnect the negative (-) battery terminal.
2. Remove the front seat assembly [LH/RH].
(Refer to Body - "Front Seat Assembly")
3. Disconnect the seat ventilation blower connector (A).

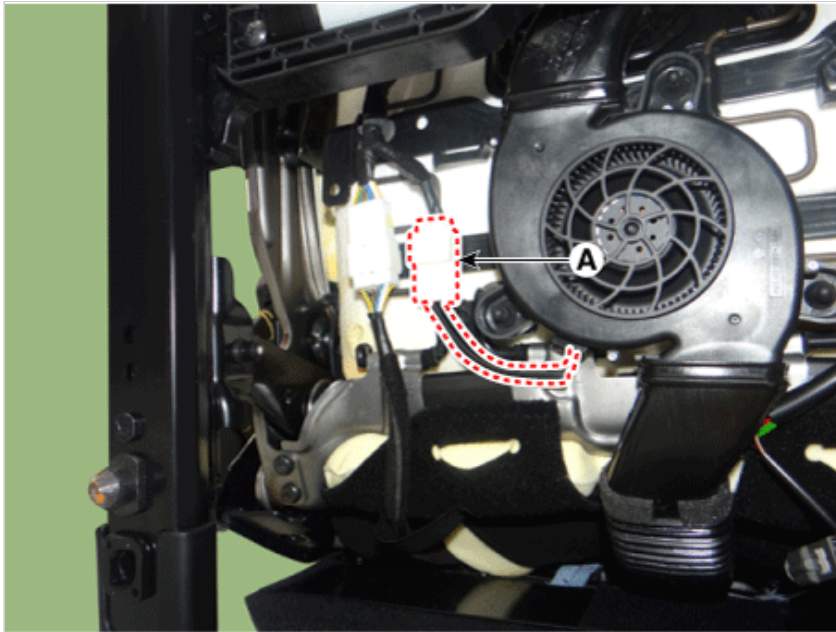

4. Remove the seat ventilation blower ducts (A).

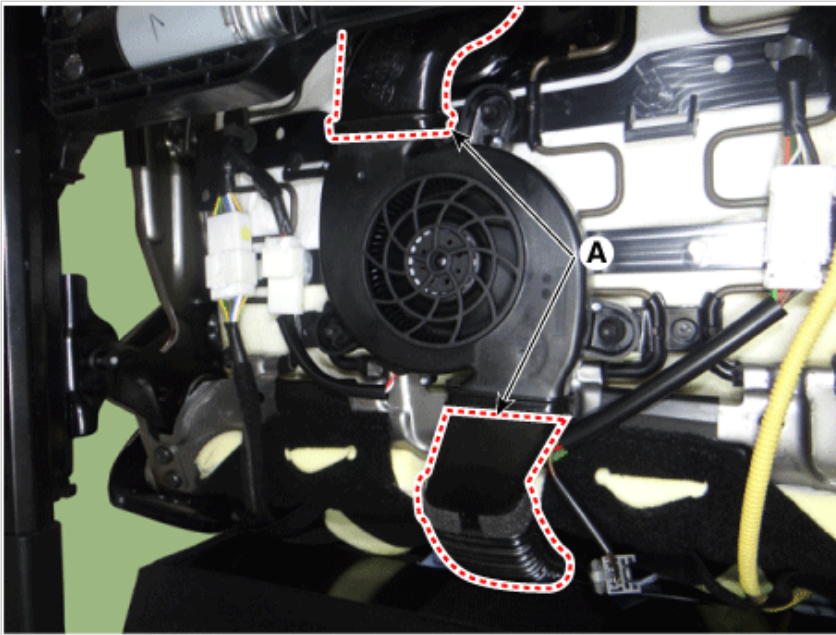

5. Remove the seat ventilation blower (B) after removing the mounting packing (A).

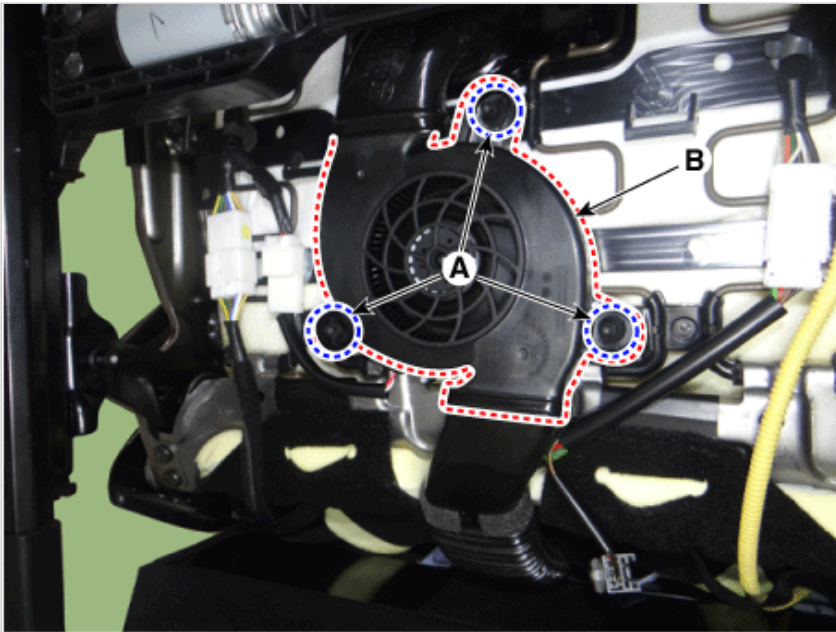

Installation

Seat Ventilation Unit

1. Install the seat ventilation unit after connecting the connector.
2. Install the front seat assembly [RH].
3. Connect the negative (-) battery terminal.

Seat Ventilation Blower

1. Install the seat ventilation blower.
2. Install the seat ventilation blower ducts.
3. Connect the seat ventilation blower connector.
4. Install the front seat assembly [LH/RH].
5. Connect the negative (-) battery terminal.