



Removal


▲ CAUTION

The dust or foreign substance on the rain sensor has a bad effect upon the rain sensor capability, so protect the sensor surface with protection cover until installing the rain sensor to bracket for accurate function.


The coupling pad on the rain sensor surface has adhesive strength, so the coupling pad could stick to the windshield by environment condition during the using time.

If the rain sensor is removed by force, it could be damaged. So make sure to separate the rain sensor from the windshield carefully.


1. Remove the mirror wiring cover (A).

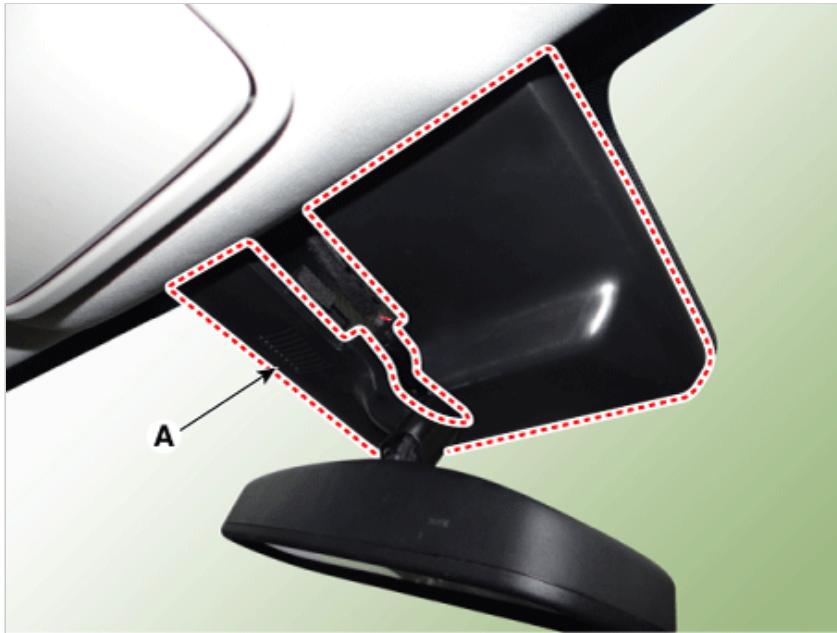

2. Disconnect the rain sensor connector (A).

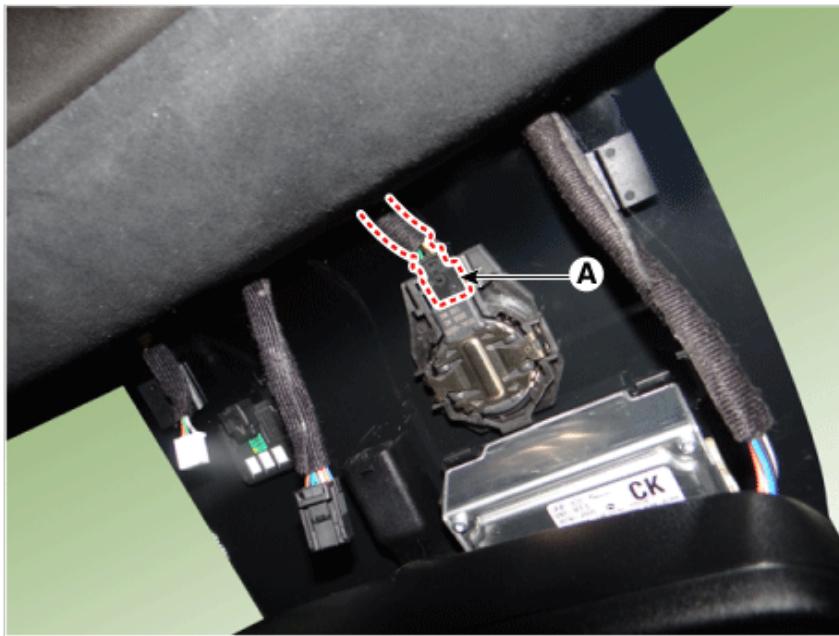

3. Be careful not to damage the cover latch by applying excessive force. To remove the bracket, pull the holes of the bracket outside using a small flat-head screwdriver (A).

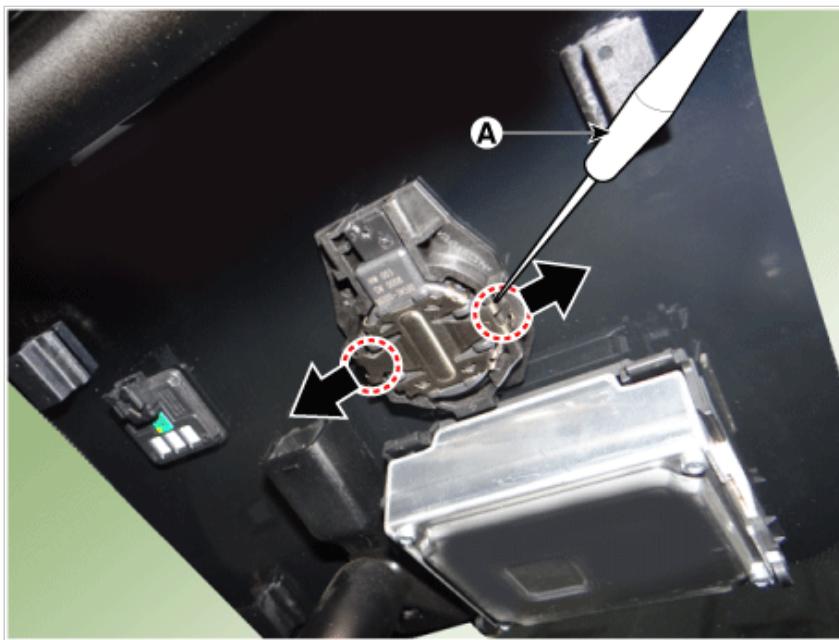




4. Rain sensor module is attached to the front windshield by glue. When replacing the front windshield, remove the rain sensor module from the existing front windshield and install it on the new front windshield.

Installation

NOTICE

- If the windshield has the reflection layer which reflects the infrared rays in the sensing field, the integrated rain sensor shall be installed in the field with no reflection layer.
- Install the rain sensor after some time and make sure that dust does not settle after installation.

1. Install the rain sensor bracket to the windshield glass using the tape.

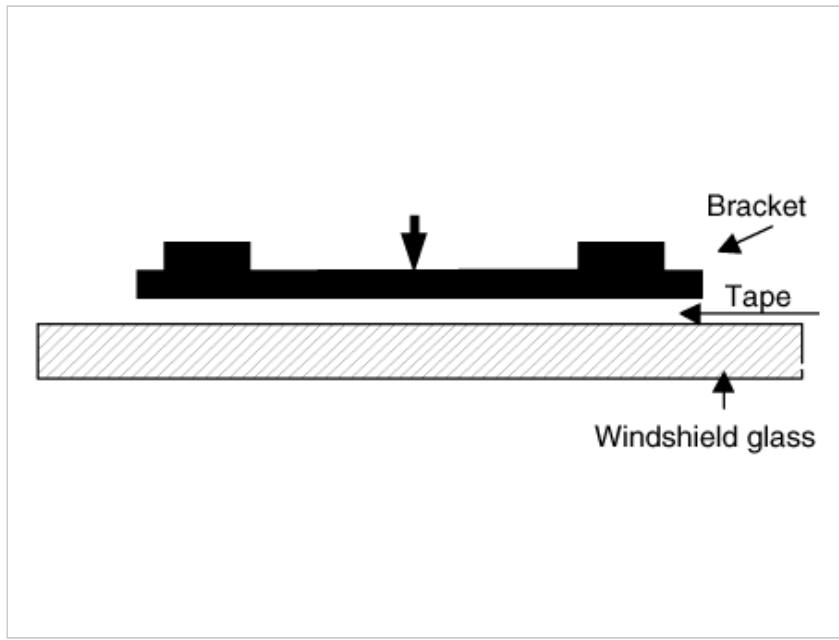

CAUTION

It is very important that the coupling pad pushes the windshield completely to stick to each other without bubbles.

2. Connect the rain sensor connector, and then install the sensor cover.