
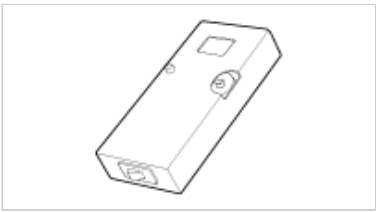
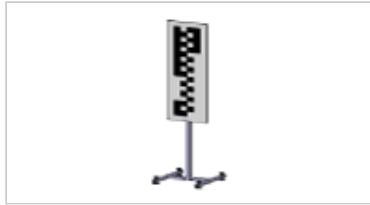


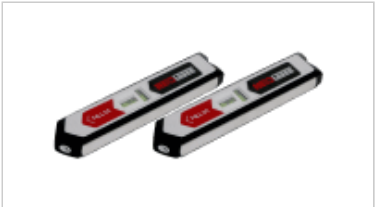

Special Service Tools

Tool Name / Number	Illustration	Description
RKE Battery Checker (09954-2P100)		Measuring the RKE battery voltage
Calibration jig for LDW or LKA (09890-3V100)		Calibration of LDW (Lane Departure Warning) or LKA (Lane Keeping Assist)
SCC SETTING BEAM (09964-C1200)		Calibration of LDW (Lane Departure Warning) or LKA (Lane Keeping Assist)
BCW Unit Correction Tool Set (09958-3T500)		Used to correct the BCW unit.
Case, Manual, String (09958-3T120)		Used to correct the BCW unit.Used to create a center line.
Vertical Plumb (09958-3T010)		Used to correct the BCW unit.Used to create a center line.
Spirit Level (09958-3T070)		Used to correct the BCW unit.Used to measure the horizontal angle.
BCW Unit Fixing Adaptor (09958-3T080)		Used to correct the BCW unit.Used to measure the horizontal angle.

Digital Protractor (09958-3T090)		Used to correct the BCW unit.Used to measure the horizontal angle.
Digital Inclinator (09958-3T100)		Used to correct the BCW unit.Used to measure the vertical angle.