



Inspection


To inspect and diagnose the sensor, refer to Self-Diagnostic procedure and DTC guide.

Replacement

1. Disconnect the negative (-) battery terminal.
2. Remove the auto defogging sensor cover (A).



3. Remove the auto defogging sensor (A) after disconnecting the auto defogging sensor connector (B).

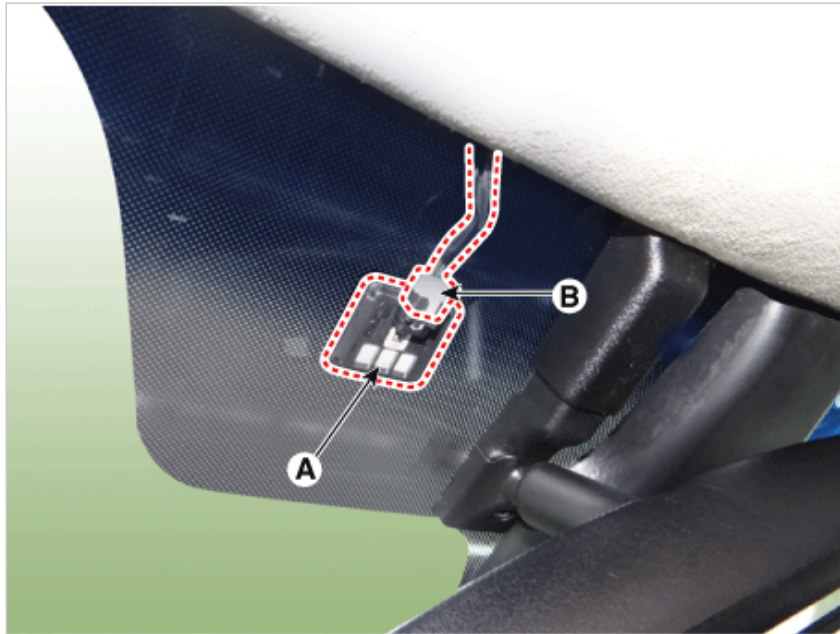

4. Install in the reverse order of removal.