




## Component Location Index

### [Engine Room]

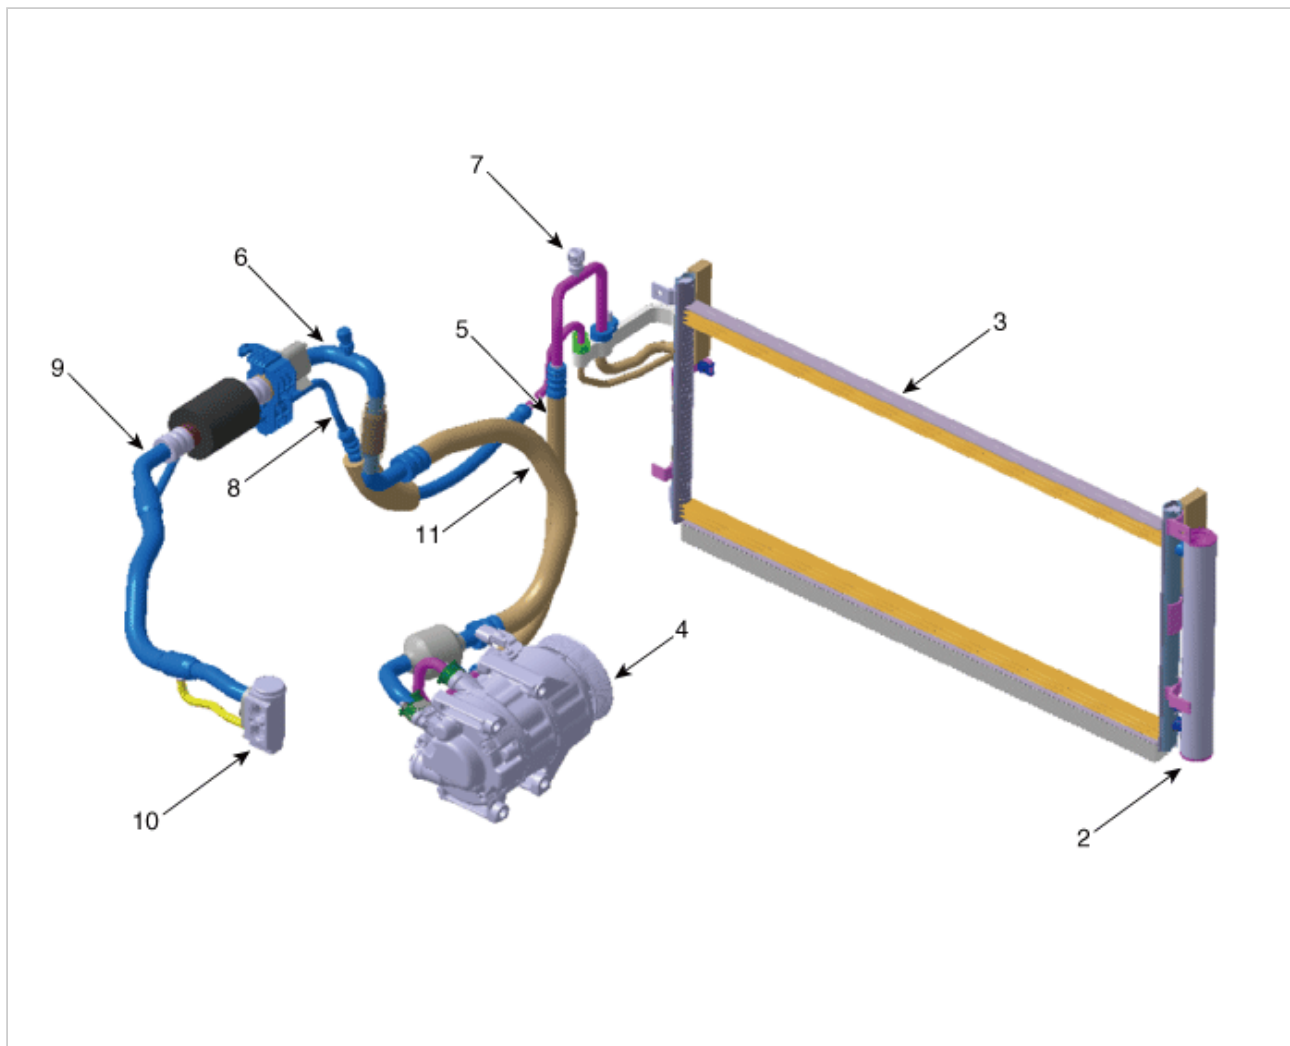

1. Ambient sensor
2. Receiver drier
3. Condenser
4. Compressor
5. Discharge hose
6. Service port (Low pressure)

7. Service port (High pressure)
8. A/C Pressure Transducer (APT)
9. Suction & Liquid tube assembly
10. Expansion valve
11. Suction hose

### Interior



1. Auto Defogging Sensor
2. Photo Sensor
3. Heater & Blower Unit

4. Evaporator Temperature Sensor
5. Heater & A/C Control Unit (DATC)