



Components Location

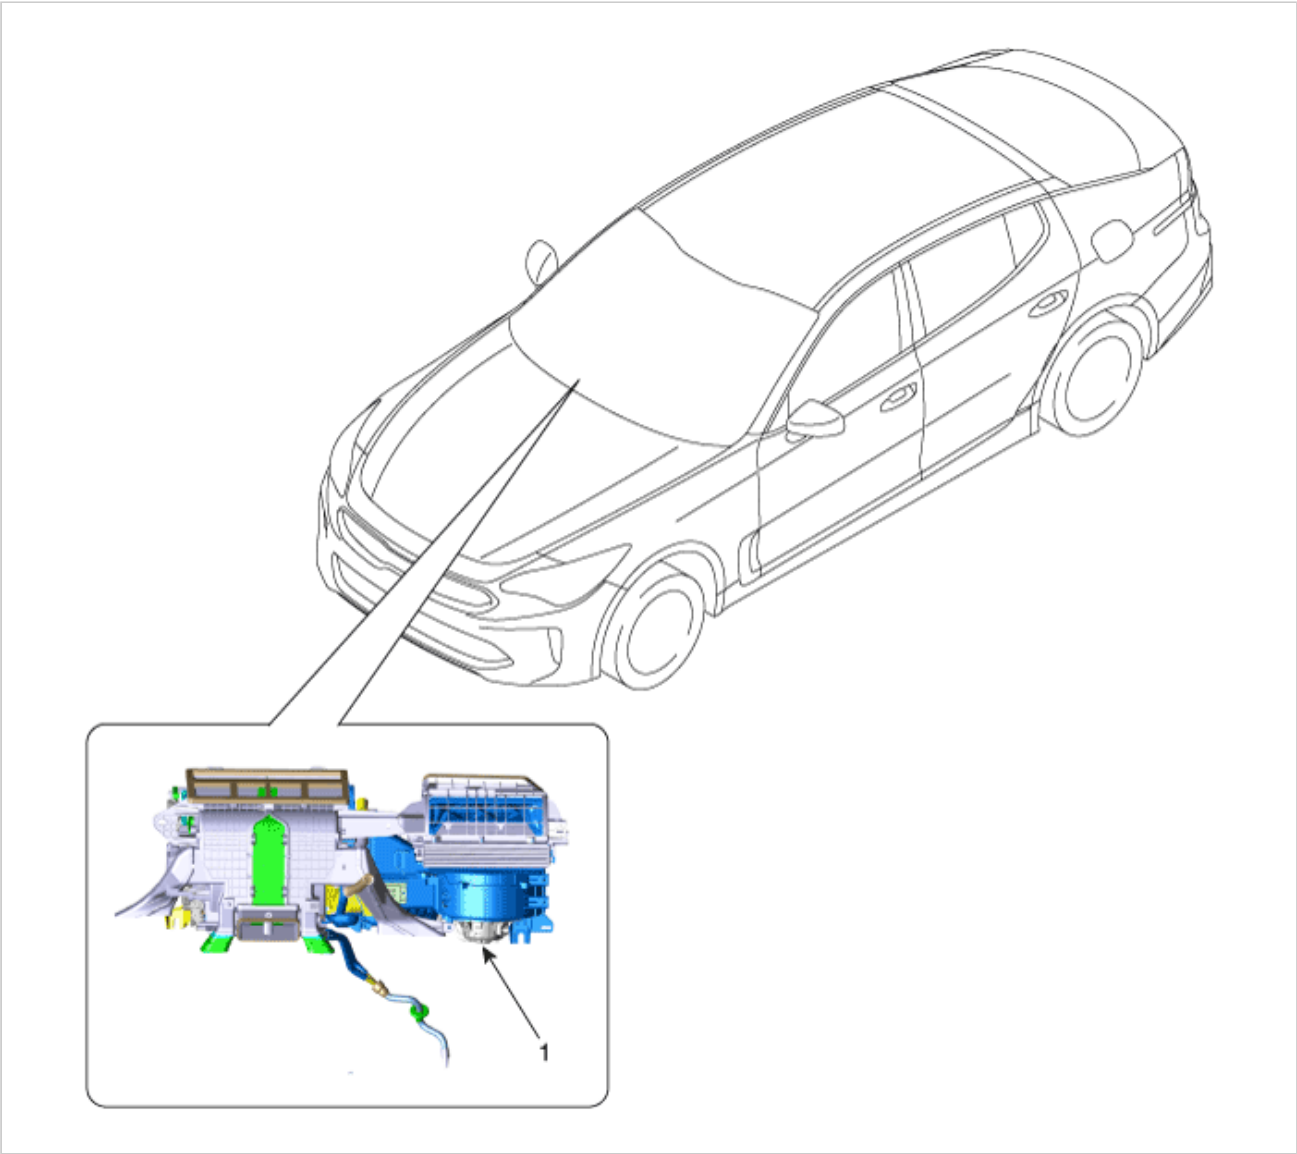

1. Blower Unit

Components

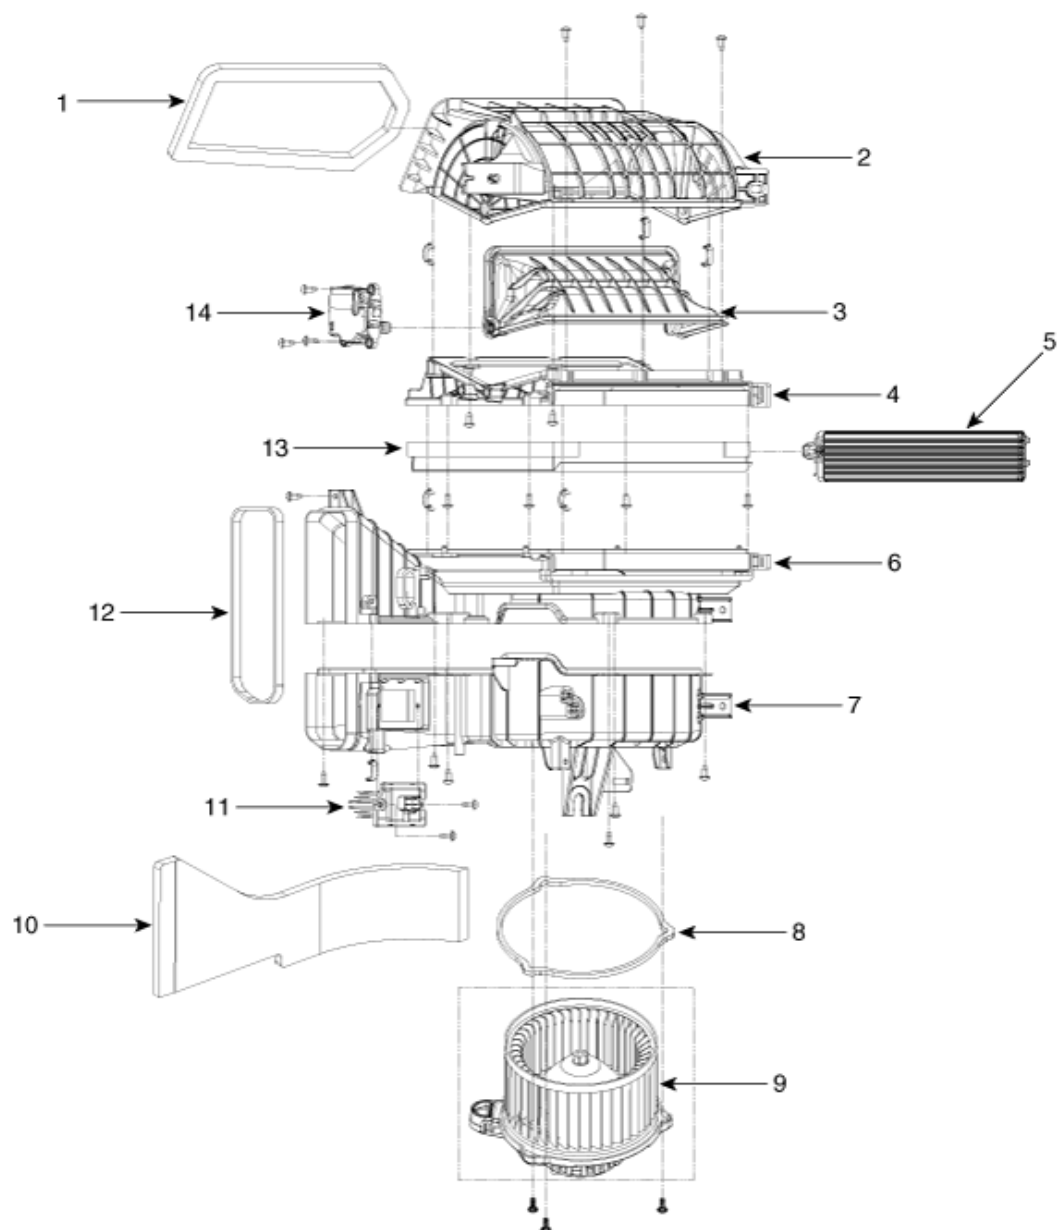

1. Inlet seal

2. Inlet duct case [Upper]

3. Inlet door assembly

4. Inlet case [Lower]

5. Air filter cover

6. Blower case [Upper]

7. Blower case [Lower]

8. Blower motor seal

9. Blower motor assembly

10. Anti noise pad

11. FET

12. Blower evaporator seal

13. Air filter

14. Intake actuator