



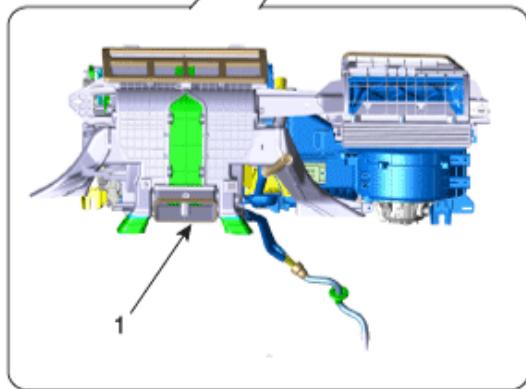


Component Location

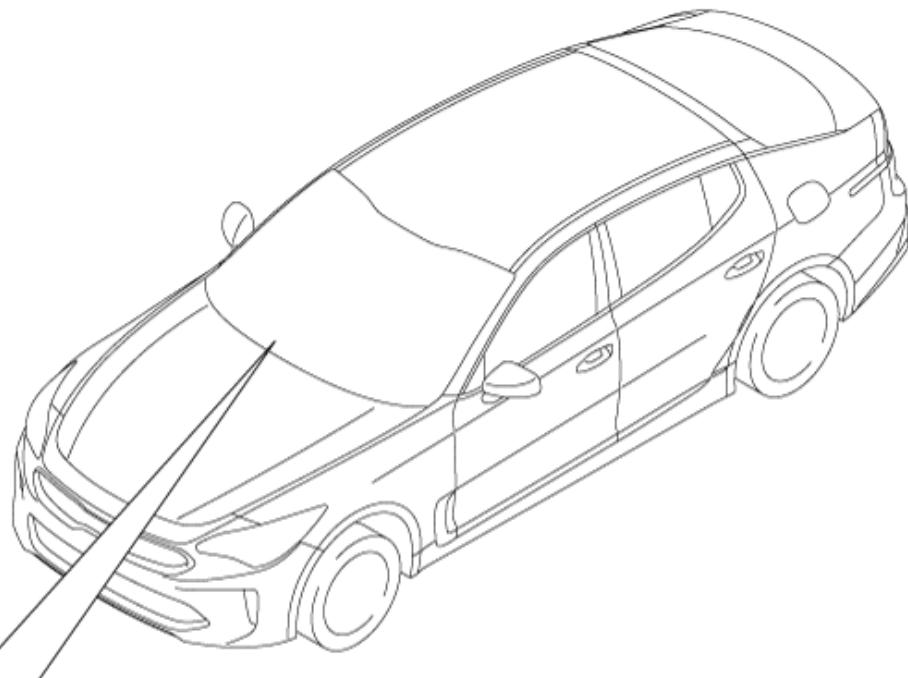

1. Heater Unit


Components

[LH]

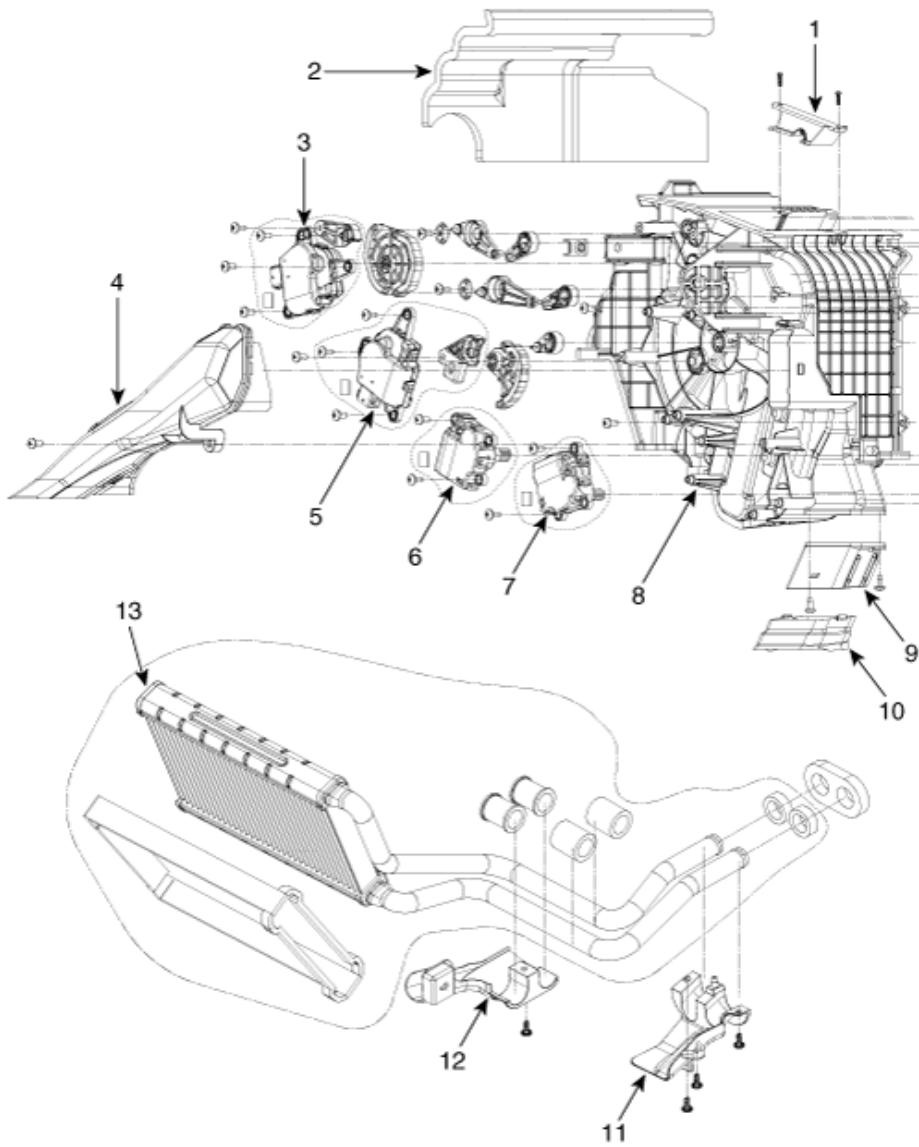

- | | |
|-----------------------------------------|--------------------------|
| 1. Air guard | 8. Heater case [LH] |
| 2. Anti noise pad | 9. Rear heater duct |
| 3. Mode control actuator | 10. Rear heater duct |
| 4. Shower duct [LH] | 11. Heater core cover |
| 5. Temperature control actuator | 12. Heater core cover |
| 6. Console ON/OFF actuator | 13. Heater core assembly |
| 7. Console temperature control actuator | |

[RH]

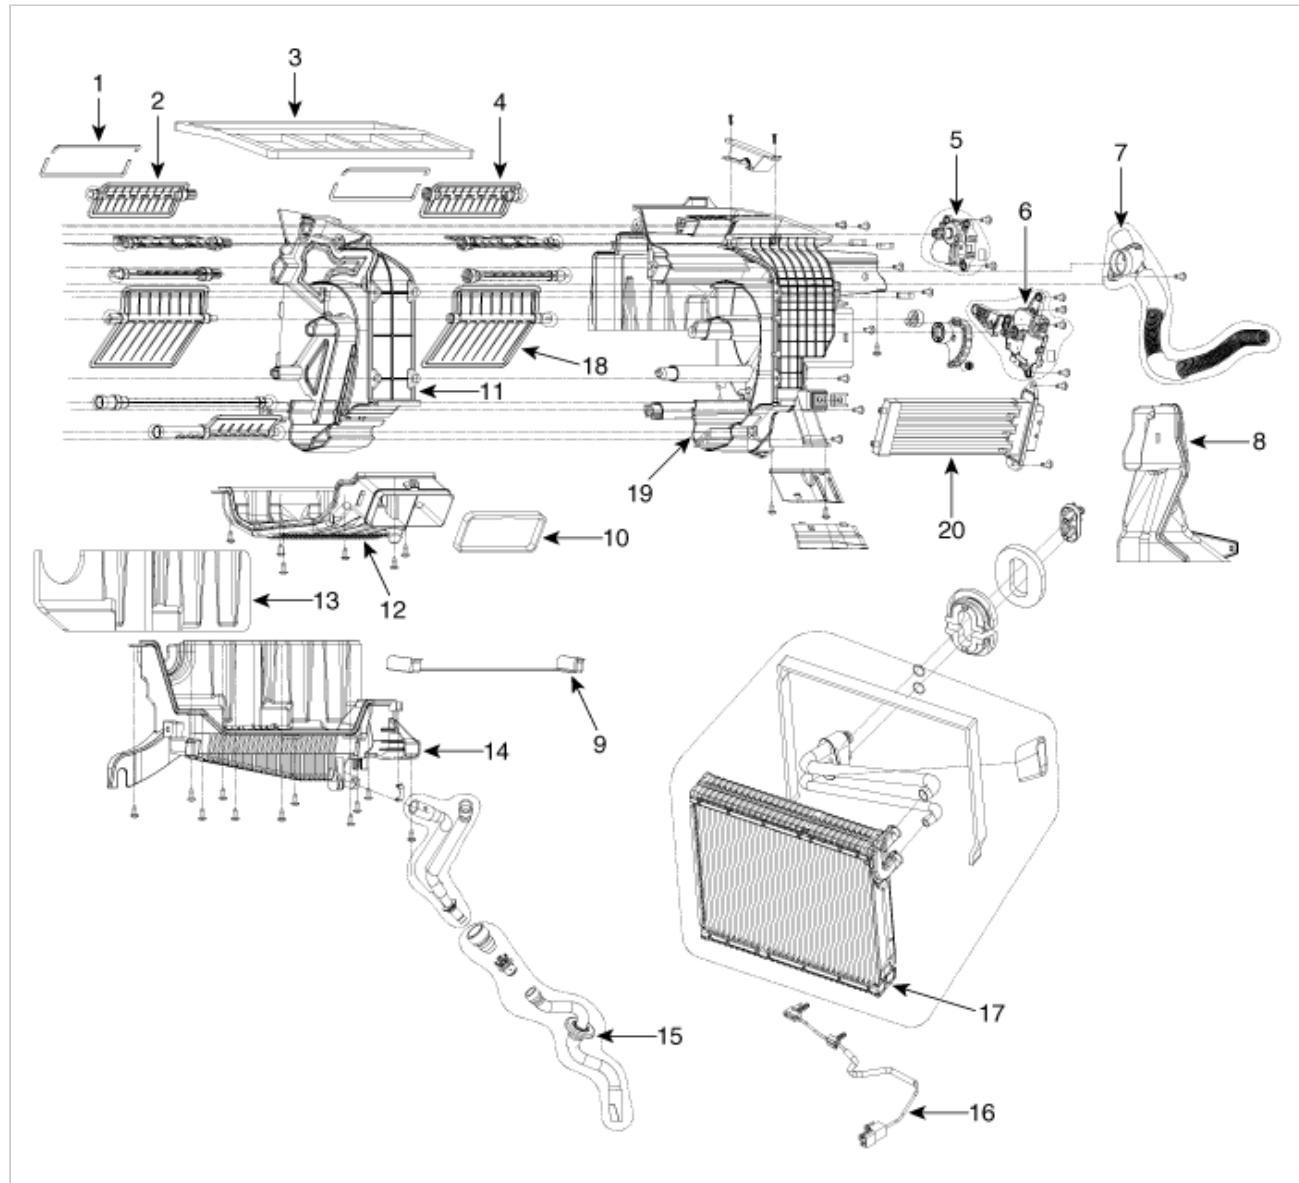

1. Defog seal
2. Auto defogging door [LH]
3. Seal
4. Auto defogging door [RH]
5. Auto defogging actuator
6. Temperature control actuator
7. Aspirator hose assembly
8. Shower duct [RH]
9. Evaporator insulation [Low]
10. Console seal

11. Heater separator
12. Console cover
13. Anti noise pad
14. Heater case [Lower]
15. Drain hose
16. Evaporator temperature sensor
17. Evaporator core
18. Temperature control door
19. Heater case [RH]
20. PTC Heater