



# 2019 Stinger



## Maintenance Schedule

- **Model: Stinger(CK) / 2019**
- **Engine: G 3.3 T-GDI LAMBDA II**
- **Trans: A/T**
- **Drive: AWD**
- **Mileage: All Mileages**

### • Vehicle Maintenance Requirements

The following maintenance services must be performed to help ensure safe, dependable operation and performance. Retaining all maintenance / service documents and receipts will help establish your compliance with your vehicle's warranty requirements. Maintenance frequency is determined by mileage or time, whichever comes first. Please refer to your Owner's Manual and the Warranty and Consumer Information Manual for further details.

Mileage/Month	Replacement Maintenance Items	Inspection Maintenance Items
6,000 miles / 12 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Climate control air filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Rotate tires</li> </ul>	<ul style="list-style-type: none"> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> </ul>
12,000 miles / 24 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Climate control air filter</li> <li>■ Rotate tires</li> </ul>	<ul style="list-style-type: none"> <li>■ Air cleaner filter</li> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> <li>■ Vapor hose, fuel filler cap and fuel tank</li> <li>■ Fuel tank air filter <a href="#">Note 4</a></li> <li>■ Parking brake</li> <li>■ Brake fluid</li> </ul>
18,000 miles / 36 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> </ul>
24,000 miles / 48 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Air cleaner filter</li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> <li>■ Cooling system <a href="#">Note 7</a></li> <li>■ Vapor hose, fuel filler cap and fuel tank</li> <li>■ Fuel tank air filter <a href="#">Note 4</a></li> <li>■ Fuel lines, hoses and connections</li> <li>■ Parking brake</li> <li>■ Brake fluid</li> </ul>

30,000 miles / 60 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> </ul>
36,000 miles / 72 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> <li>■ Differential oil (rear) with LSD <a href="#">Note 6</a></li> </ul>	<ul style="list-style-type: none"> <li>■ Air cleaner filter</li> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> <li>■ Cooling system <a href="#">Note 7</a></li> <li>■ Differential oil (front) <a href="#">Note 5</a></li> <li>■ Vapor hose, fuel filler cap and fuel tank</li> <li>■ Fuel tank air filter <a href="#">Note 4</a></li> <li>■ Parking brake</li> <li>■ Brake fluid</li> </ul>
42,000 miles / 84 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Spark plugs</li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> </ul>
48,000 miles / 96 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Air cleaner filter</li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> <li>■ Cooling system <a href="#">Note 7</a></li> <li>■ Vapor hose, fuel filler cap and fuel tank</li> <li>■ Fuel tank air filter <a href="#">Note 4</a></li> <li>■ Fuel lines, hoses and connections</li> <li>■ Parking brake</li> <li>■ Brake fluid</li> </ul>
54,000 miles / 108 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives</li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> </ul>

60,000 miles / 120 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Drive belts <a href="#">Note 1</a></li> <li>■ Air cleaner filter</li> <li>■ Valve clearance <a href="#">Note 3</a></li> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose <a href="#">Note 7</a></li> <li>■ Cooling system <a href="#">Note 7</a></li> <li>■ Vapor hose, fuel filler cap and fuel tank</li> <li>■ Fuel tank air filter <a href="#">Note 4</a></li> <li>■ Parking brake</li> <li>■ Brake fluid</li> </ul>
66,000 miles / 132 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> </ul>
72,000 miles / 144 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Air cleaner filter</li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> <li>■ Differential oil (rear) with LSD <a href="#">Note 6</a></li> </ul>	<ul style="list-style-type: none"> <li>■ Drive belts <a href="#">Note 1</a></li> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> <li>■ Cooling system <a href="#">Note 7</a></li> <li>■ Differential oil (front) <a href="#">Note 5</a></li> <li>■ Vapor hose, fuel filler cap and fuel tank</li> <li>■ Fuel tank air filter</li> <li>■ Fuel lines, hoses and connections</li> <li>■ Parking brake</li> <li>■ Brake fluid</li> </ul>
78,000 miles / 156 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> </ul>
84,000 miles / 168 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Spark plugs</li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Drive belts <a href="#">Note 1</a></li> <li>■ Air cleaner filter</li> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> <li>■ Cooling system <a href="#">Note 7</a></li> <li>■ Vapor hose, fuel filler cap and fuel tank</li> <li>■ Fuel tank air filter <a href="#">Note 4</a></li> <li>■ Parking brake</li> <li>■ Brake fluid</li> </ul>

90,000 miles / 180 months	<ul style="list-style-type: none"> <li>■ Engine oil and engine oil filter</li> <li>■ Fuel additives <a href="#">Note 2</a></li> <li>■ Rotate tires</li> <li>■ Climate control air filter</li> </ul>	<ul style="list-style-type: none"> <li>■ Vacuum hose</li> <li>■ Battery condition</li> <li>■ Brake lines, hoses and connections</li> <li>■ Disc brakes and pads</li> <li>■ Steering gear rack, linkage and boots</li> <li>■ Driveshaft and boots</li> <li>■ Suspension and mounting bolts</li> <li>■ Air conditioner refrigerant</li> <li>■ Air conditioner compressor</li> <li>■ Propeller shaft</li> <li>■ Exhaust pipe and muffler</li> <li>■ Intercooler, in/out hose, air intake hose</li> </ul>
---------------------------	---	---

#### Notes

\* if equipped

[Note 1](#) The drive belt should be replaced when cracks occur or tension is reduced

[Note 2](#) If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

[Note 3](#) Inspect for excessive tappet noise and / or engine vibration and adjust if necessary. Have an authorized Kia dealer perform the operation.

[Note 4](#) Fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality.

[Note 5](#) Front / rear differential oil should be changed anytime they have been submerged in water.

[Note 6](#) When replacing differential oil with LSD, use only specified LSD oil.

[Note 7](#) At first, replace at 120,000 miles (200,000km) or 10 years. After that, replace every 30,000 miles (50,000km) or 24 months.