

Please rate this document after reviewing at the bottom of this page.


REPLACEMENT

1. Disconnect the negative battery terminal.


NOTICE

After disconnecting the cables, wait at least 30 seconds.

2. Remove the front bumper assembly.
(Refer to Body - "Front Bumper Assembly")
3. Disconnect the active hood unit connector (A).

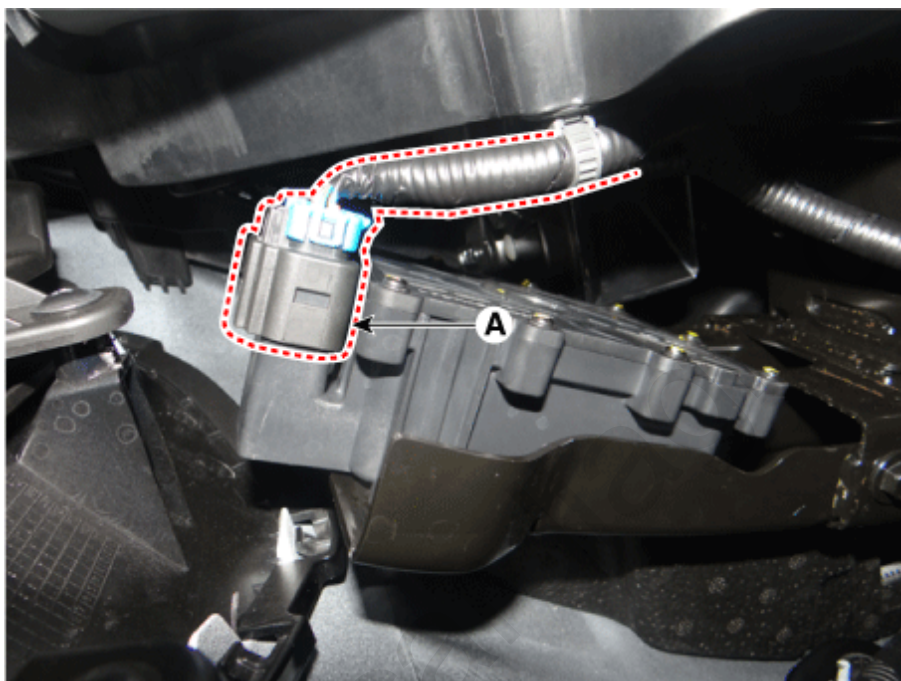

4. Remove the active hood unit by loosening the bolts (A).

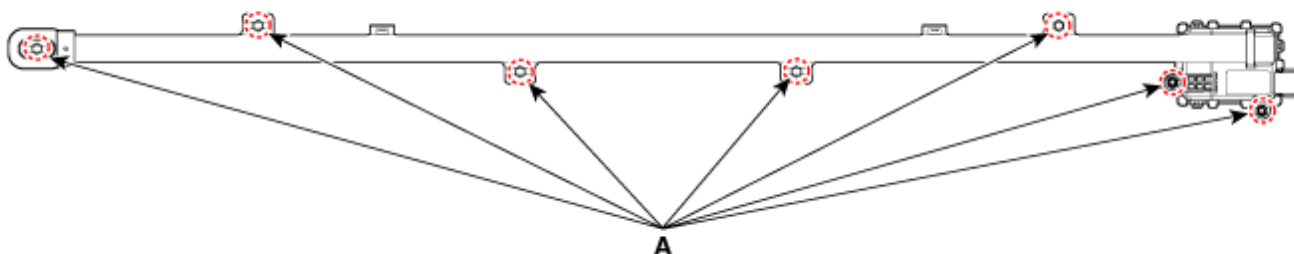

5. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**