


Please rate this document after reviewing at the bottom of this page.

## REPLACEMENT

### Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the C pillar molding (A) by using a remover.

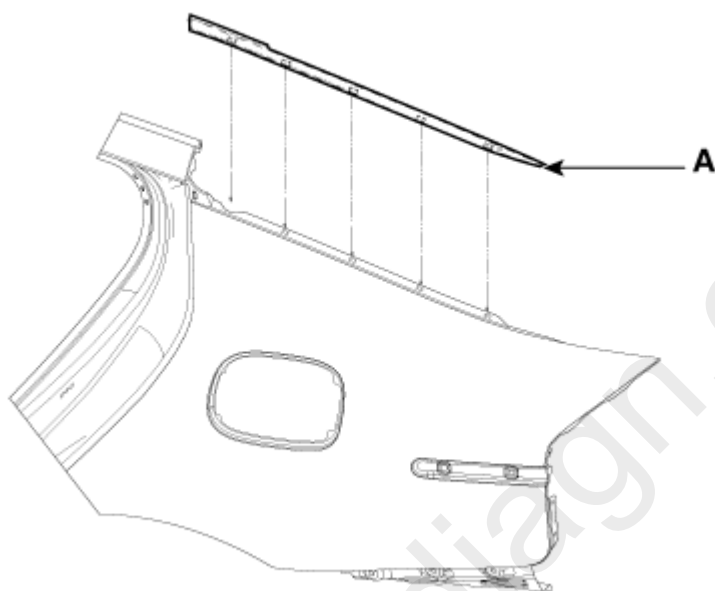

2. Install in the reverse order of removal.

### Information

Replace any damaged clips.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**