


Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

1. Completely open the moving glass using the wide sunroof switch.
2. Remove the wide sunroof deflector (A) after loosening the mounting screws located on the front.

NOTICE

Be careful not to damage the screws.

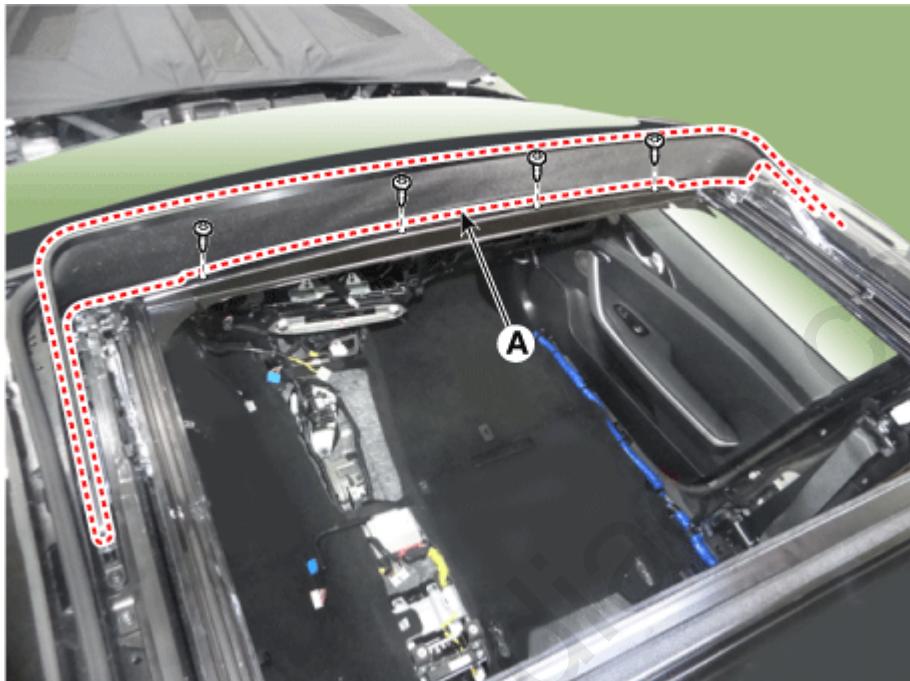

3. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**