

Please rate this document after reviewing at the bottom of this page.

## REPLACEMENT


### CAUTION

Put on gloves to protect your hands.


### Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Tilt the moving glass by using the wide sunroof switch.

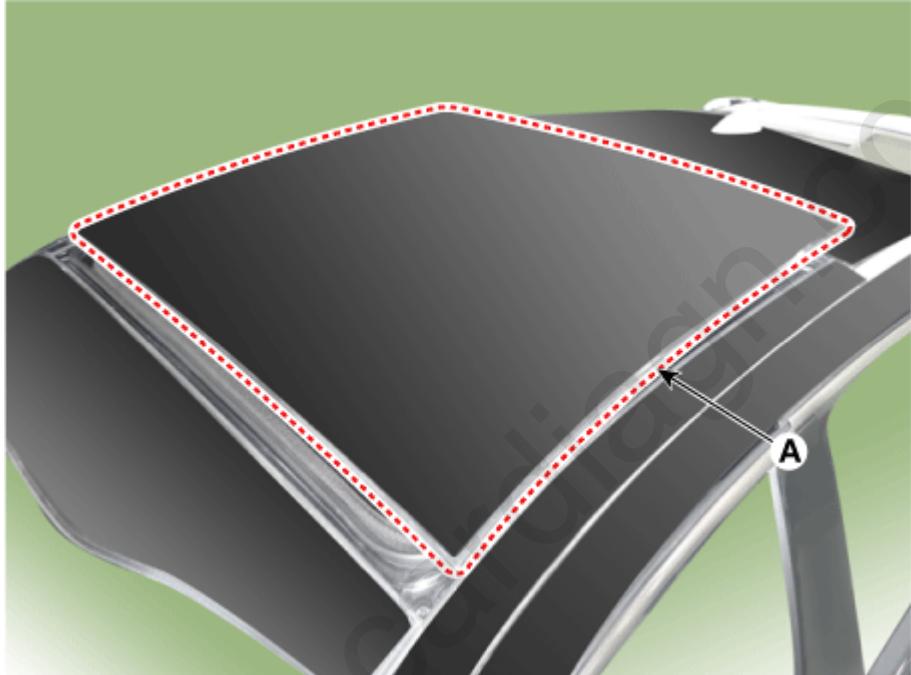

2. Remove the both sides mechanism cover (A).

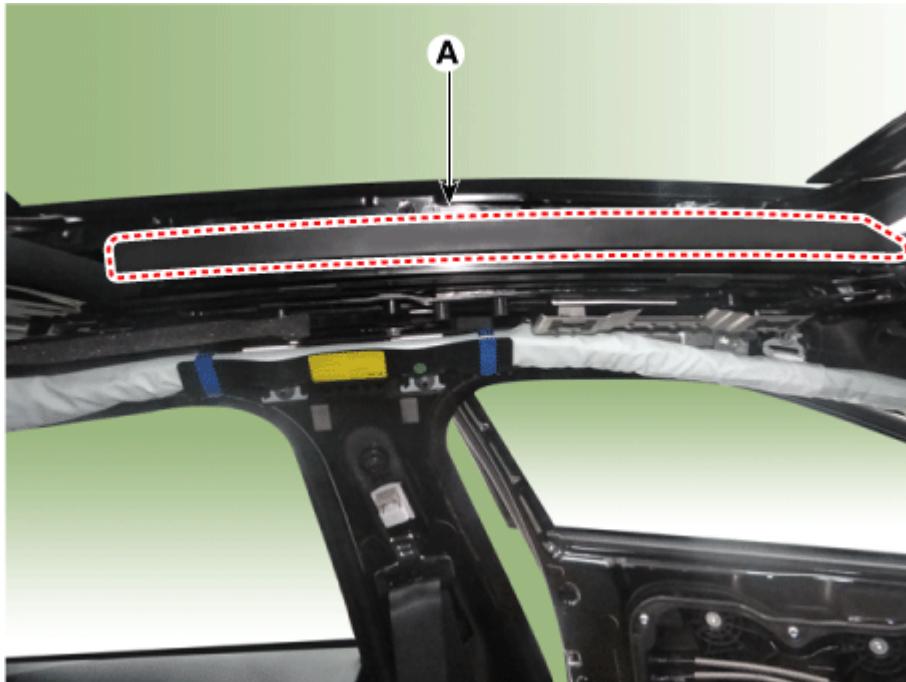


3. Loosen the mounting screws (A) on both sides.





4. Carefully lift up the movable glass (A) and then remove it.

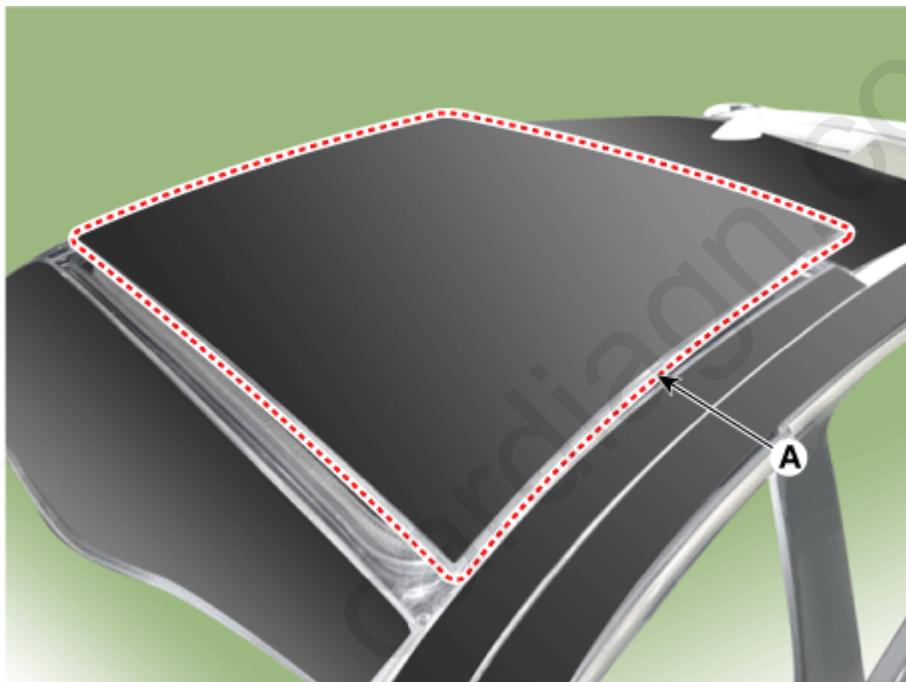


5. Open the roller blind using the wide sunroof switch.

 **Information**

Leave 20cm (0.7874 in) of the roller blind unopened.

6. Remove the roller cover (A) after loosening the mounting screw.

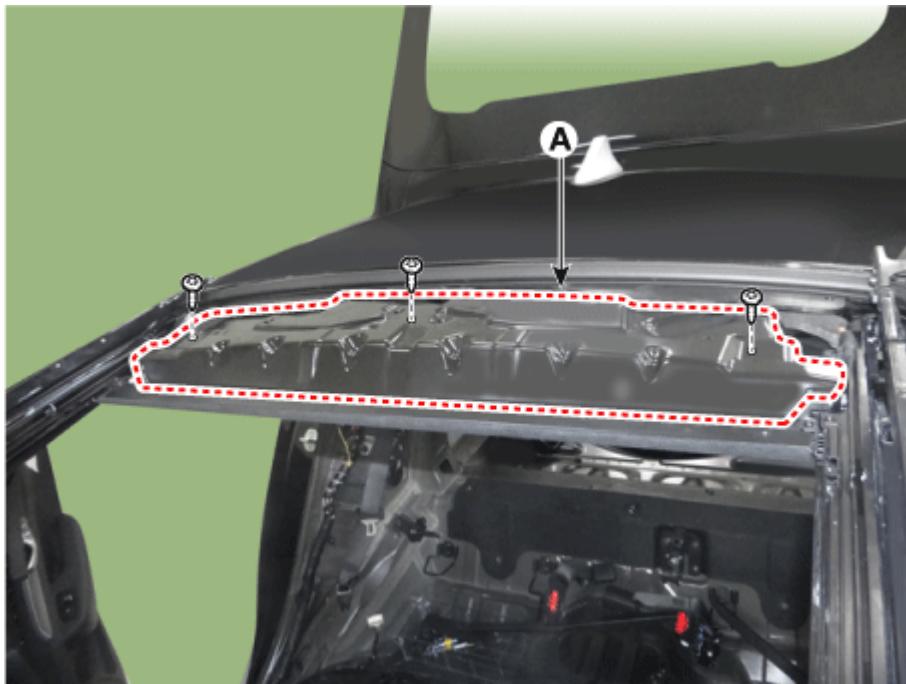


7. Loosen the roller blind lead mounting screw (A).



8. Remove the roller blind lead (A) from the mechanism rail.

**Information**


Remove the roller blind lead (A) from the mechanism rail.

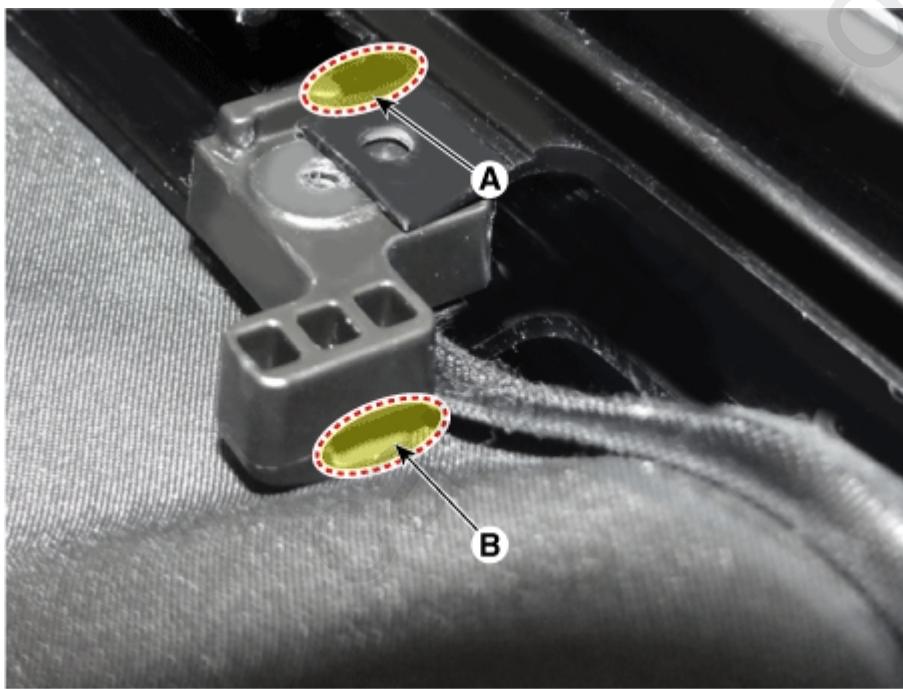


9. Loosen the roller blind shoe clip mounting screw (A).




10. Remove the roller blind shoe clip (A).

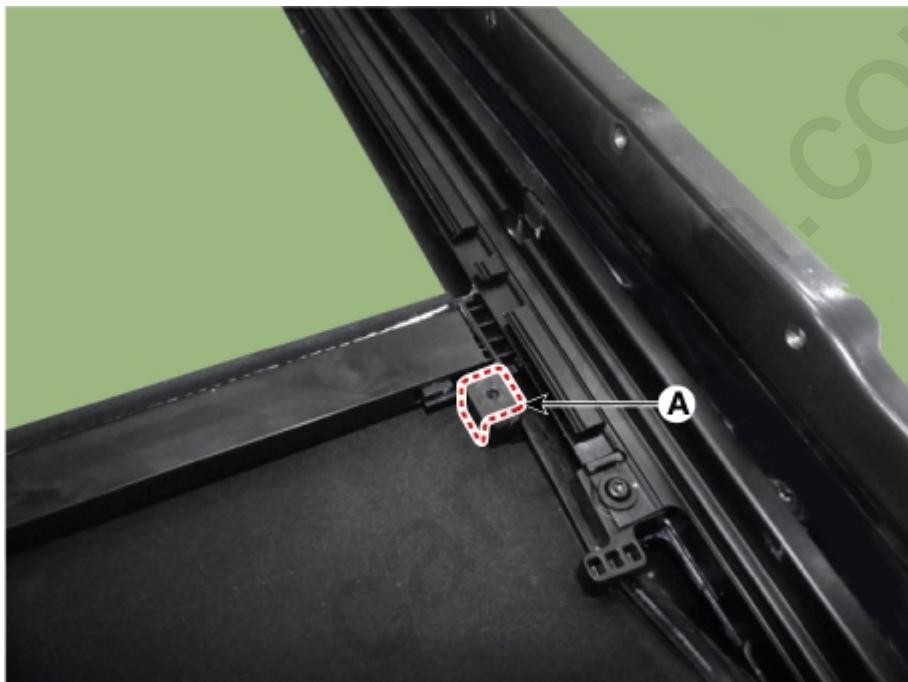


11. Remove roller blind bar (B) by pressing locking pin (A) with using flat-tip screwdriver.

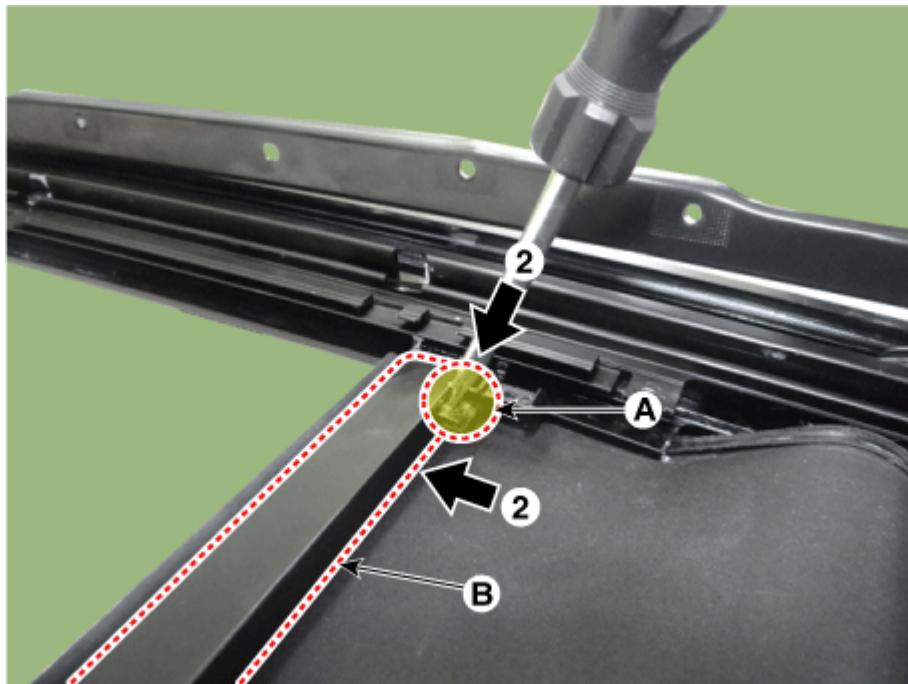

12. Separate right side of the roller blind (A) by pushing washer (B).

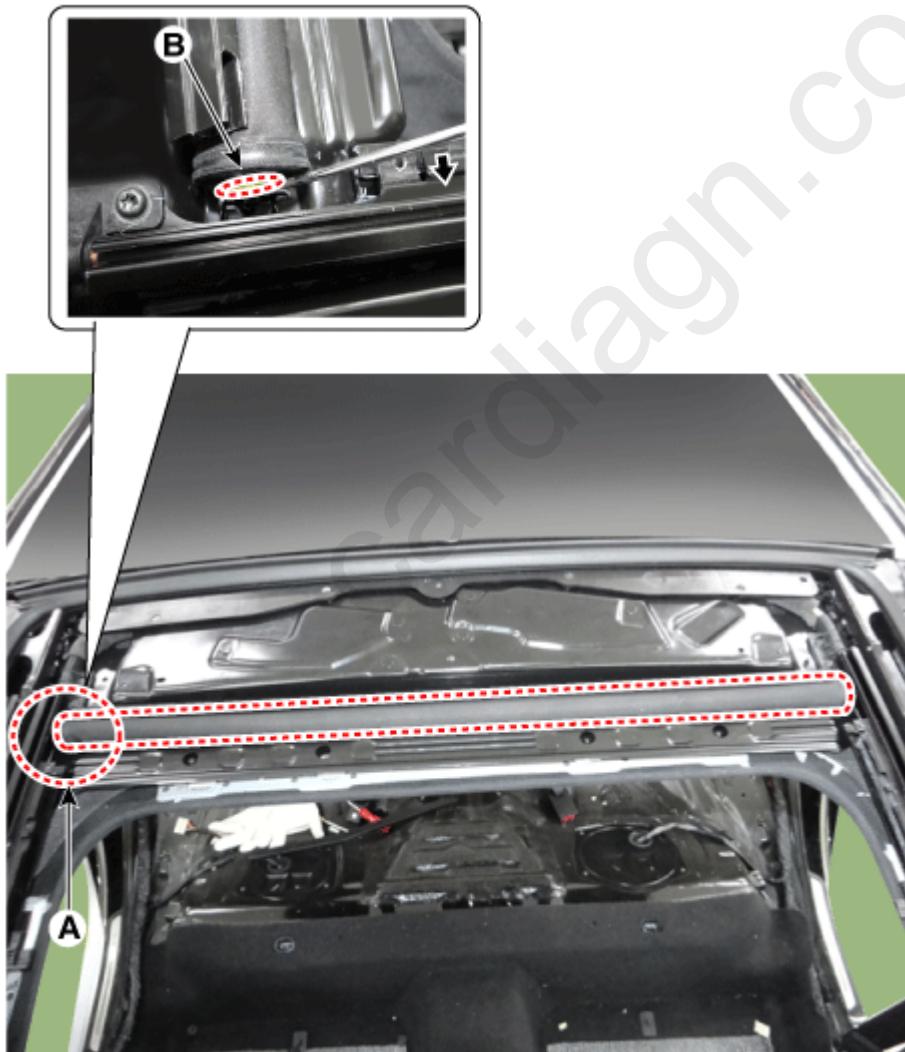

13. Remove the roller blind (A) after separating the roller shaft (B) from the sunroof assembly.

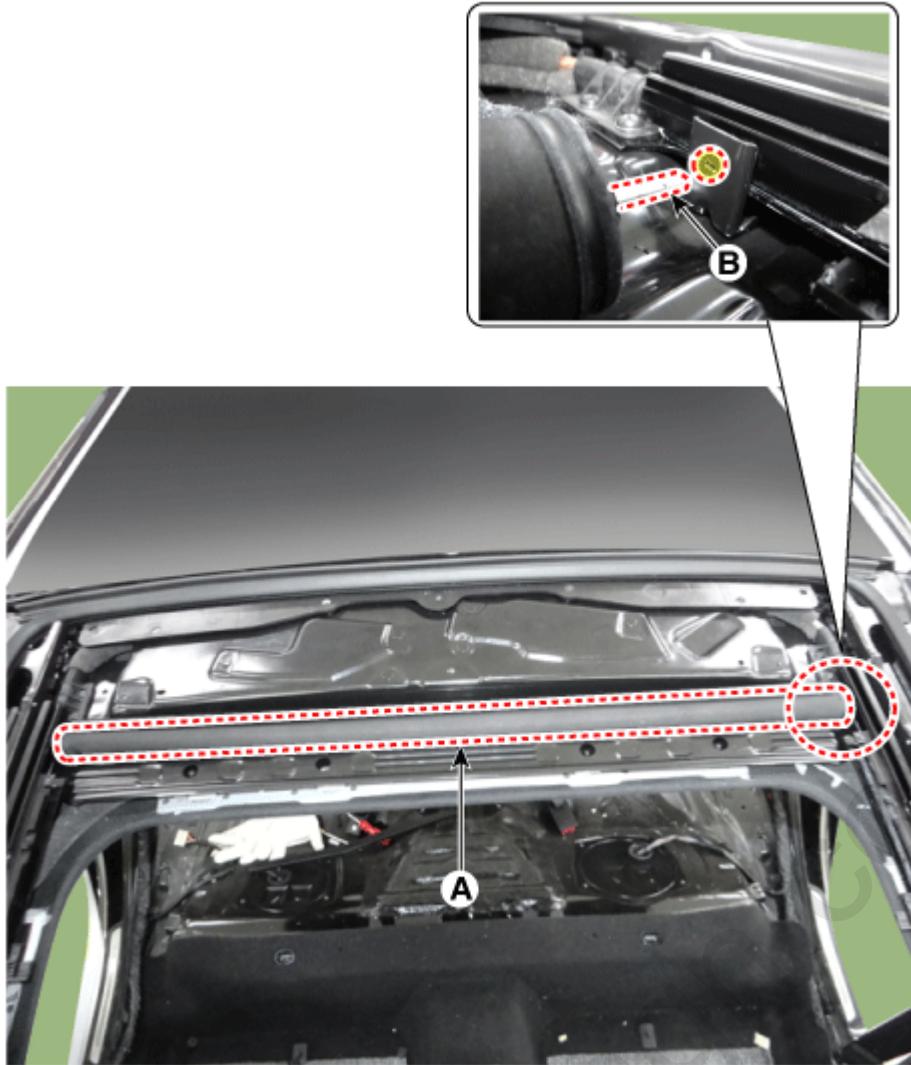
**Information**

Install the roller blind shaft on bracket furrow while installing.

14. Install in the reverse order of removal.

**Information**

- Make sure that the connector is connected properly.
- Make sure that the door locks/unlocks and opens/closes properly.
- Install the roller blind on the mechanism rail furrow (A) firmly.

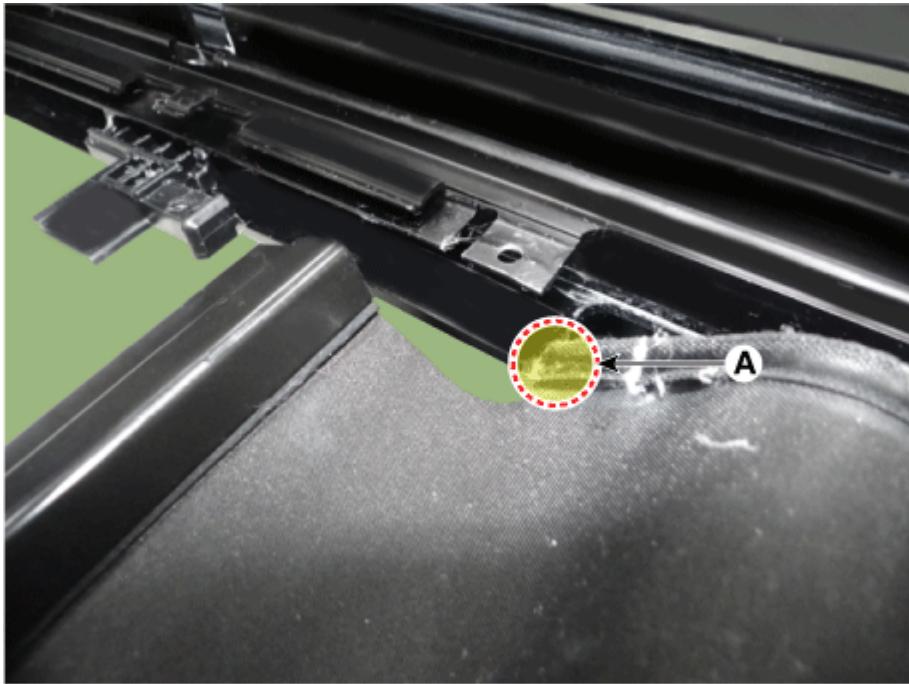

- Resetting the wide sunroof motor.  
**(Refer to Body Electrical System - "Wide Sunroof Motor")**

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.