




Removal

⚠ CAUTION

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- When removing the interior trim pieces, use a plastic panel removal tool to prevent damaging the surface.

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad passenger side panel.
(Refer to Body - "Crash Pad Center Panel")
3. Remove the AVN front monitor (A) after loosening the mounting screws.

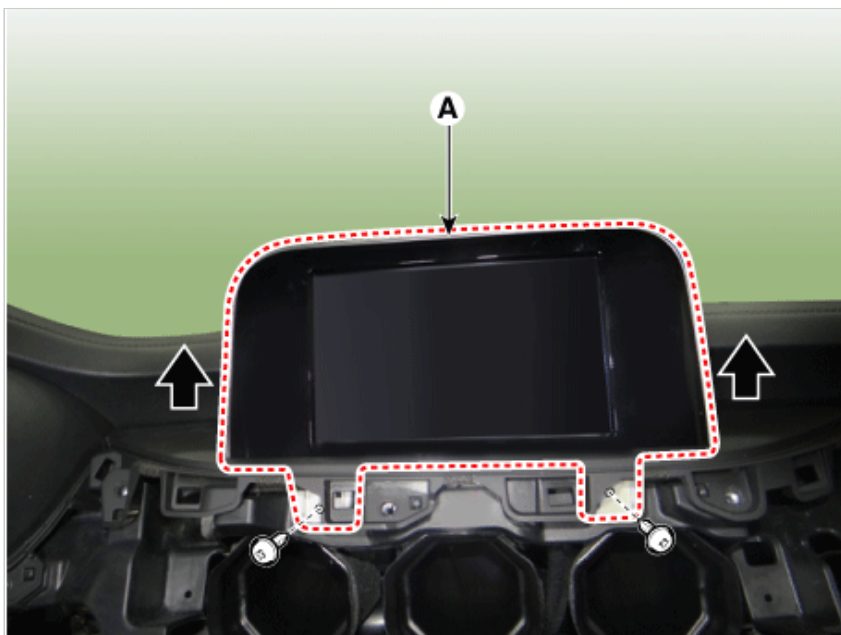

4. Disconnect the AVN front monitor connectors (A).



Installation

1. Connect the AVN front monitor connectors.
2. Install the AVN front monitor.
3. Install the crash pad passenger side panel.

4. Connect the negative (-) battery terminal.