



Please rate this document after reviewing at the bottom of this page.

## CIRCUIT DIAGRAM

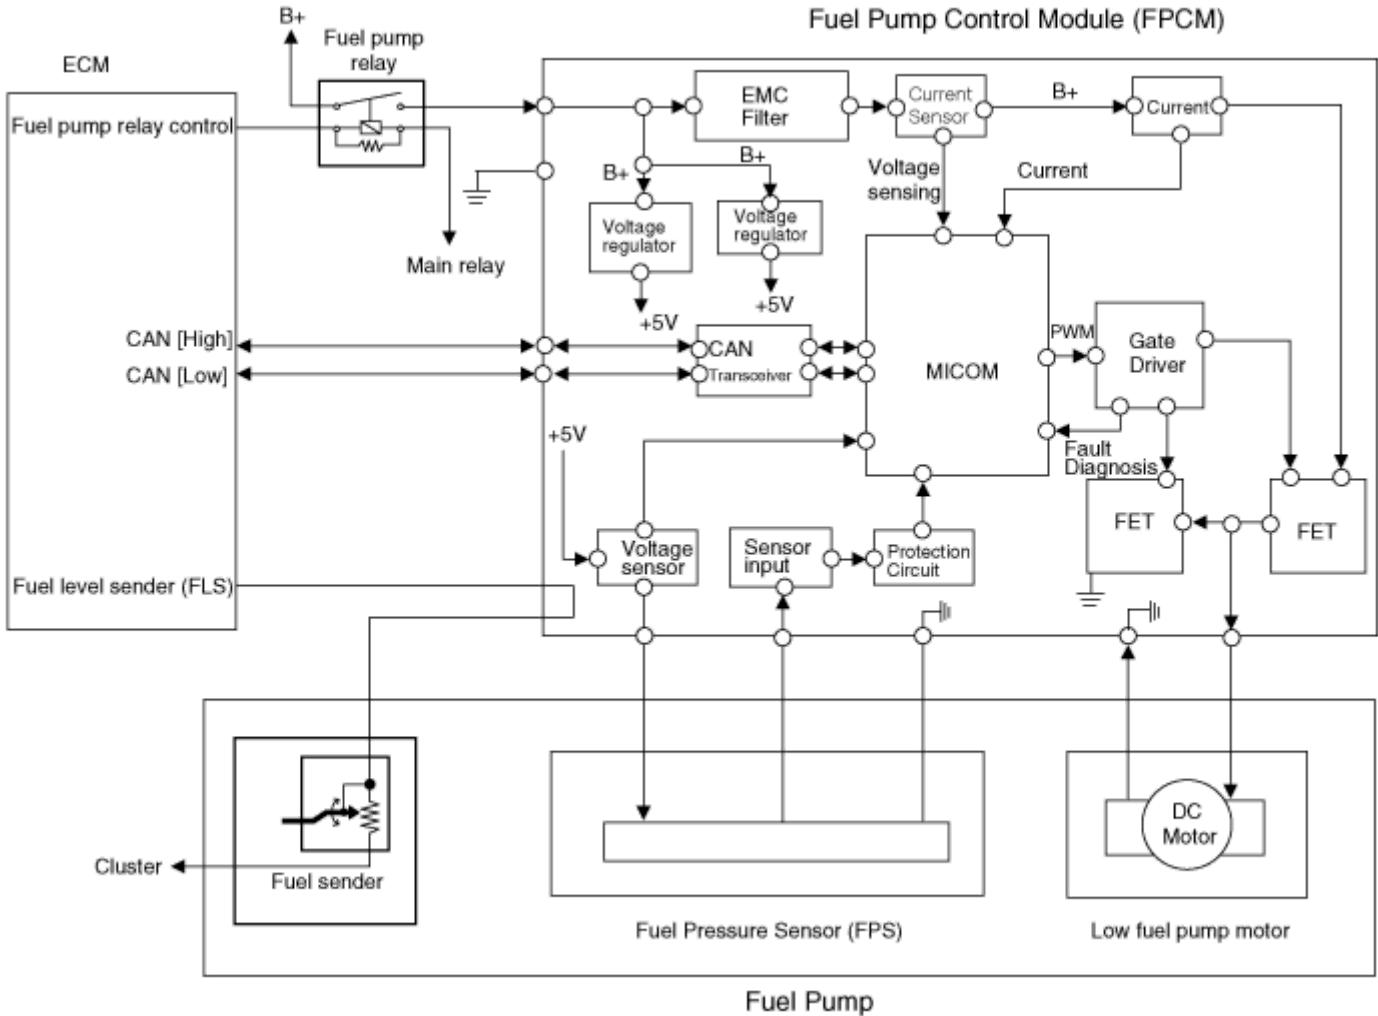

## TERMINAL INFORMATION

### Terminal Illustration

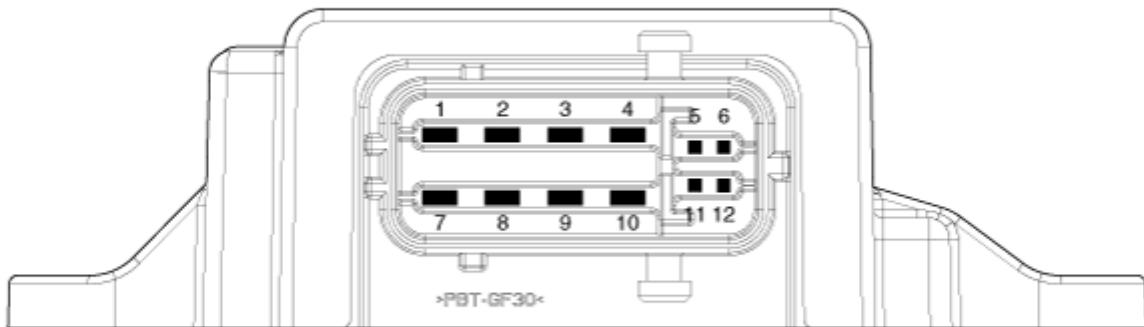

### Terminal Function

| Pin No. | Description                                   | Connected to               |
|---------|---|----------------------------|
| 1       | Battery power (B+)                            | Fuel Pump Relay            |
| 2       | Fuel Pump (U)                                 | Low pressuer fuel pump     |
| 3       | Fuel Pump (V)                                 | Low pressuer fuel pump     |
| 4       | Fuel Pump (W)                                 | Low pressuer fuel pump     |
| 5       | CAN [Low]                                     | Other control module       |
| 6       | CAN [High]                                    | Other control module       |
| 7       | Ground (-)                                    | Chassis Groung             |
| 8       | Fuel Pump shield (Ground)                     | Chassis Groung             |
| 9       | Fuel pressure sensor (FPS) ground (-)         | Fuel pressure sensor (FPS) |
| 10      | Fuel pressure sensor (FPS) signal input       | Fuel pressure sensor (FPS) |
| 11      | -   | -                          |
| 12      | Fuel pressure sensor (FPS) power supply [+5V] | Fuel pressure sensor (FPS) |

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.