




Components

Standard Type ("3.5" inch)


[Front]

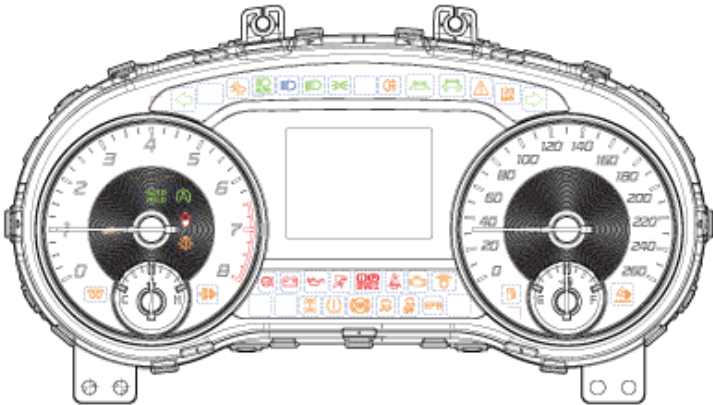

Speedometer (MPH)


[Rear]

Connector A

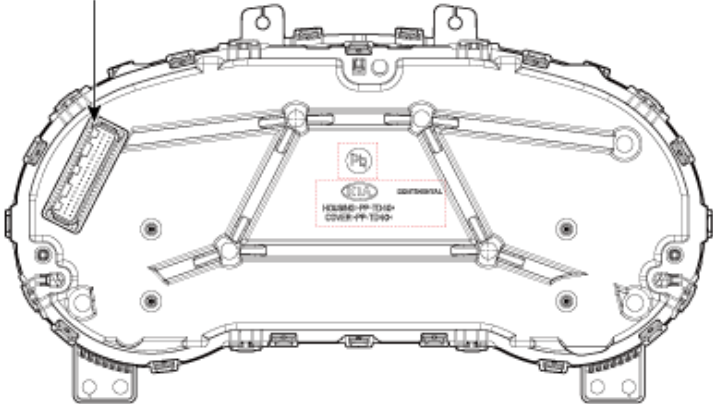

Super Vision Type ("7" inch)



[Front]

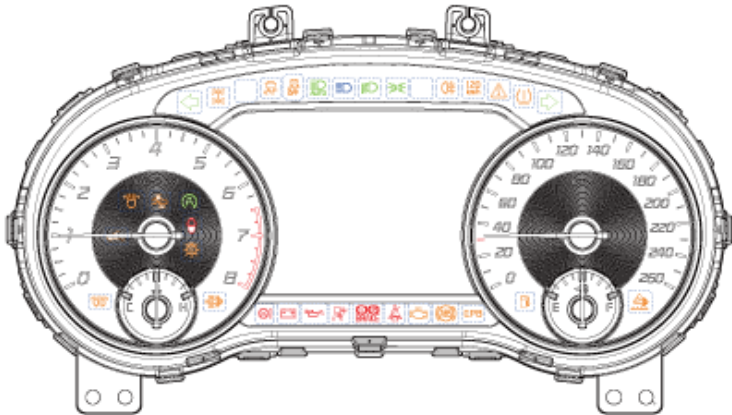

Speedometer (MPH)

[Rear]

Connector A

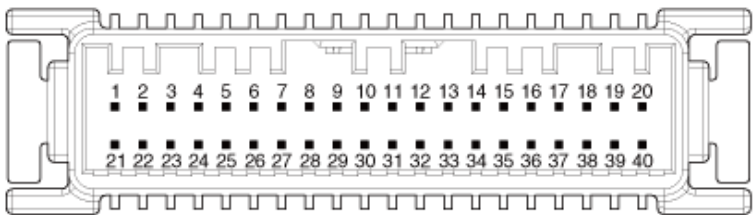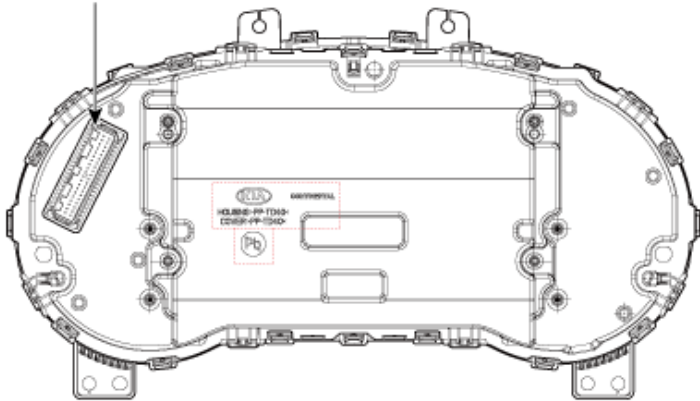

Connector A

Connector Pin Information

No.	Description	No.	Description
1	Ground (Signal3)	21	Trip switch (-)

2	Illumination (-)	22	Trip switch 1 (+)
3	Rheostat switch (Down)_Input	23	Trip switch 2 (+)
4	Rheostat switch (Up)_Input	24	Driver mode switch (CW)_Input
5	Dentent	25	Driver mode switch(CCW)_Input
6	AT ("P" Position)	26	Cluster speaker (+)
7	AT ("R" Position)	27	Cluster speaker (-)
8	AT ("N" Position)	28	-
9	AT ("D" Position)	29	Multimedia-CAN (Low)
10	AT ("S" Position)	30	Multimedia-CAN (High)
11	-	31	Engine run state_Output
12	Vehicle speed_Output	32	Chassis-CAN (High)
13	-	33	Chassis-CAN (Low)
14	Fuel sender (+)_Input	34	-
15	Water separator_Input (Diesel only)	35	-
16	Fuel sender (-)_Input	36	-
17	Water separator_Input (Diesel only)	37	Ground (Signal1)
18	AIR BAG (+)_Input	38	-
19	Oil press switch_Input (Gasoline only)	39	IGN 1
20	-	40	Battery (+)