



Replacement


CAUTION

Put on gloves to protect your hands.


Information

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the crash pad side cover [RH] (A) by using a remover.

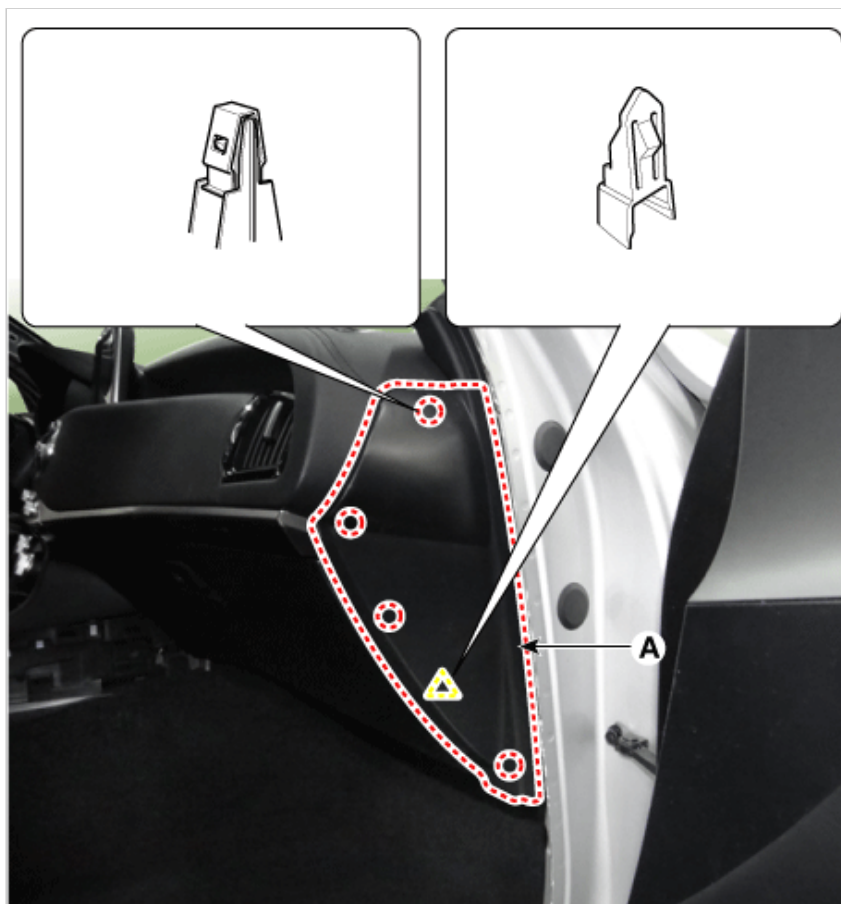

2. Remove the crash pad garnish [RH] (A) after loosening the mounting screws.

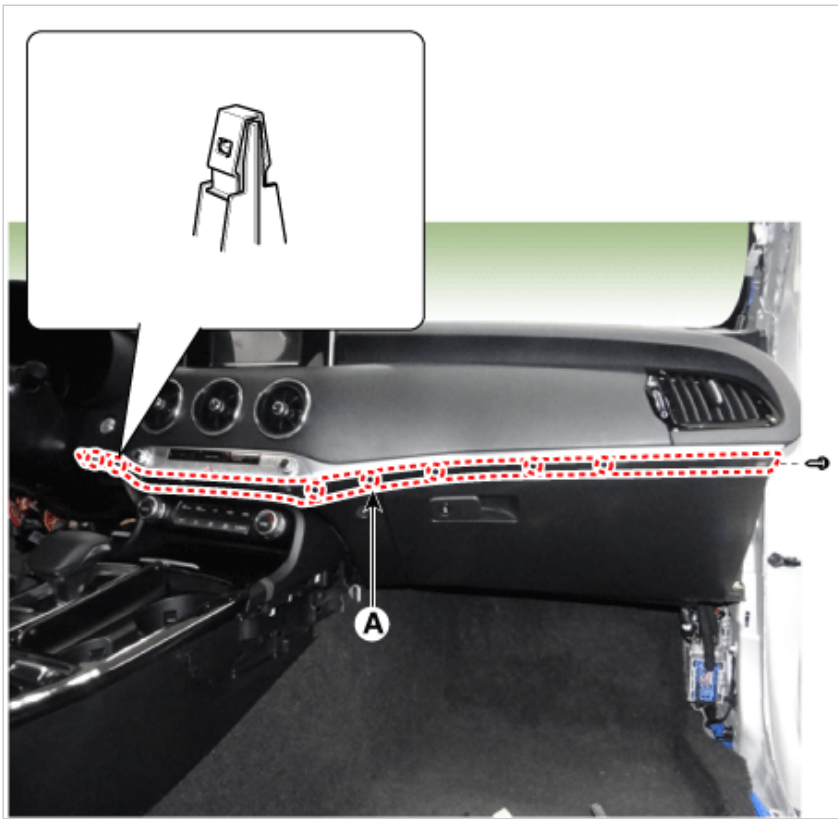


3. Separate the crash pad passenger side panel (A) after loosening the mounting screws.

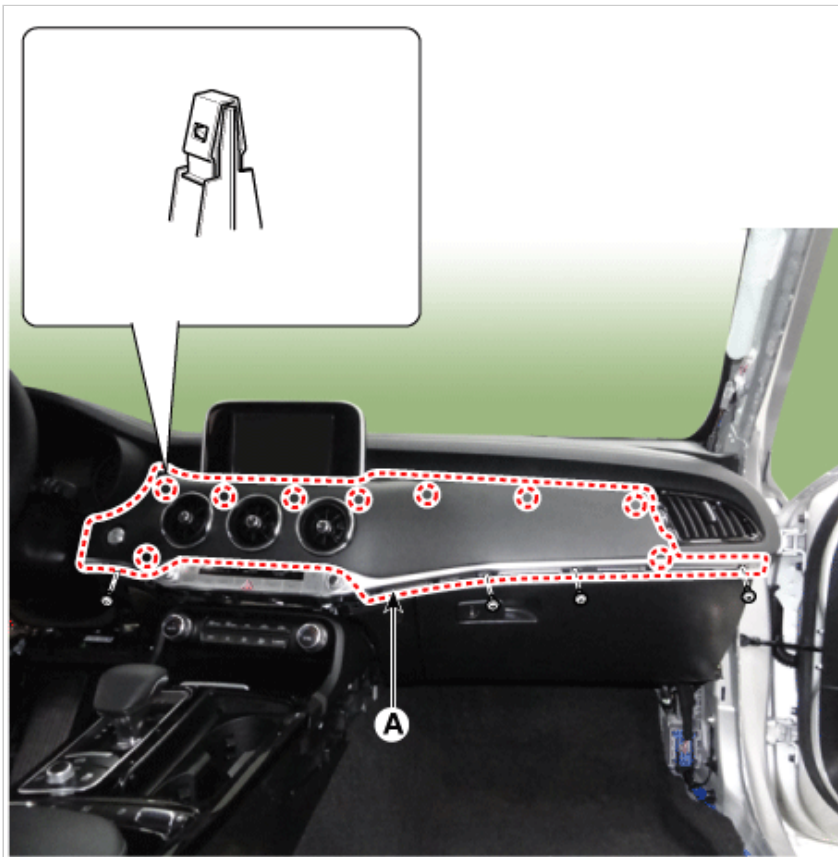

4. Disconnect the start/stop button connector (A) and then remove the crash pad garnish.




5. Separate the monitor assembly (A) after loosening the mounting screws.

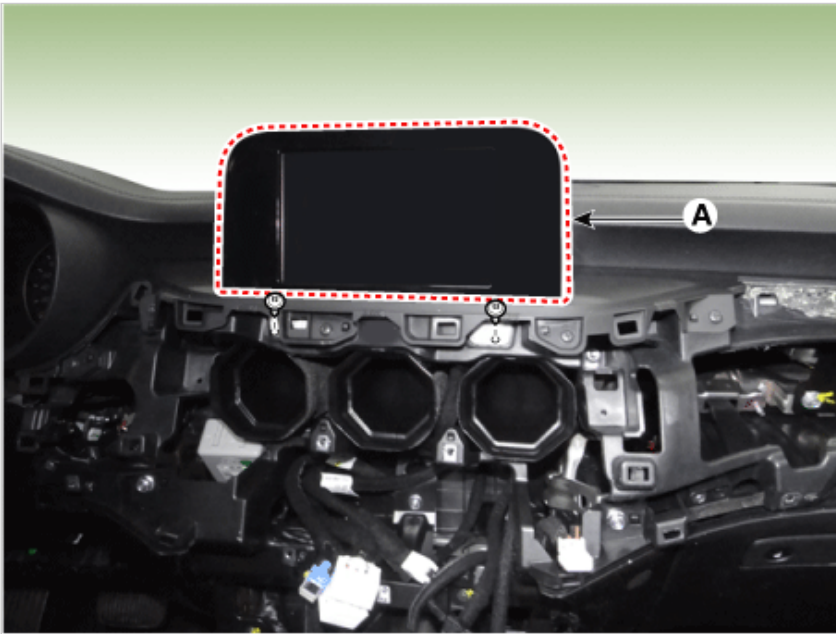

6. Remove the monitor assembly (A) after disconnect the connectors.



7. Remove the monitor fascia panel (A) after loosening the mounting screws.

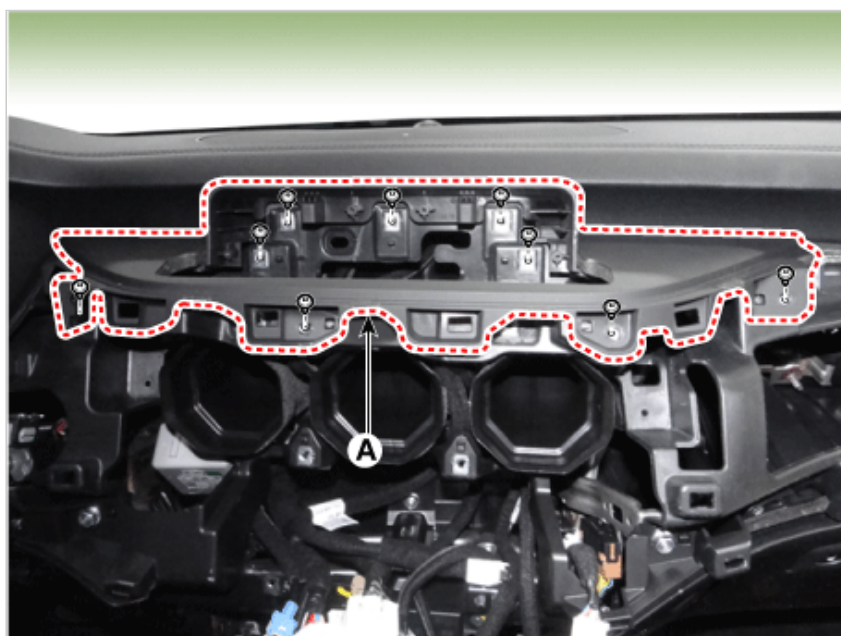

8. Install in the reverse order of removal.

i Information

- Make sure the connector are connected in properly.
- Replace any damaged clips.