

Please rate this document after reviewing at the bottom of this page.

REMOVAL

1. Remove wheel nuts, rear wheel and tire (A) from hub.

Tightening torque :

107.9 - 127.5 N·m (11.0 - 13.0 kgf·m, 79.6 - 94.0 lb·ft)




NOTICE

Be careful not to damage the wheel bolts when removing the wheel and tire (A).

2. Loosen the rear shock absorber bolt & nut.

Tightening torque :

156.9 - 176.5 N·m (16.0 - 18.0 kgf·m, 115.7 - 130.2 lb·ft)

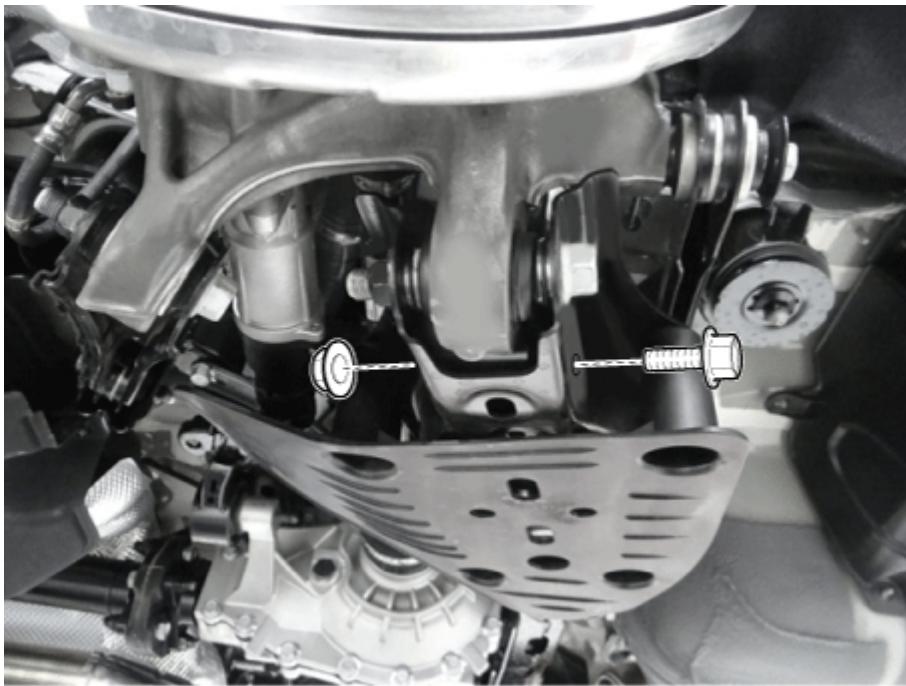**NOTICE**

Up the transmission jack under the lower arm in order to remove the shock absorber in no-load condition.

3. Loosen the rear shock absorber upper bolts and the remove the rear shock absorber.

Tightening torque :

63.7 - 78.4 N·m (6.5 - 8.0 kgf·m, 47.0 - 57.9 lb·ft)



4. Install in the reverse order of removal.

NOTICE

Install at the empty vehicle height when it is assembled.

DISASSEMBLY

1. Using SST (09546-3X100), loosen the shock absorber lock nut (A).

Tightening torque :

21.5 - 31.4 N.m (2.2 - 3.2 kgf.m, 15.9 - 23.1 lb·ft)


English ▾



2. Install in the reverse order of removal.


INSPECTION

1. Check the rubber parts for wear and deterioration.
2. Compress and extend the piston rod (A) and check that there is no abnormal resistance or unusual sound during operation.

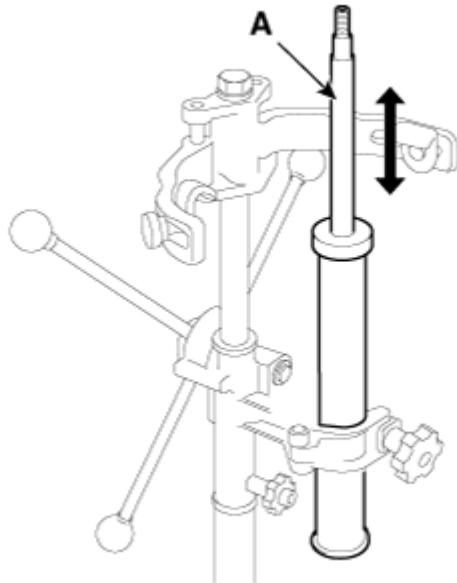

Disposal

1. Fully extend the piston rod.
2. Drill a hole on the (A) section to remove gas from the cylinder.

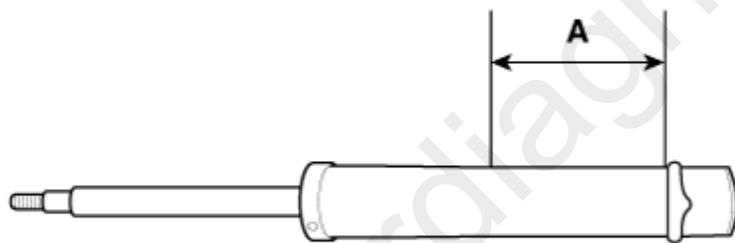

NOTICE

The gas released is harmless but be careful of chips that may stir up from drilling.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.